

NEO PRODUCTS - WORK INSTRUCTION				
BETMAKERS SST				
NUMBER	ISSUE	CHANGE	DATE	ISSUED BY
15301-SKIT007	A	PROTOTYPE INSTALLATION	18-08-23	MIT
DESCRIPTION	B			
READER BRANDER BLANKING FASCIA ASSY	C			
	D			
	E			

ITEMS NEEDED TO PERFORM THIS TASK
HAND TOOLS ONLY





7mm SOCKET DRIVE & HANDLE
HEAT GUN






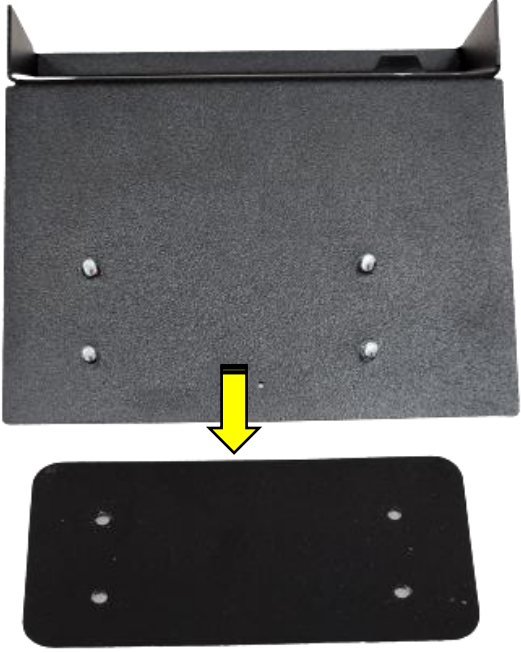
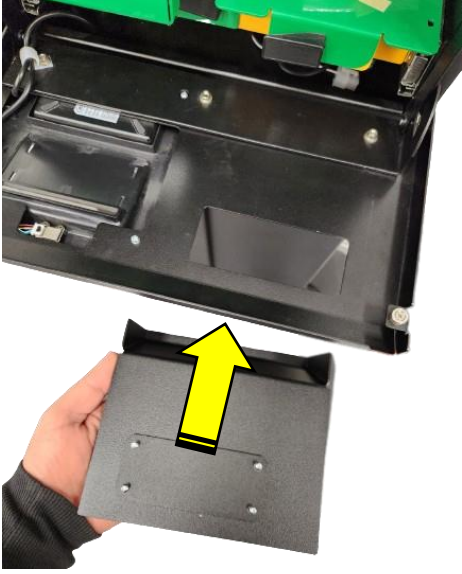

Only for Pedestal and Wall mount Assemblies

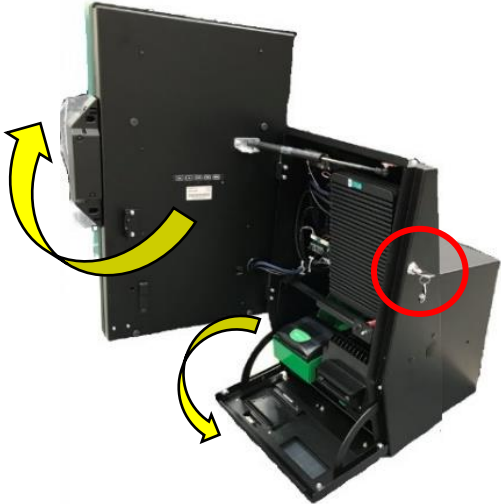


THIS DOCUMENT IS UNCONTROLLED WHEN PRINTED.

The electronic version of this document is the approved and most current. Any printed version is uncontrolled and may not be current.

STEP	IMAGE	DESCRIPTION
1		<p>Unlock and open the LCD Screen Door and Lower Door by unlocking the Lock at the right-hand side of the Kiosk using the key provided.</p>
2		<p>Pull the peripheral tray and remove the Reader brander from the installed location in the SST.</p> <p>Push the peripheral tray back inside and close the lower door.</p>
2.a.		<p>Optional Step:</p> <p>The logo on the lower door can be left installed.</p> <p>If decided to remove the decal. To remove the decal, use a heat gun and heat the decal. Once the decal is warm pull it quickly by exerting a little force.</p> <p>Caution: The decal might be hot to touch, use gloves while handling the decal.</p> <div data-bbox="1177 1816 1337 2027" style="text-align: center;">  </div>

STEP	IMAGE	DESCRIPTION
3		<p>Carefully unwrap the READER BRANDER FASCIA ASSY.</p>
4		<p>Turn the READER BRANDER FASCIA ASSY as shown.</p> <p>Use a 7mm Socket driver to undo the 4x M4 Wiznuts.</p>
5		<p>Remove the 4x M4 Wiznuts.</p>

STEP	IMAGE	DESCRIPTION
6		<p>Separate the READER BRANDER BLANKING CLAMP PLATE from the fascia.</p>
7		<p>Hold the READER BRANDER FASCIA as shown and align it on the outside of the lower door.</p>
8		<p>Hold the READER BRANDER FASCIA as shown in the slot.</p>

STEP	IMAGE	DESCRIPTION
9		<p>Align and place the READER BRANDER BLANKING CLAMP PLATE on top.</p>
10		<p>Use the 4x M4 Wiznuts to secure the plates.</p> <p>Make sure to align the plate with the bend on the lower door (shown in Red) towards the left side of the slot.</p> <p>Fasten the 4x M4 Wiznuts using 7mm Socket driver.</p>
11		<p>Make sure the READER BRANDER FASCIA ASSY is securely fastened.</p>

-----End of Instructions-----