

TSST Kiosk

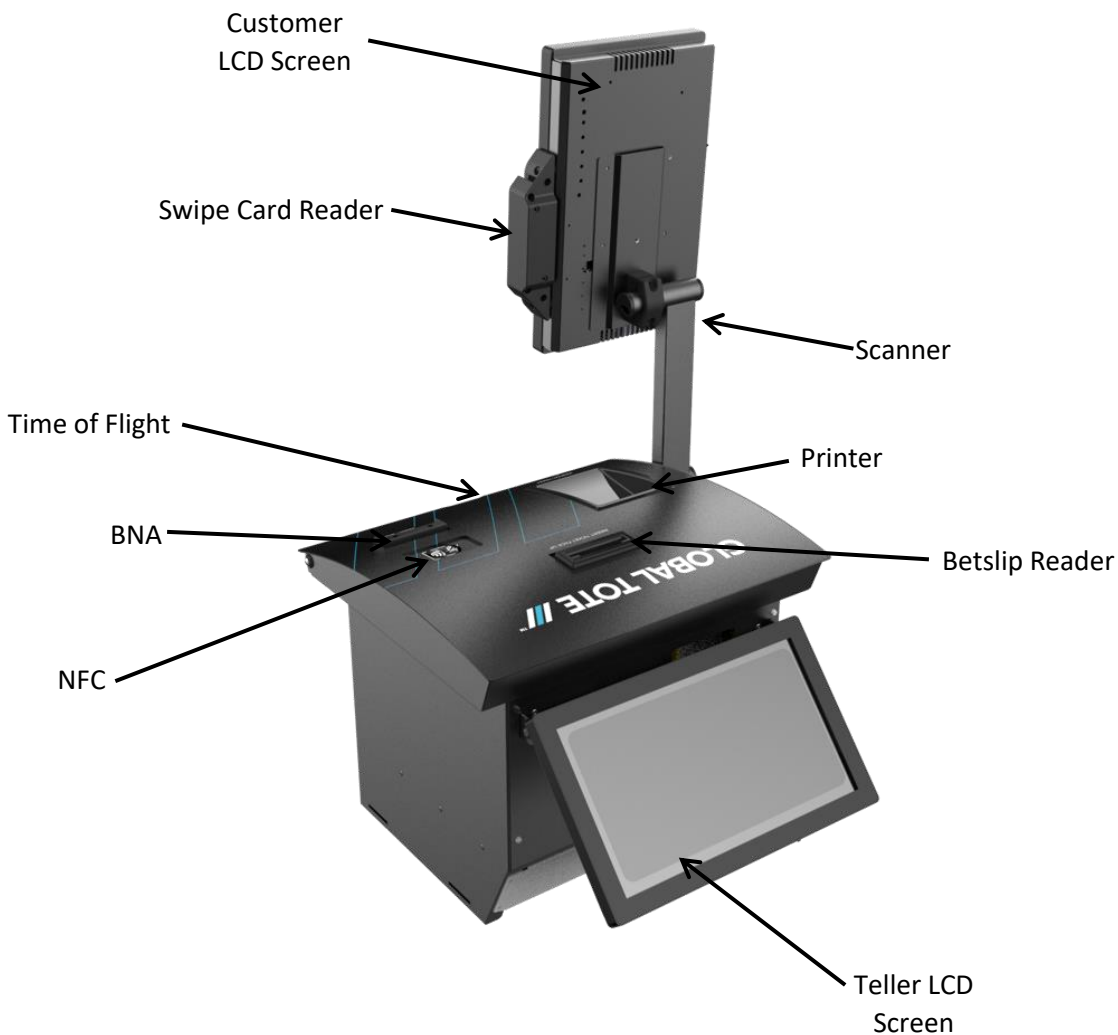
Quick Start Guide

Part# 15201-GA0xx


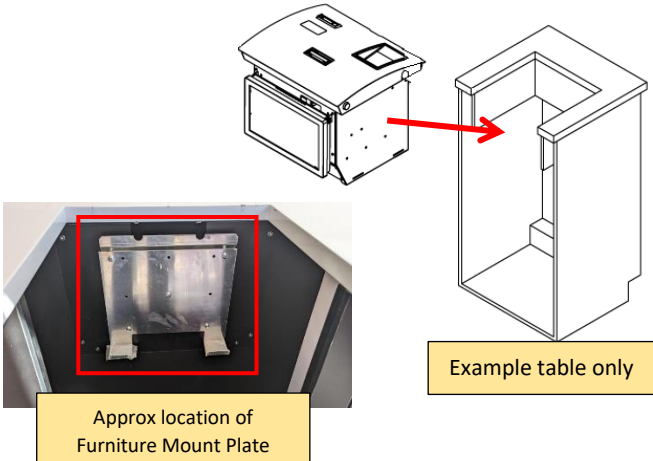
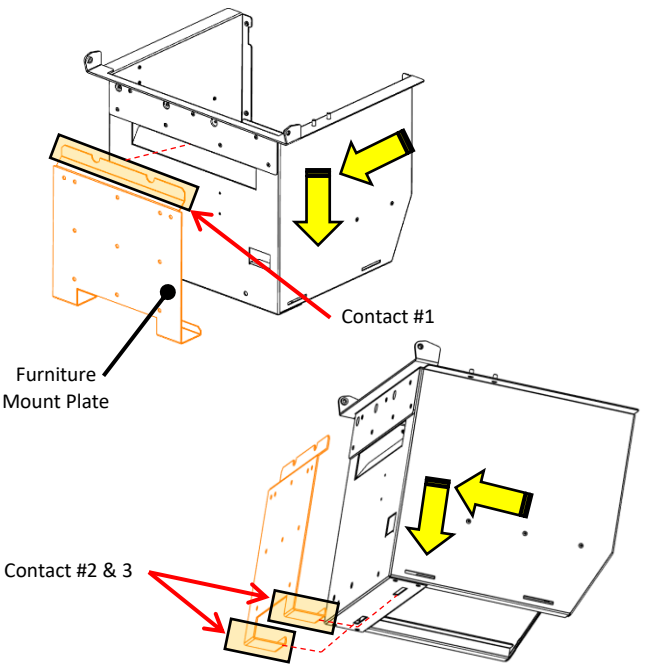


TSST Kiosk


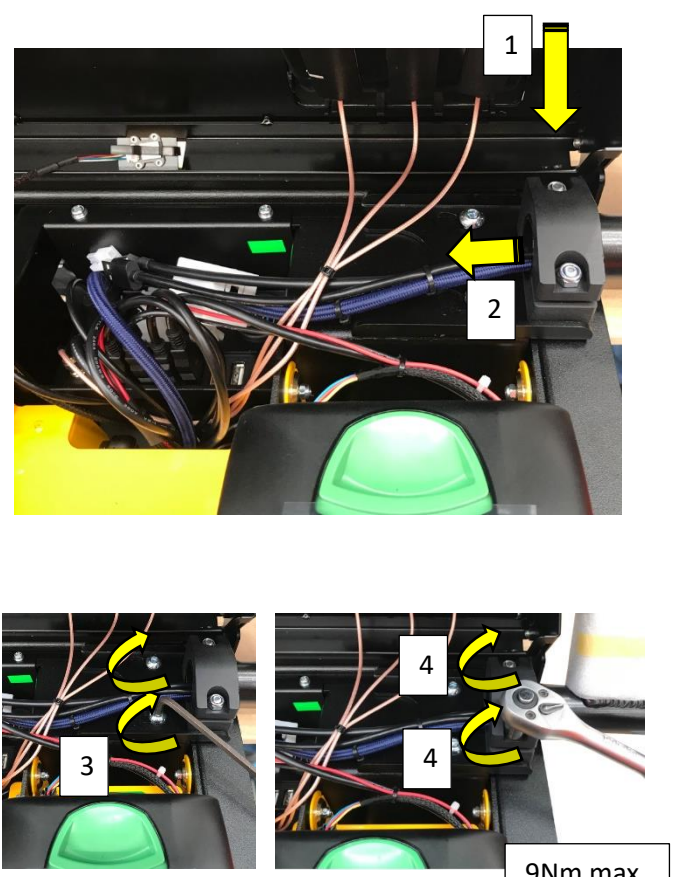
Component Descriptions



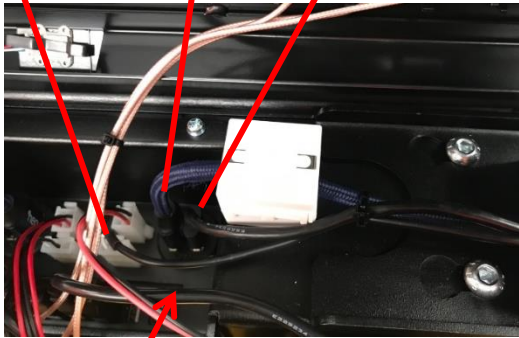
1.0 Unpacking TSST Kiosk

	<p>Remove the strapping from the TSST outer carton. Caution: The strapping is under tension and can flick when cut.</p> <p>Carefully lift the outer carton off the Pallet. Ensure the internal packaging is free from damage.</p> <p>Remove all packaging provided from the Kiosk components.</p> <p>Remove and clear the film from the Teller LCD screen.</p>
 <p>Example table only</p> <p>Approx location of Furniture Mount Plate</p>	<p>As required, remove the old machine from the fixed table – check that the Furniture Mount Plate is not damaged.</p> <p>Carefully remove the TSST Kiosk from the Pallet.</p> <p>Caution – TSST Kiosk requires a two-person lift: Kiosk weight w/o BNA = 62lbs. Kiosk weight w BNA = 72lbs.</p> <p>Refer to the User Service Manual for Safety Information.</p> <p>Install the TSST Kiosk into the existing Furniture Mount Plate fastened to the table – refer image for location.</p> <p>Note: The TSST is only suitable for mounting into a permanent installation – being permanently affixed to the building.</p>
 <p>Contact #1</p> <p>Furniture Mount Plate</p> <p>Contact #2 & 3</p>	<p>Ensure that the TSST Kiosk is located into the Furniture Mount Plate using the 3x points of contact in areas shown.</p> <p>Once the 3x points of contact are engaged, the TSST Kiosk is prevented from removal within the fixed table.</p> <ul style="list-style-type: none"> • Contact #1: Kiosk “Z” retainment. • Contact #2 & #3: Kiosk “X” & “Y” retainment. <p>Note: Kiosk Components are not shown for clarity to describe the 3x points of contact.</p>


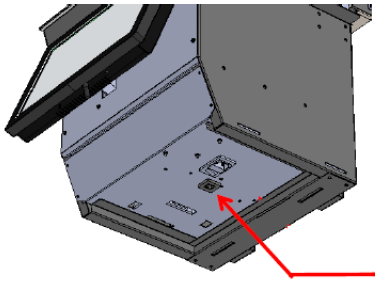
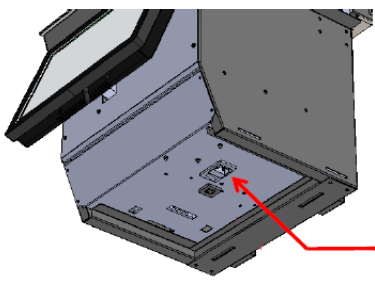
1.0 Unpacking TSST Kiosk (continued)

 <p>2 x M6 Unbrako</p> <p>2 x M6 Nyloc Nut</p>	<p>Carefully remove the Customer Screen from the separate packaging.</p> <p>The Stand Arm is supplied in a folded pack position and will need to be adjusted for installation into the Kiosk.</p> <p>Prior to installation into the TSST Main Chassis, adjust & firmly tighten the:</p> <ul style="list-style-type: none"> - 2x M6 Unbrako Bolts on rear of LCD Screen using a 5mm Allen Key. <p>2x M6 Nyloc Nuts on the LCD Stand Arm using a 10mm Socket Head Drive Socket & Handle.</p>
 <p>1</p> <p>2</p> <p>3</p> <p>4</p> <p>4</p> <p>9Nm max.</p>	<p>Step 1: Open the TSST Top Lid & present the Customer Screen assembly to the TSST Main Chassis.</p> <p>Step 2: Position and slide the LCD Screen Mount to the TSST Main Chassis towards the LH Side, nesting the Mount into the slotted holes.</p> <p>Step 3: Tighten 2x Button Head Screws using a 5mm Allen Key.</p> <p>Readjust the Customer Screen to the preferred position & tighten:</p> <ul style="list-style-type: none"> - 2x M6 Unbrako Bolts on rear of LCD Screen using a 5mm Allen Key. <p>Step 4: 2x M6 Nyloc Nuts on the LCD Stand Arm using a 10mm Socket Head Drive Socket & ¼" Drive Torque Wrench to 9Nm max.</p>


1.0 Unpacking TSST Kiosk (continued)

	<p>Connect 3x LCD Screen Loom plugs into the Hub IO Mount Kit.</p> <p>Ensure plugs “click” into each connection.</p> <p>To ensure that the Ferrite completely clears the Ticket Chute, push the Ferrite along the HDMI Loom towards the Hub IO Mount Kit as shown.</p> <p>Remove green plastic film & white protective film from the Customer Screen assembly.</p>
---	--

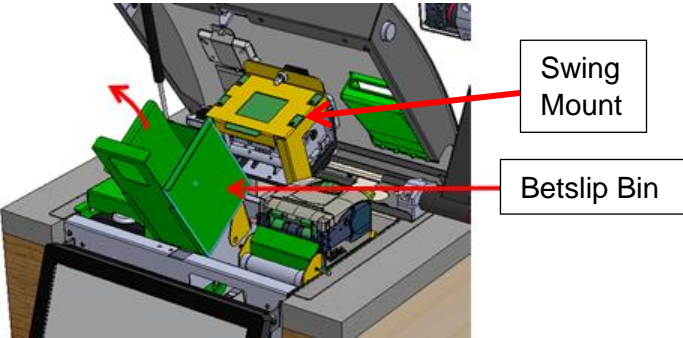
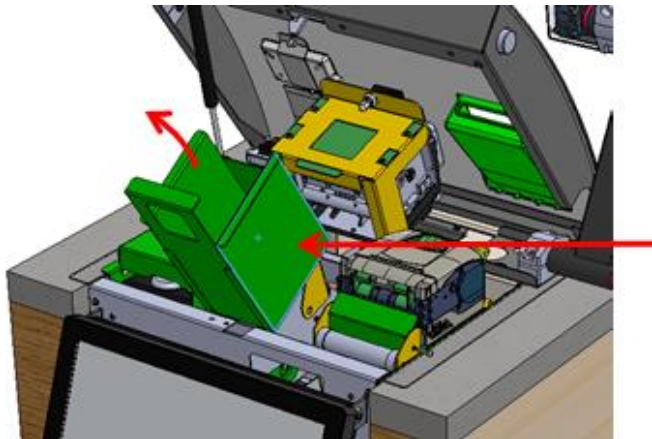
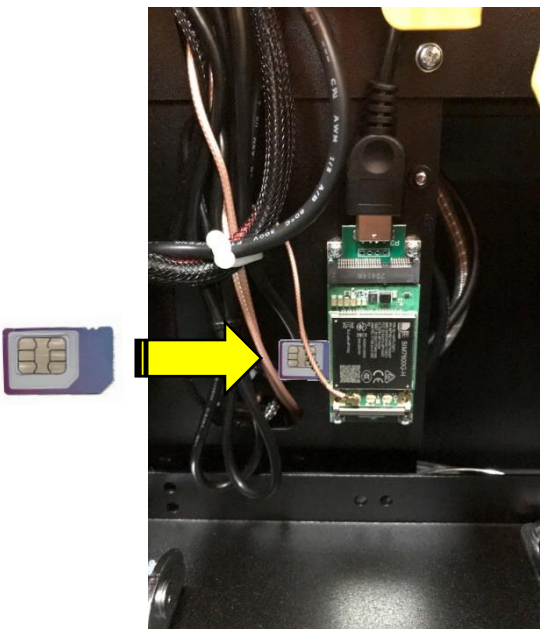
2.0 Power up the Kiosk

	<p>Power, Fuse and Network are accessed from the bottom of the unit.</p> <p>The Kiosk is intended to be used in a location having equipotential bonding (such as a restricted access area) and is connected to power using an earthed IEC cable supplied.</p> <p>Verification of the protective earthing connection of the socket-outlet to be performed by a skilled person.</p>
	<p>Plug in the Network cable into position shown.</p>
	<p>Plug the Power lead into position shown.</p> <p>Switch unit from O → I.</p>

3.0 Loading printer paper

	<p>Unlock and open the Top Door by pushing the Button on the RH side of the Top Door.</p> <p>This provides access to the printer paper.</p>
	<p>To access the printer paper tray, rotate the paper roll bracket in an upwards direction.</p>
	<p>Remove the paper roll & paper roll spindle from the packaging kit.</p> <p>Slide the paper roll onto the paper roll spindle and re-install back onto the printer swing bracket.</p>
	<p>Load the paper roll so that it unrolls from the top.</p> <p>Feed the paper over the spindle into the printer. The printer will automatically take the feed and perform a small cut on the end of the paper.</p>
	<p>Close the Top Door by pushing down waiting for a "click" to indicate locked position.</p>

4.0 Location of Modem and inserting SIM Card

	<p>The Modem is in the Main Frame against the rear wall, behind the Betslip Reader Swing Mount.</p> <p>To remove the Modem, unlock and open the Top Door by pushing the Button on the RH side of the Top Door</p> <p>Swing open the Betslip Reader swing mount.</p>
	<p>Remove the Betslip Bin.</p>
	<p>Insert SIM Card into Modem from the rear in the orientation shown.</p> <p>Check that the Antenna Wire is connected after the SIM Card installation.</p>