

# NEO PRODUCTS - WORK INSTRUCTION

## BETMAKERS TSST SERVICE


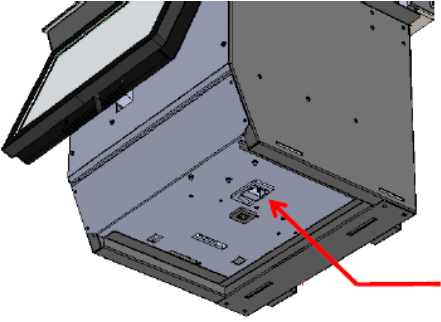

NUMBER	ISSUE	CHANGE	DATE	ISSUED BY
15201-SERV003	A	Initial Production Release	29-09-22	LD
<b>DESCRIPTION</b>	B	Filename updated (ECN 6477)	13-10-23	LD
TSST SPARE TOP LID WITH DECAL W BNA	C			
	D			
	E			



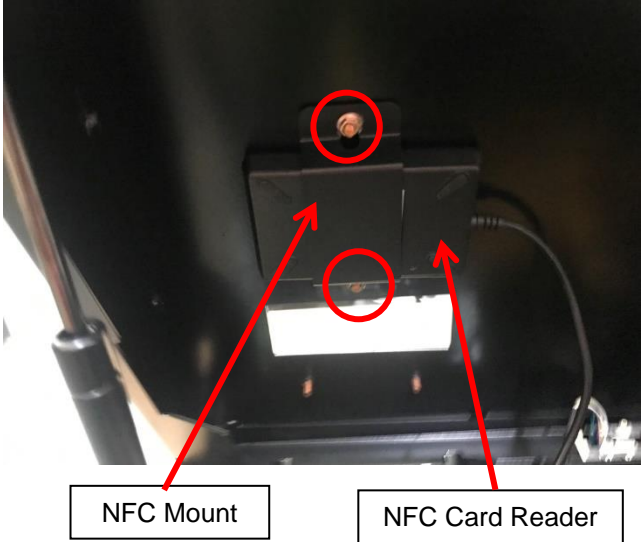
### ITEMS NEEDED TO PERFORM THIS TASK

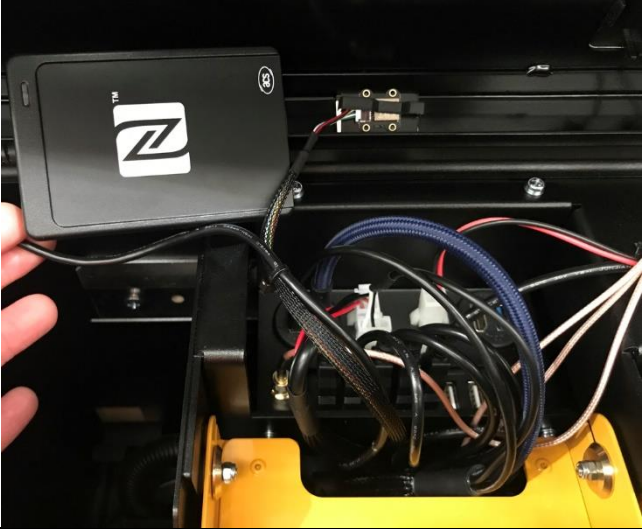
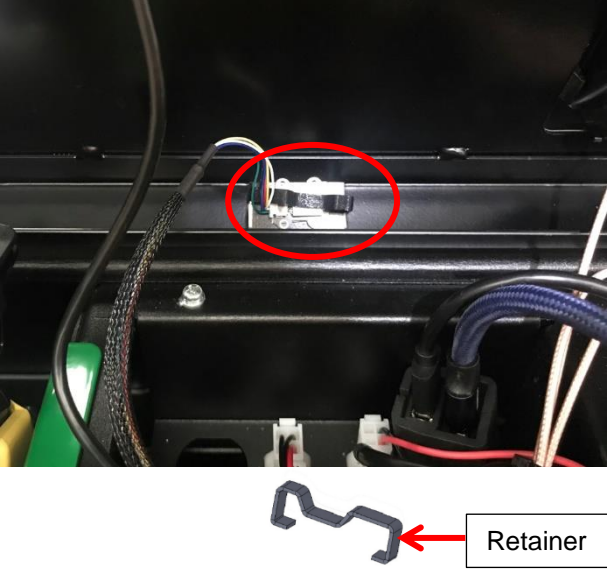

4mm ALLEN KEY
STANLEY KNIFE
7mm SOCKET HEAD DRIVE & HANDLE
FLAT HEADED SCREWDRIVER - SMALL

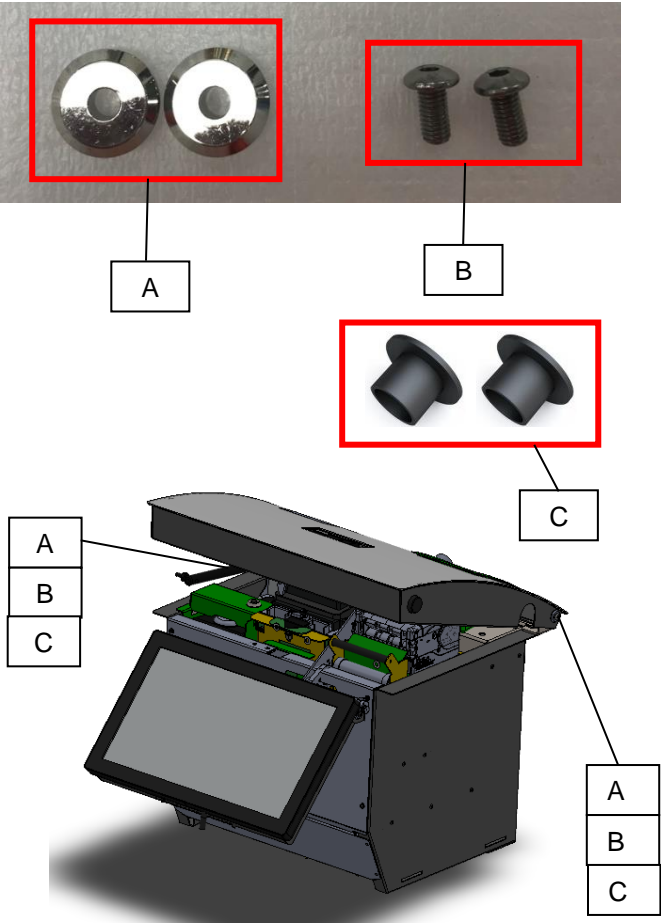



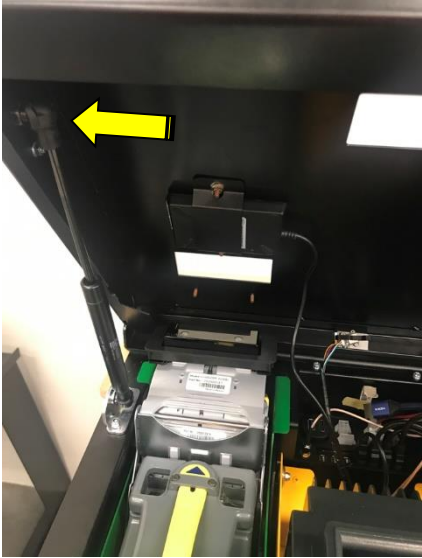
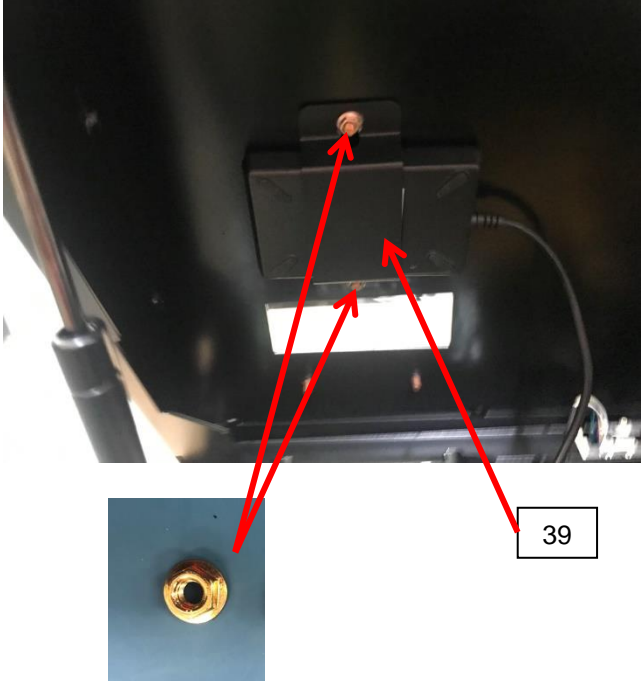
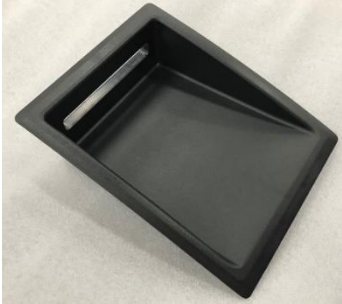
ITEM #	STOCK CODE	DESCRIPTION	QTY
1	15201-SKIT003	LID ASY	1.00
2	15201-IM010	NFC CLIP-IN PLATE	1.00
3	15201-DC001AA	TSST TOP COVER DECAL - GLOBAL TOTE W BNA	1.00
4	15201-MP021AA	NYLON SHOULDER WASHER M6	2.00
5	15201-MP012AB	BUSH SWING MOUNT	2.00
6	SCM06-16BHSS	SCREW M6x16 BUTTON HEAD SS	2.00
7			
8			
9			
10			
11			
12			
13			
14			
15			

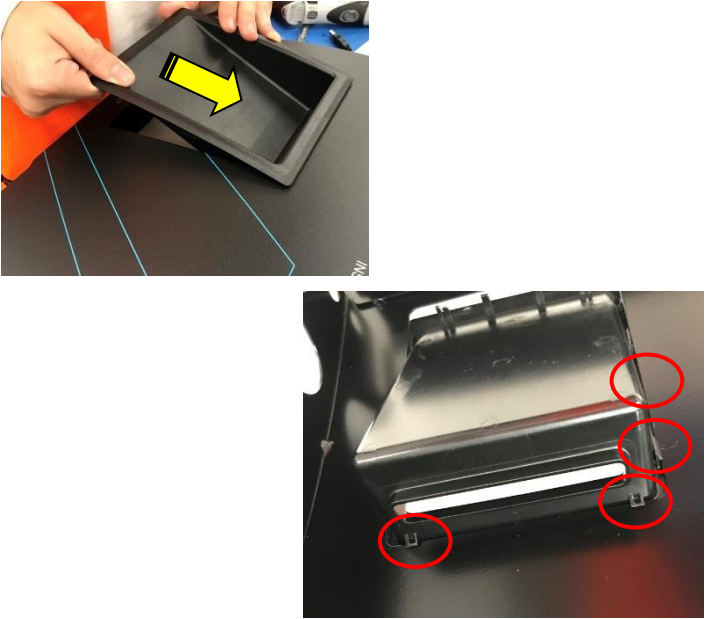


STEP	IMAGE	DESCRIPTION
1		<p>Following Work Instruction is for the removal → replace of the TSST SPARE TOP LID WITH DECAL W BNA.</p>
2		<p>Prior to starting the TSST SPARE TOP LID WITH DECAL W BNA removal, switch the plug from I → O on the underside of the Kiosk.</p>
3		<p>Unlock and open the Top Door by pushing the Button on the RH side of the Top Door.</p>


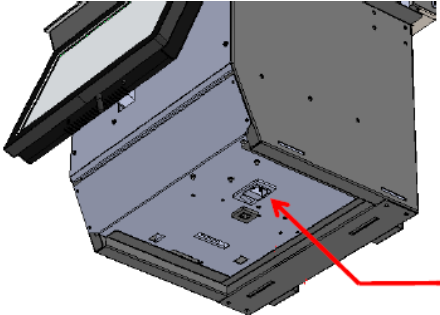
STEP	IMAGE	DESCRIPTION
4		<p>With care, remove the 3x Antenna's from the underside of the Ticket Chute and relocate to a clear position inside the Kiosk.</p>
5		<p>With care, remove &amp; retain the Ticket Chute by "popping" in an outwards direction from the underside of the Top Lid.</p> <p><b>Caution:</b> Care is required to ensure that the tabs on the underside of the Ticket Chute are not broken or damaged during removal.</p>
6		<p>Remove &amp; retain the 2x M4 Wizlock Nuts &amp; NFC Mount holding the NFC Contactless Smart Card Reader to the Top Lid, using a 7mm Socket Head &amp; Handle.</p>

STEP	IMAGE	DESCRIPTION
7		<p>Store the NFC Contactless Smart Card Reader in a safe position within the Kiosk.</p>
8		<p>Remove the Retainer holding the Laser Ranging Sensor in position on the Top Lid, to access the connector for removal.</p> <p>Unclip the Loom connector from the Laser Ranging Sensor.</p> <p>Retain the Laser Ranging Sensor &amp; Retainer for fitment in later Step. The Loom will stay within the Kiosk.</p>
9		<p>The Gas Strut connected to the Top Lid is to be released from the Mount Bracket Ball as shown.</p> <p>Gently insert the Flat Headed Screwdriver – Small into the Gas Strut Head to “lift” the retaining spring. Pull the Gas Strut to the RHS direction to release from the Mount Bracket ball.</p> <p><b>Note:</b> The Top Lid will not stay in an open position after disconnecting the Gas Strut. Manually close the Top Lid.</p>

STEP	IMAGE	DESCRIPTION
10	 <p>The image for Step 10 consists of three parts. At the top, there are two photographs. The left photograph shows two silver bush swing mounts, labeled 'A', enclosed in a red rectangular box. The right photograph shows two black screws, labeled 'B', also enclosed in a red rectangular box. Below these is a third photograph showing two black nylon shoulder washers, labeled 'C', enclosed in a red rectangular box. At the bottom of the image is a 3D cutaway diagram of the kiosk's top lid assembly. Three callout boxes labeled 'A', 'B', and 'C' point to the locations of the bush swing mounts, screws, and nylon shoulder washers respectively on the underside of the lid.</p>	<p>To completely remove the Top Lid from the Kiosk, remove &amp; retain the following Fasteners using a 4mm Allen Key:</p> <ul style="list-style-type: none"> <li>- 2x Bush Swing Mount (A).</li> <li>- 2x M6 x 18mm Screw (B).</li> <li>- 2x Nylon Shoulder Washer M6 (C) – <b>image for reference only.</b></li> </ul>
11	 <p>The image for Step 11 shows a black plastic top lid for the kiosk. It has a rectangular cutout on the left side. The text 'GLOBAL TOTE II' is printed in white at the top. There are two white rectangular labels on the lid, one near the top center and one near the bottom center. A small circular logo is visible on the right side of the lid.</p>	<p>Remove TSST SPARE TOP LID WITH DECAL W BNA from packaging.</p> <p>Discard packaging.</p> <p>To re-install the replacement TSST SPARE TOP LID WITH DECAL W BNA onto the Kiosk, follow Step 10 in reverse.</p>

STEP	IMAGE	DESCRIPTION
12		<p>Clip the Gas Strut into Top Door Gas Strut Mount on inner LH side of Door.</p> <p>Check opening &amp; closing function after installation.</p>
13		<p>Install the NFC Contactless Smart Card Reader into position and retain with the NFC Mount.</p> <p>Reinstall 2x M4 Wizlock Nuts and fasten using 7mm Socket Head &amp; Handle.</p>
14		<p>Select Ticket Chute removed from earlier Step.</p>

STEP	IMAGE	DESCRIPTION
15		<p>From the Teller Side of the Kiosk, pre-assemble the Ticket Chute back into the Top Lid &amp; nest into tabs prior to pushing into final position.</p> <p><b>Caution:</b> Care required to ensure that all tabs on the underside of the Ticket Chute are not broken or damaged during installation.</p>
16		<p><b>Check:</b> Ensure that the Ticket Chute has been fully clipped into the Top Lid and no gaps are visible from the Decal side.</p>
17		<p>Move to the Operator side of the Kiosk, re-instal 3x Antenna's onto underside of the Ticket Chute.</p> <p><b>Re-fitment requirement:</b>                  #1: PC Tray → short lead = LH side                  #2: PC Tray → long lead = Middle                  #3: USB Hub → long lead = RH Side</p>

STEP	IMAGE	DESCRIPTION
18		<p>Close the Top Door by pushing down waiting for a “click” to indicate locked position.</p>
19		<p>Switch unit from O → I on the underside of the Kiosk.</p>