

# NEO PRODUCTS - WORK INSTRUCTION

## BETMAKERS TSST



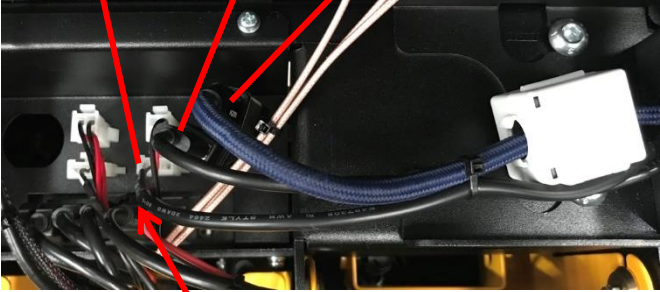
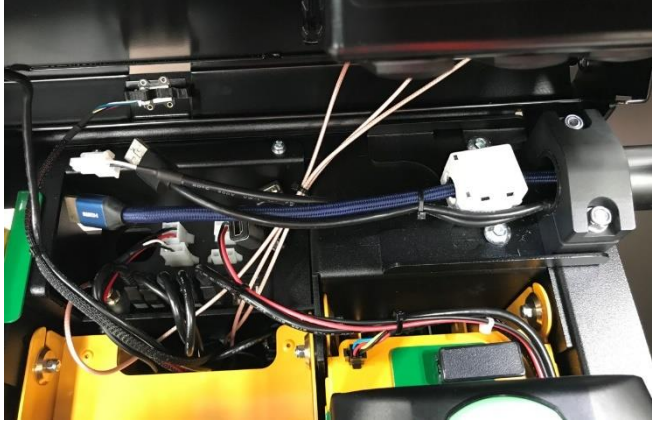
NUMBER	ISSUE	CHANGE	DATE	ISSUED BY
15201-SERV009	A	Initial Production Release	29-09-22	LD
DESCRIPTION	B	Filename updated (ECN 6477)	13-10-23	LD
TSST SPARE D-LINK 7 PORT HUB	C			
	D			
	E			




### ITEMS NEEDED TO PERFORM THIS TASK





#1 PHILLIPS HEAD SCREWDRIVER
#2 PHILLIPS HEAD SCREWDRIVER
8mm OPEN END SPANNER (2x)
1 ¼" OPEN END SPANNER
SIDE CUTTER PLIERS
MULTI METER

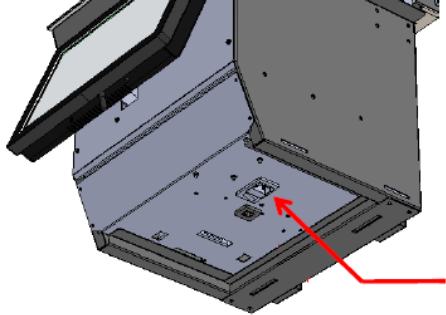

ITEM #	STOCK CODE	DESCRIPTION	QTY
1	OEHUB-000004	USB D-LINK HUB 7 PORT (USB-BM)	1.00
2	EHCAB-USB019	USB 0.5M AM-BM BLACK	1.00
3			
4			
5			
6			
7			
8			
9			

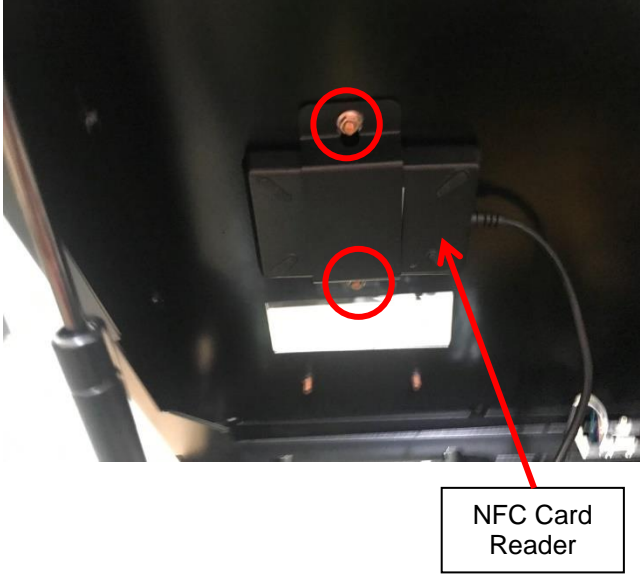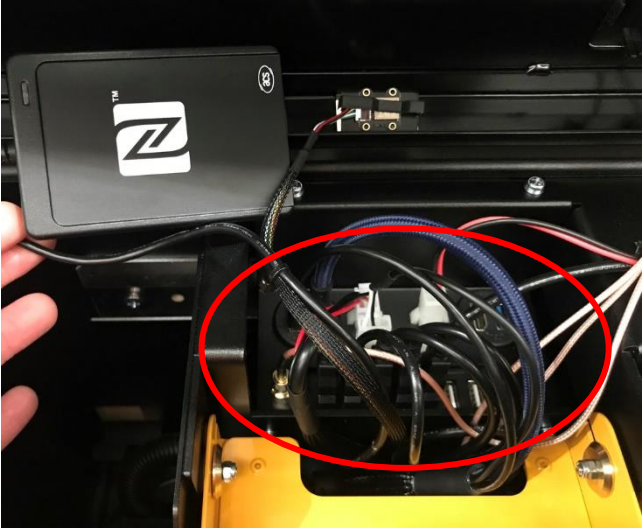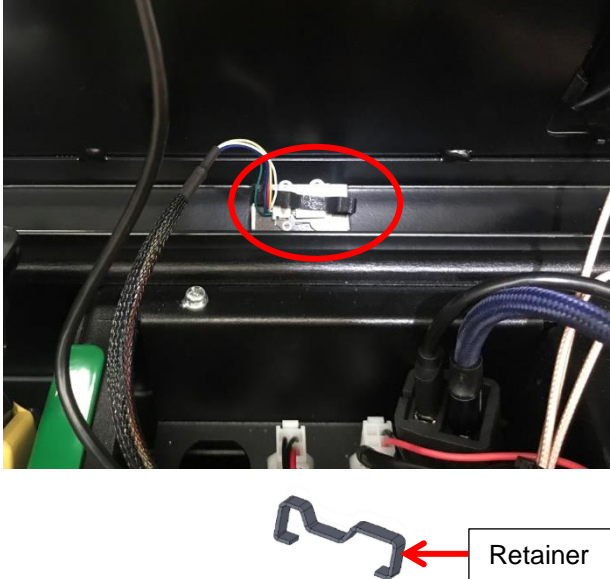
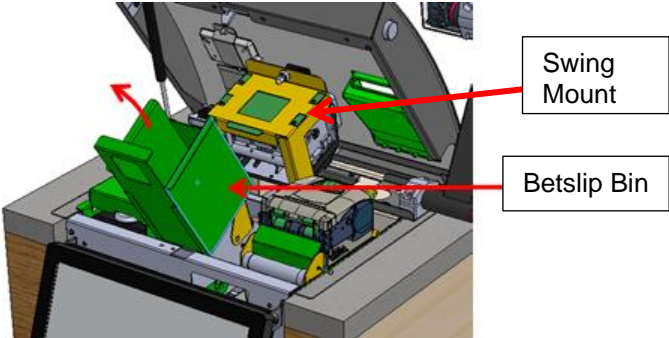
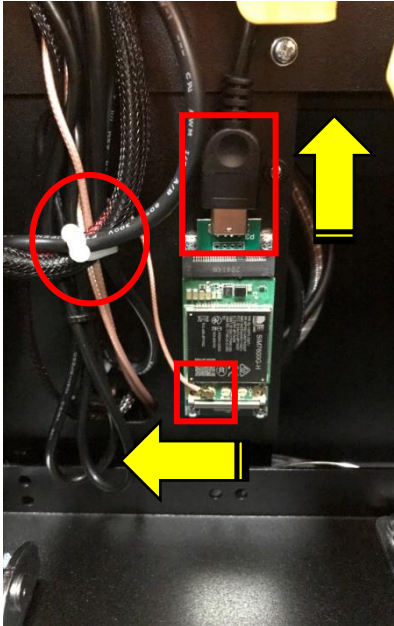
STEP	IMAGE	DESCRIPTION
1		<p>Prior to starting the TSST SPARE D-LINK 7 PORT HUB removal, switch the plug from I → O on the underside of the Kiosk.</p>
2		<p>Unlock and open the Top Door by pushing the Button on the RH side of the Top Door.</p>
3	 <p>Monitor Power</p> <p>USB</p> <p>HDMI</p> <p>Hub IO Mount Kit</p>	<p>Disconnect the 3x Customer LCD Screen Loom plugs from the Hub IO Mount Kit:</p> <ul style="list-style-type: none"> <li>- HDMI</li> <li>- USB</li> <li>- Monitor Power</li> </ul>
4		<p>Customer LCD Screen Loom plugs to be stored for refitment to HUB IO MNT.</p>



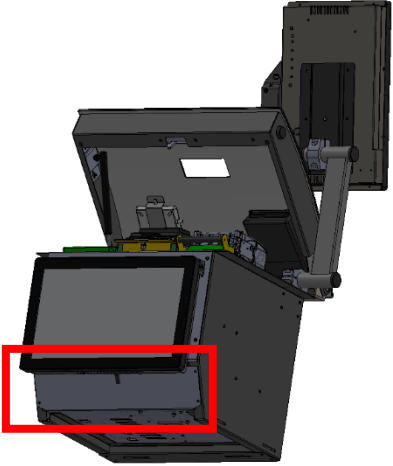
STEP	IMAGE	DESCRIPTION
5		<p>Remove &amp; retain the 2x M4 Wizlock Nuts holding the NFC Contactless Smart Card Reader and NFC Mount to the Top Lid using a 7mm Socket Head &amp; Handle.</p>
6		<p>Remove all Chassis Loom USB plugs &amp; Molex Connectors from the HUB IO MNT KIT ports as shown.</p>
7		<p>Remove &amp; retain the Retainer holding the Laser Ranging Sensor into position on the Top Lid to access the connector for removal.</p> <p>Unclip the Loom connector from the Laser Ranging Sensor.</p> <p>Reattach the Retainer onto the Laser Ranging Sensor.</p>


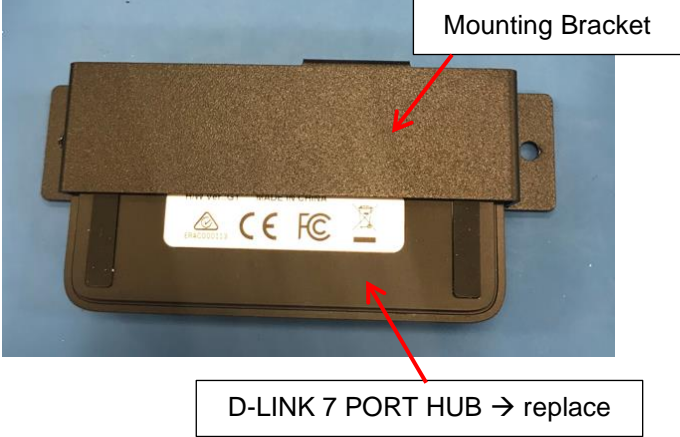
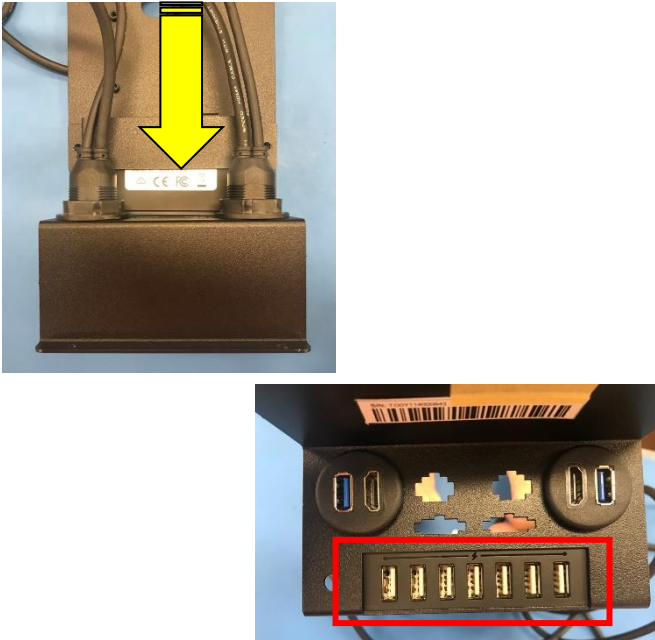

STEP	IMAGE	DESCRIPTION
8		<p>The PC is in the Tray in the bottom of the Kiosk.</p> <p>Access to the PC Tray is from the Teller side.</p>
9		<p>Re-orientate the Teller LCD Screen upwards to the full horizontal position to allow access to the PC Tray.</p>
10		<p>Remove &amp; retain 4x Pan Head Screws fastening the PC Tray to the Main Frame.</p>
11		<p>The PC Tray travel is limited by the Main Loom length.</p> <p>Partially pull out the PC Tray ensuring that there is suitable support under the PC Tray prior to full removal.</p>

STEP	IMAGE	DESCRIPTION
12		<p>Disconnect all HUB IO MNT Loom plugs from the PC as shown.</p> <p><b>NOTE:</b> Prior to removing the Loom Connectors from the PC, consider marking these to assist with the reconnection with the PC at the later Step.</p>
13		<p>Once all HUB IO MNT Loom plugs are disconnected, the PC Tray can be completely removed from the Kiosk.</p> <p>Store for refitment at later Step.</p>






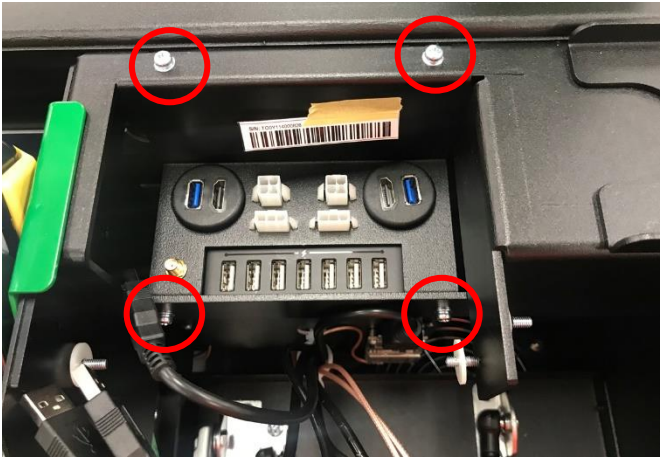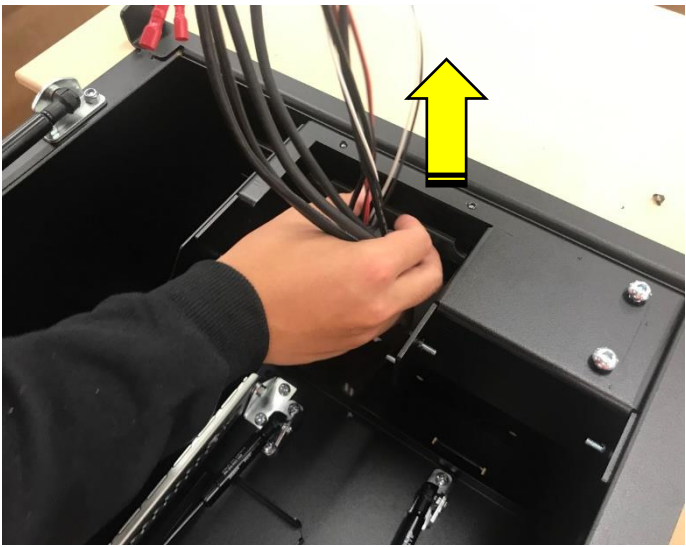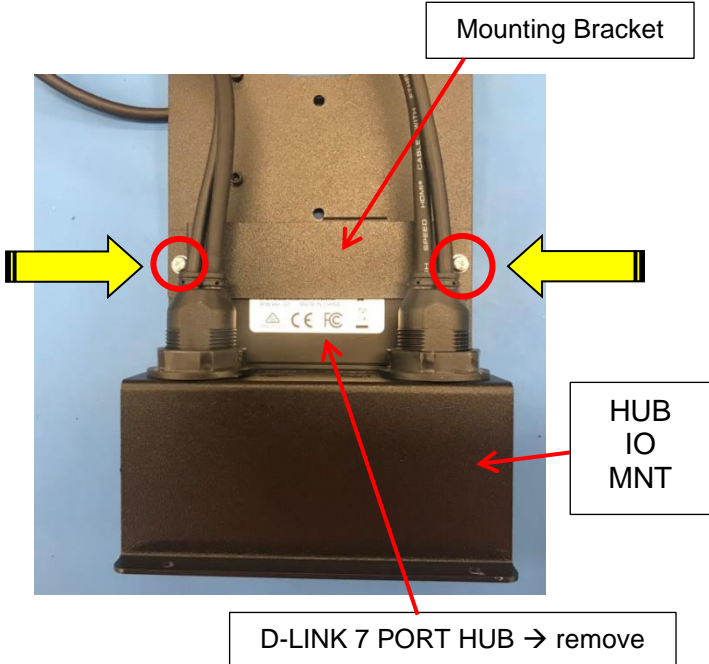


STEP	IMAGE	DESCRIPTION
14		<p>Rotate the Paper Roll Swing Bracket in an upwards direction.</p> <p>The Paper Roll can remain the Swing Bracket as this does not affect the HUB IO MNT removal process.</p>
15		<p>The HUB IO MNT is in the Main Frame against the rear wall, behind the Bet Slip Reader Swing Mount.</p> <p>Swing open the Bet Slip Reader Swing Mount.</p> <p>Remove the Bet Slip Bin.</p> <p>Note: Image for reference as the Paper Roll Swing Bracket has already been rotated in upwards condition in previous Step.</p>
16		<p>The Modem PCB is located at rear of the Chassis.</p> <p>To assist in the removal, remove the Black Modem Plug from the PCB.</p> <p>Carefully unclip the Antenna connector.</p> <p>Remove the HUB IO MNT Loom bundle from any Twist Cable Ties attached to the Chassis.</p>

STEP	IMAGE	DESCRIPTION
17		<p>Remove &amp; retain 4x M4x8 Screws from the HUB IO MNT using Phillips Head Screwdriver #2.</p>
18		<p>Carefully pull the HUB IO MNT upwards to extract Loom from the rear of the Chassis.</p>
19		<p>Turn over the HUB IO MNT to access the Mounting Bracket Screws.</p> <p>Unfasten 2x Screws to remove the TSST SPARE D-LINK 7 PORT HUB using a Phillips Head Screwdriver #2.</p> <p>Remove &amp; retain Screws.</p>

STEP	IMAGE	DESCRIPTION
20		<p>Remove TSST SPARE D-LINK 7 PORT HUB &amp; USB 0.5M AM-BM BLACK from packaging.</p> <p>Discard packaging.</p>
21		<p>Pre-assemble TSST SPARE D-LINK 7 PORT HUB with the Mounting Bracket as shown.</p>
22		<p>Pre-assemble the TSST SPARE D-LINK 7 PORT HUB to HUB IO MNT as shown.</p> <p>Note: Check that the USB ports are facing outboard.</p>
23		<p>Select 2x M4 x 8mm Screws removed at Step 19.</p>

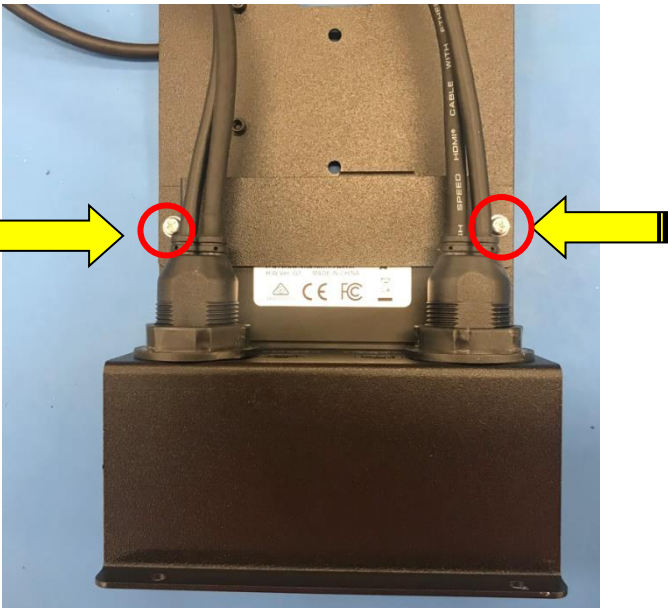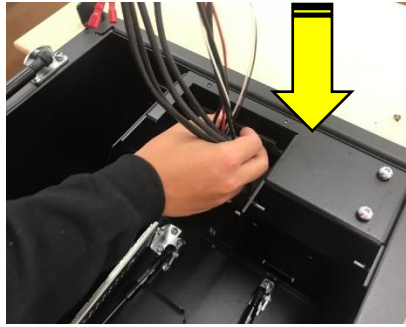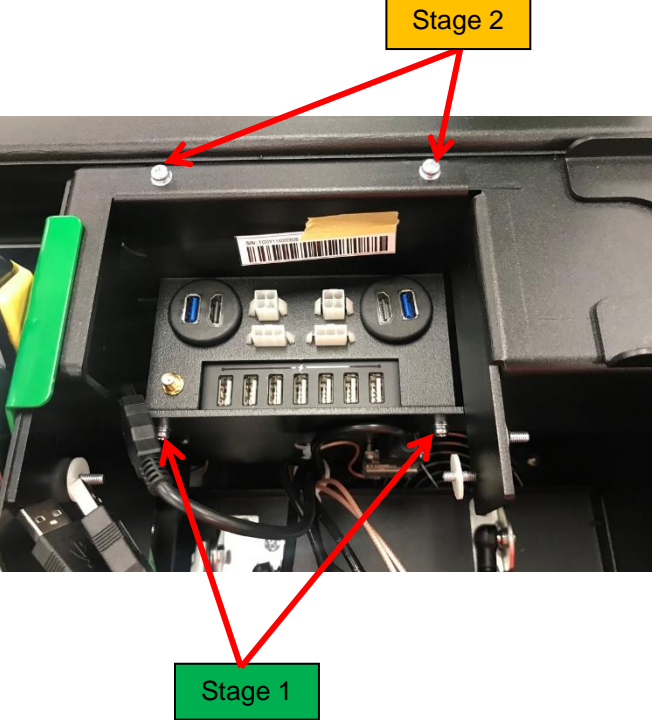

STEP	IMAGE	DESCRIPTION
24		<p>Re-fasten onto TSST SPARE D-LINK 7 PORT HUB to HUB IO MNT using Phillips Head Screwdriver #2.</p>
25		<p>Feed HUB IO MNT KIT sub-assy Loom Harness into rear of Chassis as shown.</p> <p>To re-install the replacement Printer Module, follow Steps 1 to 18 in reverse.</p>
27		<p><b>Special note for the HUB IO MNT Refit:</b></p> <p><b>Stage 1:</b> Lightly tighten HUB IO MNT KIT to Kiosk Bracket into front position with 2x M4x8 Screws using Phillips Head Screwdriver #2.</p> <p><b>Stage 2:</b> Lightly tighten HUB IO MNT KIT to Kiosk Bracket into top shelf with 2x M4x8 Screws using Phillips Head Screwdriver #2.</p> <p>Once 4x M4x8 Screws are installed, fully fasten to Kiosk using Phillips Head Screwdriver #2.</p>

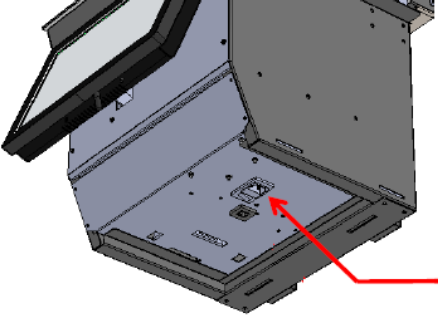STEP	IMAGE	DESCRIPTION
26		<p><b><u>Special note for the HUB IO MNT Refit:</u></b></p> <p>The 1<sup>st</sup> connection to the PWR PC Kit sub-assy is the HDMI port from the HUB IO MNT KIT into PWR PC Kit sub-assy Port A.</p> <p>Use a Multi Meter (or similar) to confirm the applicable HDMI Loom.</p>
27		<p>Close the Top Door by pushing down waiting for a “click” to indicate locked position.</p>
28		<p>Install the Power Lead &amp; Network Cable to the underside of the Kiosk.</p> <p>Switch the plug from O → I.</p>