



CAUTION:

THE WORK INSTRUCTION FOR THE TSST SPARE CUSTOMER SCREEN KIT REQUIRES MANUAL HANDLING → LCD SCREEN WEIGHT = 8.5Kg.

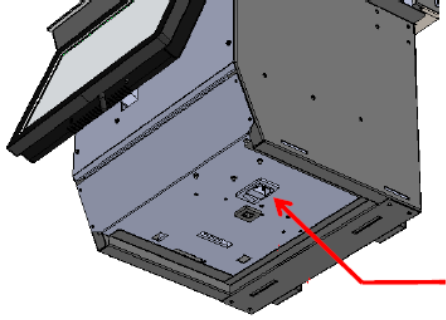


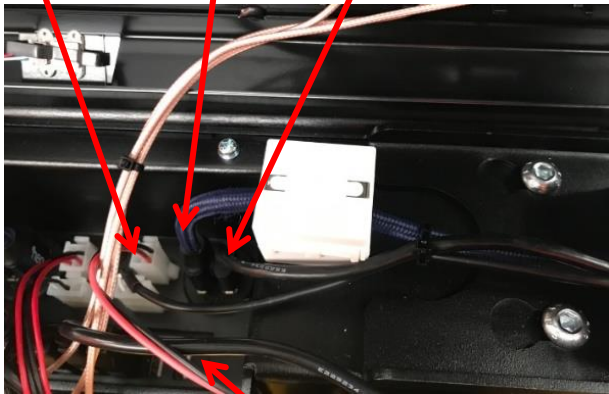
WORK INSTRUCTION STEPS REQUIRING MANUAL HANDLING WITH A 2nd PERSON, WILL BE IDENTIFIED BY THE FOLLOWING SYMBOL:

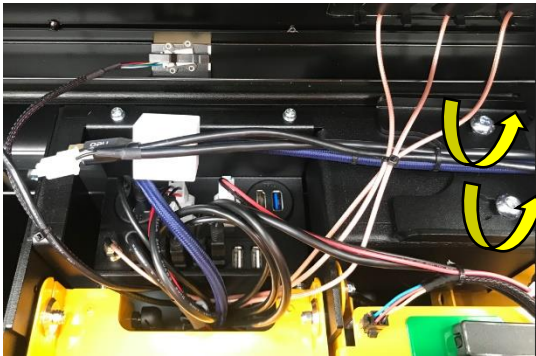

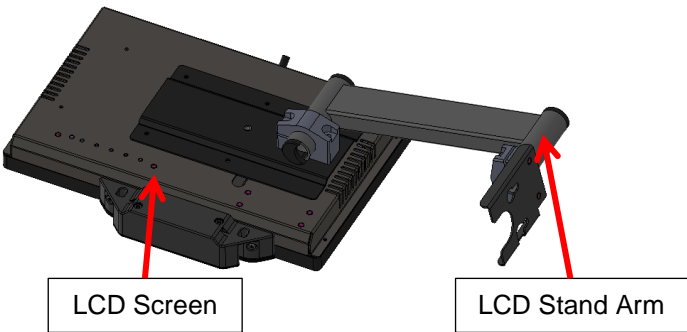



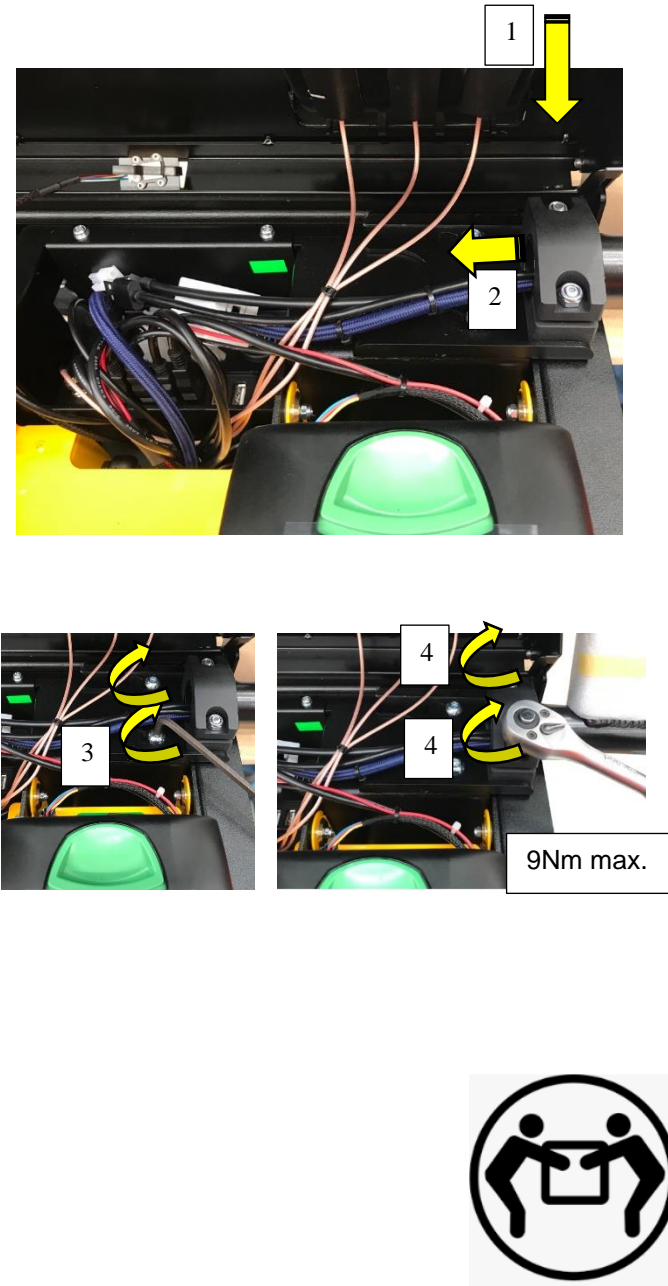

WHERE PRACTICABLE, CONSIDER SAFE MANUAL HANDLING PRACTICES TO AVOID INJURY.

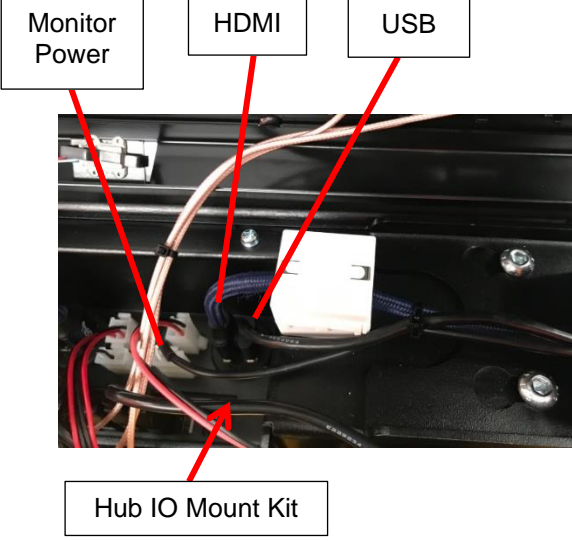

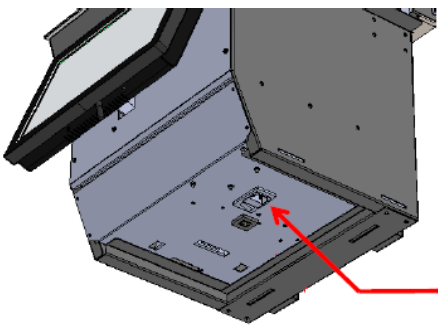
IF THERE ARE ANY CONCERNS, CONTACT YOUR SUPERVISOR PRIOR TO STARTING ACTIVITY.

STEP	IMAGE	DESCRIPTION
------	-------	-------------

<p>1</p>		<p>Prior to starting the TSST SPARE CUSTOMER SCREEN KIT, switch the plug from I → O on the underside of the Kiosk.</p> <p>Remove the Power Lead & Network Cable.</p>
<p>2</p>		<p>Unlock and open the Top Door by pushing the Button on the RH side of the Top Door.</p>
<p>3</p>		<p>The Looms & Mounting Plate for the TSST SPARE CUSTOMER SCREEN KIT are located on the RH rear corner as shown.</p>
<p>4</p>		<p>Disconnect 3x LCD Screen Loom plugs from the Hub IO Mount Kit.</p>

STEP	IMAGE	DESCRIPTION
5		<p>Loosen the 2x M8 Button Head Screws to remove the Customer Screen assembly.</p> <p>Do not fully remove the M8 Button Head Screws from the Kiosk.</p>
6		<p>Slide the Customer Screen assembly towards the RH side of the Kiosk.</p>
7		<p>Carefully remove the Customer Screen from the packaging.</p> <p>Discard packing.</p>
8		<p>The Stand Arm is supplied in a folded pack position and will need to be adjusted for installation into the Kiosk.</p> <p>Prior to installation into the TSST Main Chassis, adjust & firmly tighten the:</p> <ul style="list-style-type: none"> - 2x M6 Unbrako Bolts on rear of LCD Screen using a 5mm Allen Key - 2x M6 Nyloc Nuts on the LCD Stand Arm using a 10mm Socket Head Drive Socket & Handle.

STEP	IMAGE	DESCRIPTION
9	 <p>1</p> <p>2</p> <p>3</p> <p>4</p> <p>4</p> <p>9Nm max.</p> 	<p>Present the TSST SPARE CUSTOMER SCREEN KIT to the TSST Main Chassis.</p> <p>Step 1: Open the TSST Top Lid & present the Customer Screen assembly to the TSST Main Chassis.</p> <p>Step 2: Position and slide the LCD Screen Mount to the TSST Main Chassis towards the LH Side, nesting the Mount into the slotted holes.</p> <p>Step 3: Tighten 2x Button Head Screws using a 5mm Allen Key.</p> <p>Readjust the Customer Screen to the preferred position & tighten:</p> <ul style="list-style-type: none"> - 2x M6 Unbrako Bolts on rear of LCD Screen using a 5mm Allen Key. <p>Step 4: 2x M6 Nyloc Nuts on the LCD Stand Arm using a 10mm Socket Head Drive Socket & ¼" Drive Torque Wrench to 9Nm max.</p> <p>CAUTION: ENSURE THAT THE LCD SCREEN MOUNT IS FULLY NESTED INTO THE SLOTTED HOLES. FAILURE MAY RESULT IN THE LCD SCREEN FALLING WITHOUT WARNING, RESULTING IN DAMAGE TO THE LCD SCREEN.</p>

STEP	IMAGE	DESCRIPTION
10		<p>Connect 3x LCD Screen Loom plugs into the Hub IO Mount Kit.</p> <p>Ensure plugs “click” into each connection.</p> <p>To ensure that the Ferrite completely clears the Ticket Chute, push the Ferrite along the HDMI Loom towards the Hub IO Mount Kit as shown.</p> <p>Remove green plastic film & white protective film from the Customer Screen assembly.</p>
11		<p>Close the Top Door by pushing down waiting for a “click” to indicate locked position.</p>
12		<p>Install the Power Lead & Network Cable to the underside of the Kiosk.</p> <p>Switch the plug from O → I.</p>