


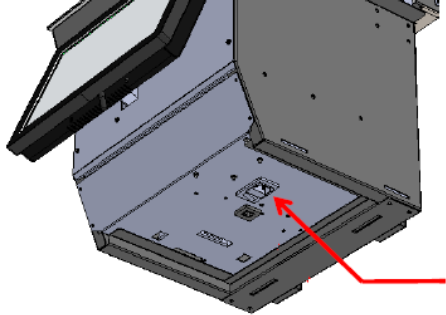








STEP	IMAGE	DESCRIPTION
1		<p>Prior to starting the TSST SPARE MEI CASHBOX, switch the plug from I → O on the underside of the Kiosk.</p> <p>Remove the Power Lead &amp; Network Cable.</p>
2		<p>Unlock and open the Top Door by pushing the Button on the RH side of the Top Door.</p>
3		<p>The MEI CASHBOX is located on the LH side of the Kiosk as shown.</p>
4		<p>Unlock and open the BNA Enclosure Lock Bracket by unlocking the Lock on the top using <b>KEY# 002</b>.</p> <p>This provides access to the MEI CASHBOX.</p>

STEP	IMAGE	DESCRIPTION
5		<p>Swing the BNA Enclosure Lock Bracket to the open position.</p>
6		<p>Remove the MEI CASHBOX from the BNA Cradle by pulling the yellow handle in an upwards direction.</p>
7		<p>Remove the TSST SPARE MEI CASHBOX from packaging.</p>

STEP	IMAGE	DESCRIPTION
8		<p>To re-install the replacement TSST SPARE MEI CASHBOX, follow Steps 4 to 6 in reverse.</p>
9		<p>Ensure that the TSST SPARE MEI CASHBOX is fully pushed down into BNA Enclosure.</p>
10		<p>Close the Top Door by pushing down waiting for a “click” to indicate locked position.</p>

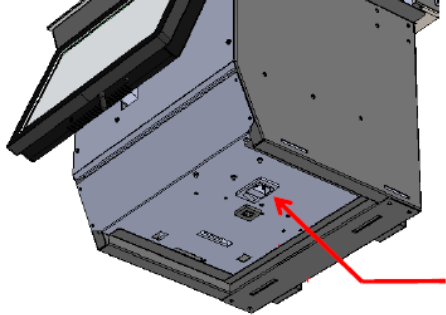STEP	IMAGE	DESCRIPTION
11		<p>Install the Power Lead &amp; Network Cable to the underside of the Kiosk.</p> <p>Switch the plug from O → I.</p>