

# NEO PRODUCTS - WORK INSTRUCTION

## BETMAKERS TSST SERVICE

NUMBER	ISSUE	CHANGE	DATE	ISSUED BY
15201-SERV017	A	Initial Production Release	30-09-22	LD
<b>DESCRIPTION</b>	B	Filename updated (ECN 6477)	13-10-23	LD
TSST SPARE TOP LID WITH DECAL WO BNA	C			
	D			
	E			


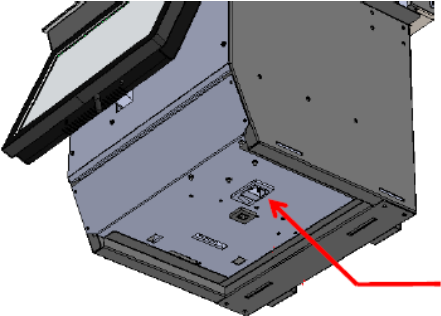

**ITEMS NEEDED TO PERFORM THIS TASK**



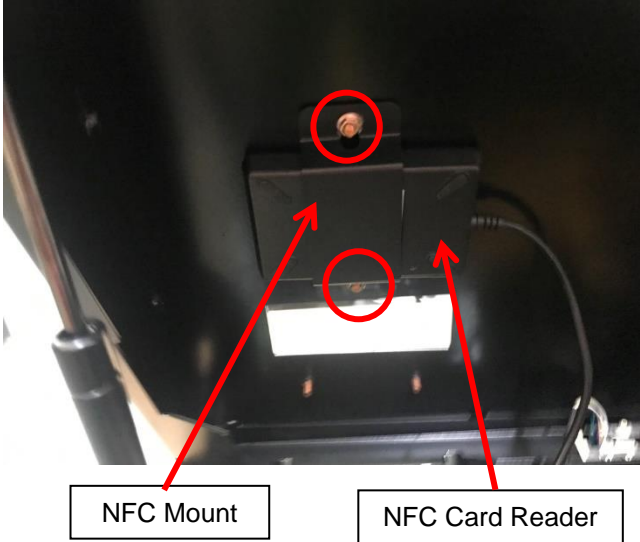
4mm ALLEN KEY
STANLEY KNIFE
7mm SOCKET HEAD DRIVE & HANDLE

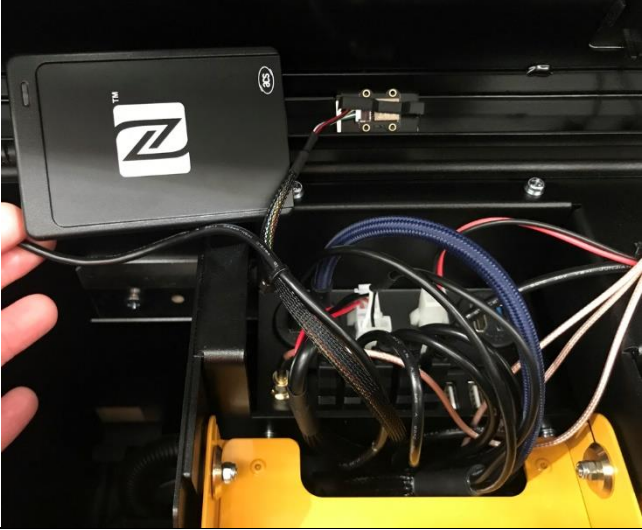
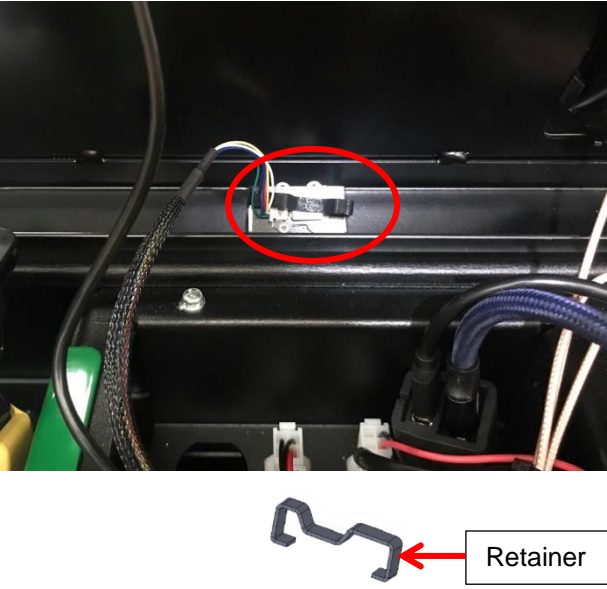



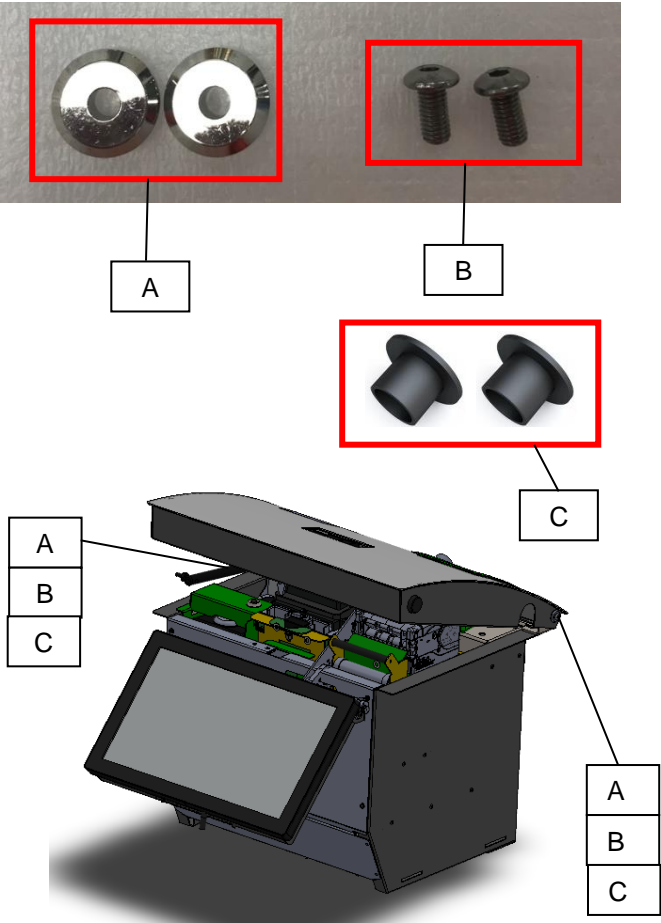

Image for reference only

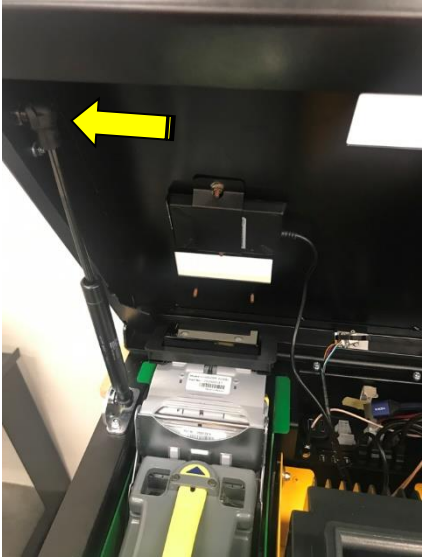
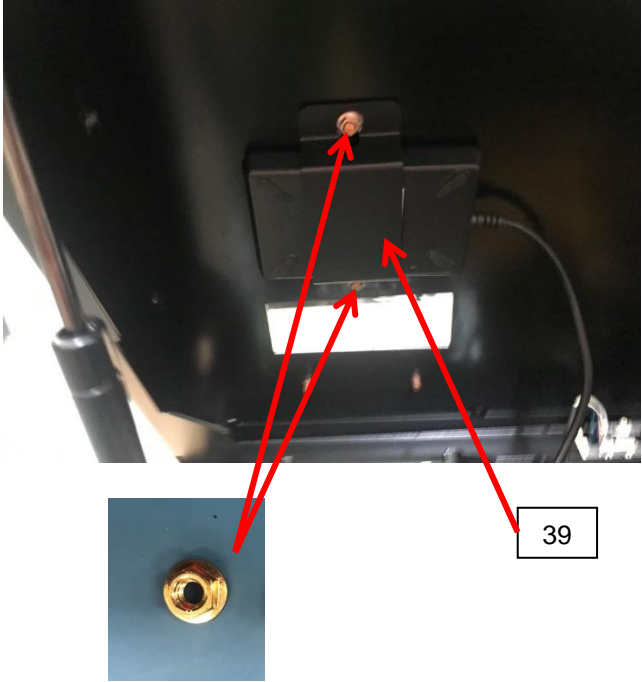
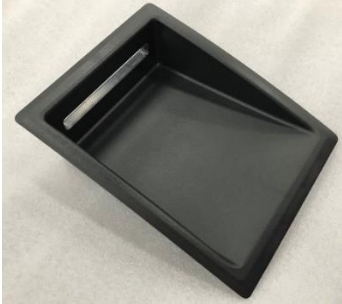
ITEM #	STOCK CODE	DESCRIPTION	QTY
1	15201-SKIT003	LID ASY	1.00
2	15201-IM010	NFC CLIP-IN PLATE	1.00
3	15201-DC001AA	TSST TOP COVER DECAL - GLOBAL TOTE W BNA	1.00
4	15201-MP021AA	NYLON SHOULDER WASHER M6	2.00
5	15201-MP012AB	BUSH SWING MOUNT	2.00
6	SCM06-16BHSS	SCREW M6x16 BUTTON HEAD SS	2.00
7			
8			
9			
10			
11			
12			
13			
14			
15			

STEP	IMAGE	DESCRIPTION
1		<p>Following Work Instruction is for the removal → replace of the TSST SPARE TOP LID WITH DECAL WO BNA.</p> <p><b>NOTE:</b> THE REMOVAL → REFITMENT OF A SPARE TOP LID <u>WITHOUT</u> BNA (E.G.: THIS WI) AND SPARE TOP LID <u>WITH</u> BNA (part# 15201-SERV003), IS THE SAME PROCESS. THE IMAGES IN THIS WI ARE SHOWN FOR THE SPARE TOP LID <u>WITH</u> BNA.</p>
2		<p>Prior to starting the TSST SPARE TOP LID WITH DECAL WO BNA removal, switch the plug from I → O on the underside of the Kiosk.</p>
3		<p>Unlock and open the Top Door by pushing the Button on the RH side of the Top Door.</p>

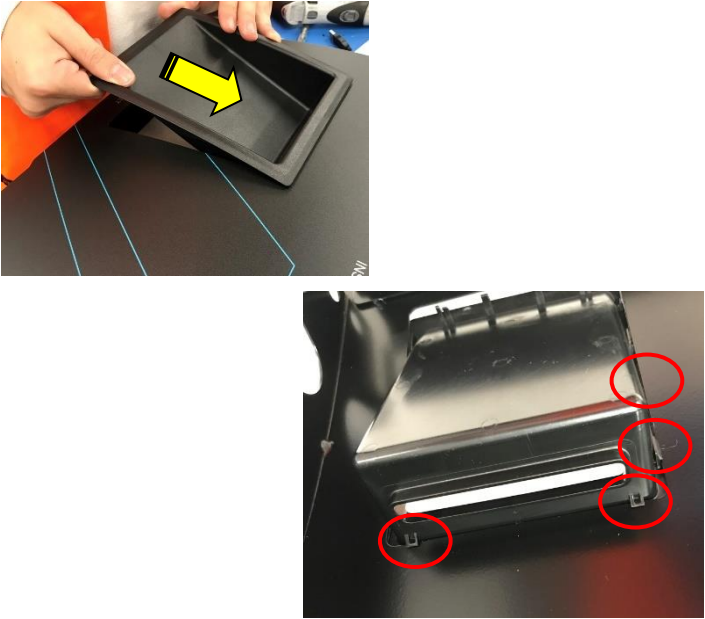


STEP	IMAGE	DESCRIPTION
4		<p>With care, remove the 3x Antenna's from the underside of the Ticket Chute and relocate to a clear position inside the Kiosk.</p>
5		<p>With care, remove &amp; retain the Ticket Chute by "popping" in an outwards direction from the underside of the Top Lid.</p> <p><b>Caution:</b> Care required to ensure that the 2x tabs on the underside of the Ticket Chute are not broken or damaged during removal.</p>
6		<p>Remove &amp; retain the 2x M4 Wizlock Nuts &amp; NFC Mount holding the NFC Contactless Smart Card Reader to the Top Lid, using a 7mm Socket Head &amp; Handle.</p>


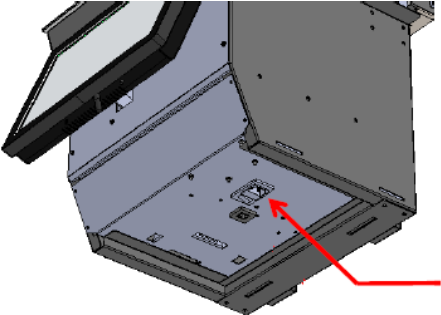
STEP	IMAGE	DESCRIPTION
7		<p>Store the NFC Contactless Smart Card Reader in a safe position within the Kiosk.</p>
8		<p>Remove the Retainer holding the Laser Ranging Sensor into position on the Top Lid, to access the connector for removal.</p> <p>Unclip the Loom connector from the Laser Ranging Sensor.</p> <p>Retain the Laser Ranging Sensor &amp; Retainer for fitment in later Step.</p>
9		<p>The Gas Strut connected to the Top Lid is to be released from the Mount Bracket Ball as shown.</p> <p>Gently insert the Flat Headed Screwdriver – Small into the Gas Strut Head to “lift” the retaining spring. Pull the Gas Strut to the RHS direction to release from the Mount Bracket ball.</p> <p><b>Note:</b> The Top Lid will not stay in an open position after disconnecting the Gas Strut. Manually close the Top Lid.</p>

STEP	IMAGE	DESCRIPTION
10	 <p>The image for Step 10 consists of three parts. At the top, there are two photographs. The left photograph shows two silver bush swing mounts, labeled 'A', enclosed in a red rectangular box. The right photograph shows two black screws, labeled 'B', also enclosed in a red rectangular box. Below these is a third photograph showing two black nylon shoulder washers, labeled 'C', enclosed in a red rectangular box. At the bottom of the image is a 3D cutaway diagram of the kiosk's top lid assembly. Three callout boxes labeled 'A', 'B', and 'C' point to the locations where these fasteners are used to secure the lid.</p>	<p>To completely remove the Top Lid from the Kiosk, remove &amp; retain the following Fasteners using a 4mm Allen Key:</p> <ul style="list-style-type: none"> <li>- 2x Bush Swing Mount (A).</li> <li>- 2x M6 x 18mm Screw (B).</li> <li>- 2x Nylon Shoulder Washer M6 (C) – <b>image for reference only.</b></li> </ul>
11	 <p style="text-align: center; background-color: yellow; border: 1px solid black; padding: 5px;">Image for reference only</p>	<p>Remove TSST SPARE TOP LID WITH DECAL WO BNA from packaging.</p> <p>Discard packaging.</p> <p>To re-install the replacement TSST SPARE TOP LID WITH DECAL WO BNA onto the Kiosk, follow Step 10 in reverse.</p>

STEP	IMAGE	DESCRIPTION
12		<p>Clip the Gas Strut into Top Door Gas Strut Mount on inner LH side of Door.</p> <p>Check opening &amp; closing function after installation.</p>
13		<p>Instal the NFC Contactless Smart Card Reader into position and retain with the NFC Mount.</p> <p>Instal 2x M4 Wizlock Nuts and fasten using 7mm Socket Head &amp; Handle.</p>
14		<p>Select Ticket Chute removed from earlier Step.</p>



STEP	IMAGE	DESCRIPTION
15		<p>From the Teller Side of the Kiosk, pre-assemble the Ticket Chute back into the Top Lid &amp; nest into tabs prior to pushing into final position.</p> <p><b>Caution:</b> Care required to ensure that all tabs on the underside of the Ticket Chute are not broken or damaged during installation.</p>
16		<p><b>Check:</b> Ensure that the Ticket Chute has been fully clipped into the Top Lid and no gaps are visible from the Decal side.</p>
17		<p>Move to the Operator side of the Kiosk, re-instal 3x Antenna's onto underside of the Ticket Chute.</p> <p><b>Re-fitment requirement:</b>                  #1: PC Tray → short lead = LH side                  #2: PC Tray → long lead = Middle                  #3: USB Hub → long lead = RH Side</p>

STEP	IMAGE	DESCRIPTION
18		Close the Top Door by pushing down waiting for a “click” to indicate locked position.
19		Switch unit from O → I on the underside of the Kiosk.