



CAUTION:


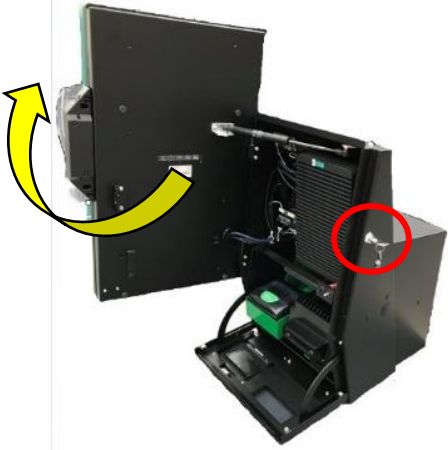
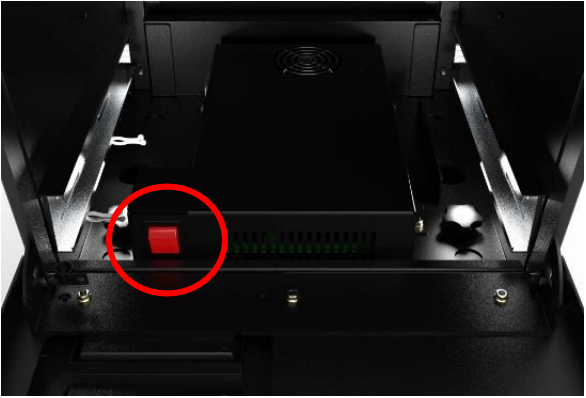
THE WORK INSTRUCTION FOR THE SST SPARE LCD ASSY REQUIRES MANUAL HANDLING → LCD SCREEN WEIGHT = 8.5Kg.



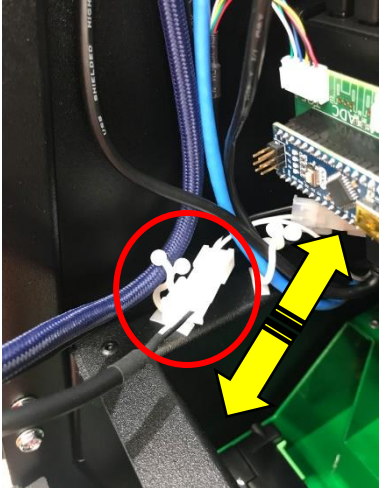
WORK INSTRUCTION STEPS REQUIRING MANUAL HANDLING, WILL BE IDENTIFIED BY THE FOLLOWING SYMBOL:

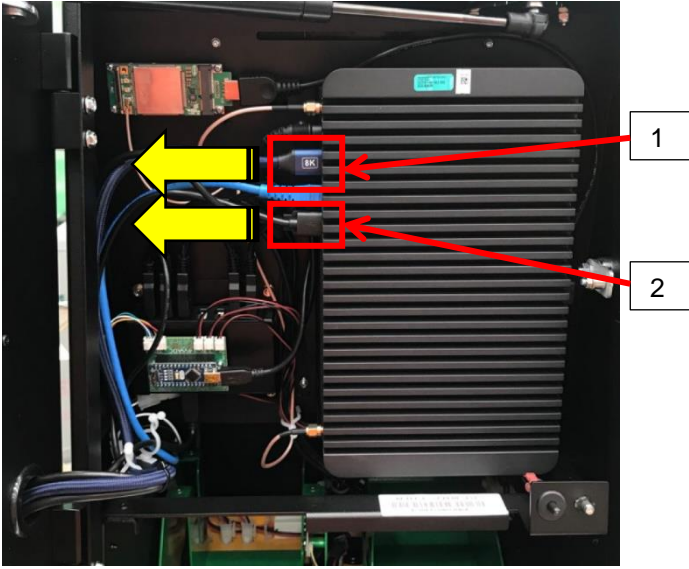
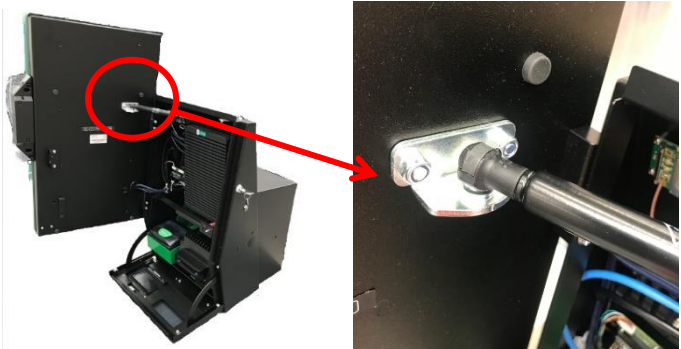
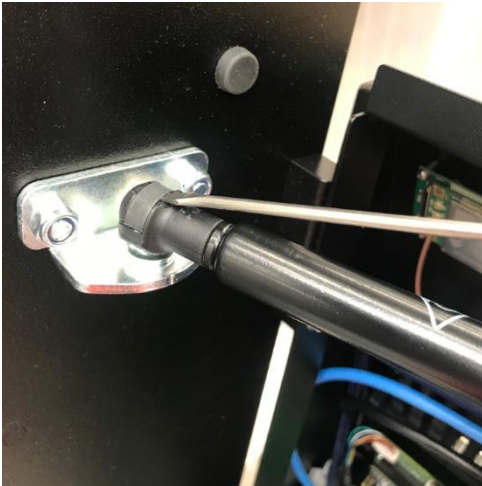




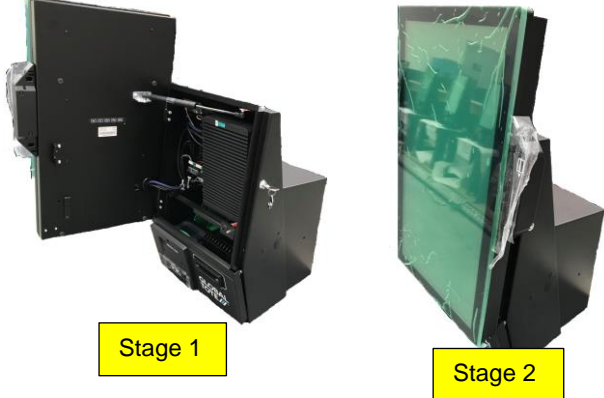
WHERE PRACTICABLE, CONSIDER SAFE MANUAL HANDLING PRACTICES TO AVOID INJURY.

IF THERE ARE ANY CONCERNS, CONTACT YOUR SUPERVISOR PRIOR TO STARTING ACTIVITY.

STEP	IMAGE	DESCRIPTION
1		<p>Remove SST SPARE LCD ASSY from packaging.</p> <p>Discard packaging.</p>
2		<p>Unlock and open the LCD Screen Door by unlocking the Lock at the Right-hand side of the Kiosk using the SOUTHCO KEY# T0001.</p> <p>This provides access to the LCD Screen Door Loom & Gas Strut.</p> <p>NOTE: The Lower Door will naturally drop to a downwards position during this activity. This does not affect the SST SPARE LCD ASSY removal → refit activity.</p>
3		<p>Prior to starting the installation of the SST SPARE LCD ASSY removal, switch the plug from I → O on the Power Tray located on the inside of the Kiosk.</p> <p>NOTE: Components removed for clarity.</p>

STEP	IMAGE	DESCRIPTION
4		<p>The Steps to replace the SST SPARE LCD ASSY are detailed in the following Steps.</p>
5		<p>Remove LCD Screen Loom from the Cable Tie Twist Lock.</p>
6		<p>Disconnect the Molex connector.</p>

STEP	IMAGE	DESCRIPTION
7		<p>Remove the LCD Screen connectors from the applicable ports in the PC:</p> <ol style="list-style-type: none"> 1. HDMI. 2. USB (front port)
8		<p>The Gas Strut connected to the LCD Screen is to be released from the Mount Bracket Ball as shown.</p>
9		<p>Gently insert the Flat Headed Screwdriver – Small into the Gas Strut Head to “lift” the retaining spring.</p>

STEP	IMAGE	DESCRIPTION
10		<p>Remove the Gas Strut from the LCD Screen Mount Bracket.</p> <p>Lift the Gas Strut in an upwards direction to release from the Mount Bracket ball. The Gas Strut will store on the Kiosk Mount Bracket.</p> <p>CAUTION: HOLD THE LCD SCREEN WITH ONE HAND AT THE SAME TIME AS REMOVING THE GAS STRUT. FAILURE MAY RESULT IN THE SCREEN SWINGING OPEN WITHOUT WARNING, RESULTING IN DAMAGE TO THE KIOSK FRAME.</p>
11		<p>With care, lift the LCD Screen in an upwards direction to remove the hinges from the pins.</p> <p>To re-install the replacement SST SPARE LCD ASSY, follow Steps 2 to 11 in reverse.</p>
12		<p>Stage 1: Push in green tray and close Lower Door.</p> <p>Stage 2: Close & lock the LCD Screen Door via the Lock at the Right-hand side of the Kiosk using the key provided.</p>