

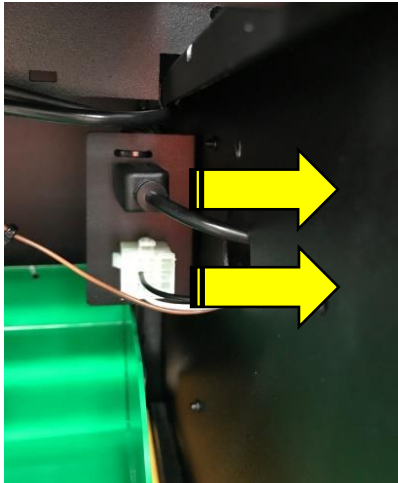
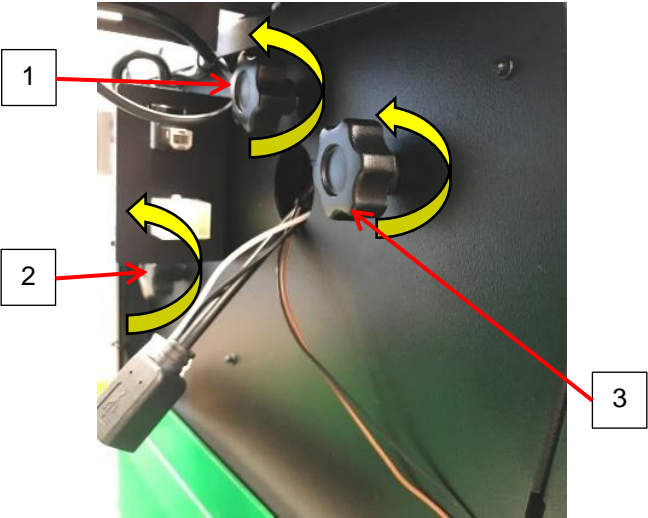

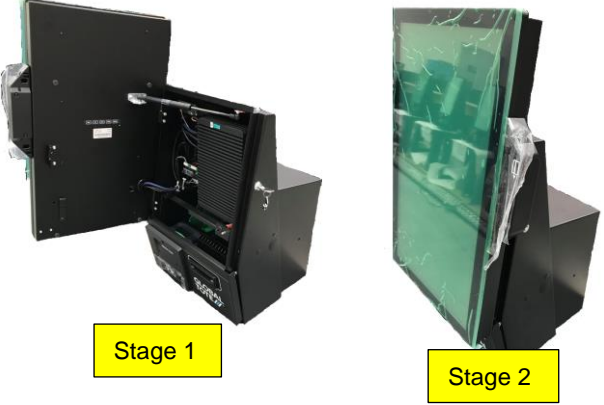


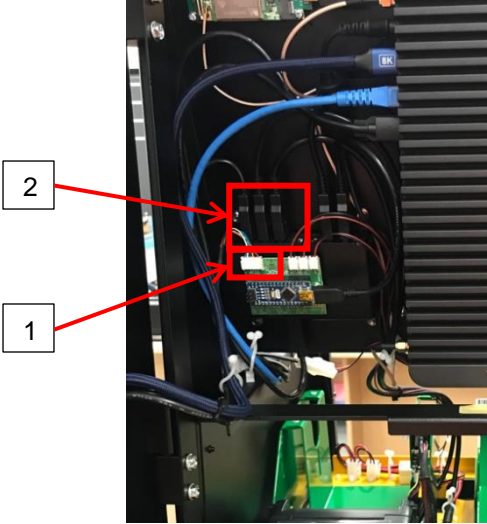

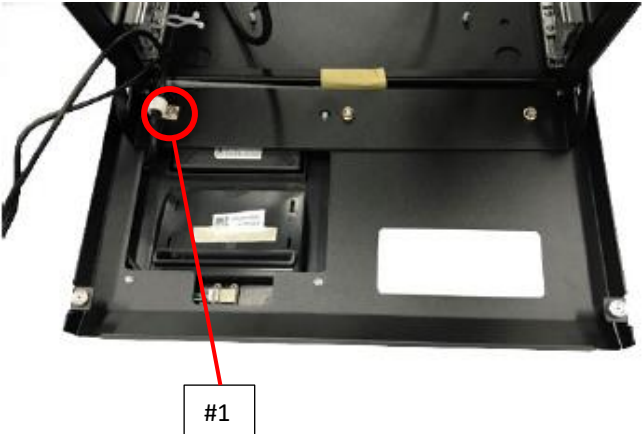
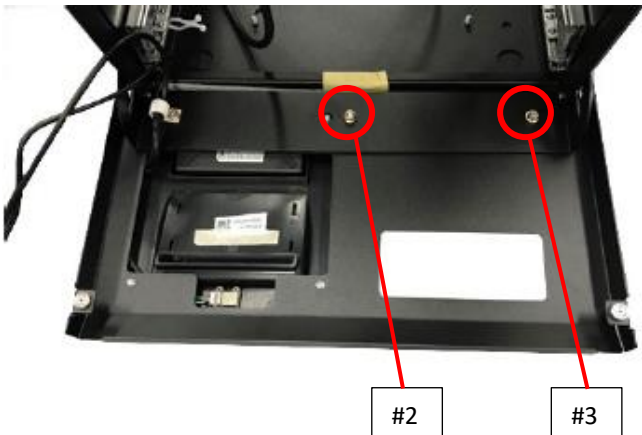




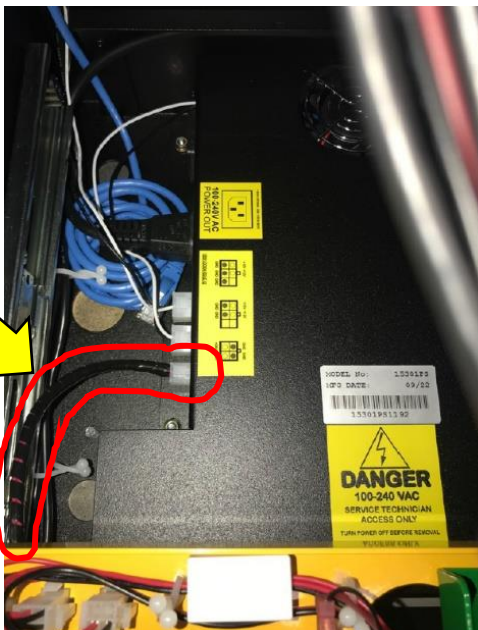
STEP	IMAGE	DESCRIPTION
1		<p>Remove SST SPARE LOWER PERIPHERAL DOOR from packaging.</p> <p>Discard packaging.</p>
2		<p>Unlock and open the LCD Screen Door and Lower Door by unlocking the Lock at the Right-hand side of the Kiosk using the SOUTHCO KEY# T0001.</p> <p>This provides access to the Kiosk internals.</p>
3		<p>Prior to starting the installation of the SST SPARE LOWER PERIPHERAL DOOR removal, switch the plug from I → O on the Power Tray located on the inside of the Kiosk.</p> <p>NOTE: Components removed for clarity.</p>
4		<p>To access the 2x Cable Tie Twist Locks retaining the Lower Peripheral Door Looms, pull out the green tray towards the operator.</p>

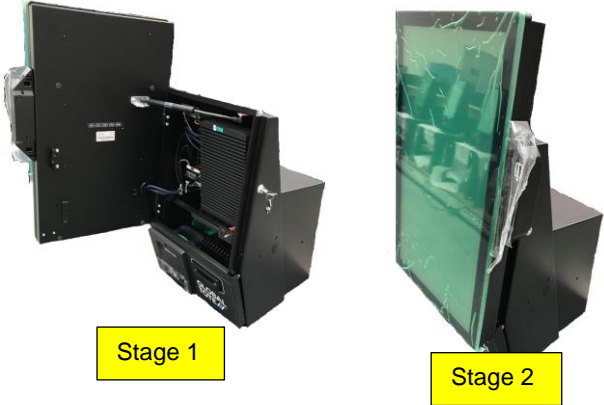
STEP	IMAGE	DESCRIPTION
5		<p>Unclip the 2x Cable Tie Twist Locks located on the inside of the Kiosk at the LH side as shown.</p>
6		<p>FOR KIOSKS WITH BNA ENCLOSURE – FOLLOW THE STEPS BELOW FOR THE REMOVAL OF THE BNA ENCLOSURE PRIOR TO THE REMOVAL OF THE SST REAR COVER.</p> <p>IF THE KIOSK IS INSTALLED WITH A WALL MOUNT OR PEDESTAL, SKIP STEP 7 to 9 & PROCEED TO STEP 11.</p>
7		<p>Unplug the USB and Power Looms from the BNA Harness Bracket located in the inner RH Side of Kiosk.</p>

STEP	IMAGE	DESCRIPTION
8		<p>Remove & retain 3x M6 Black Clamping Knobs from the BNA Enclosure Studs.</p> <p>Align the 3x Pins into the holes of the Kiosk.</p>
9		<p>Slide the BNA Enclosure away from the Kiosk & guide the Looms Plugs through the hole of the Kiosk as shown.</p> <p>Store the BNA Enclosure for re-fitment in later Step.</p>
10		<p>To proceed to the next Step, complete the following actions:</p> <p>Stage 1: Push in the Lower Peripheral Door and close the Lower Door.</p> <p>Stage 2: Close & lock the LCD Screen Door via the Lock at the Right-hand side of the Kiosk using the key provided.</p>

STEP	IMAGE	DESCRIPTION
11		<p>Move from the front of the Kiosk to the rear.</p> <p>Remove & retain 4x Pan Head Screws fastening the SST Rear Cover to the Kiosk chassis using a #2 Phillips Head Screwdriver.</p> <p>Lift the SST Rear Cover from the Kiosk chassis & store for refitment at a later Step.</p>
12		<p>Cut 6x Cable Ties retaining the Front Door Loom & Ethernet Cable (if applicable) to the RH side of the Kiosk.</p> <p>Discard Cable Tie waste.</p> <p>Note: The Yellow Peripheral Draw has been moved to the fully outboard position for image clarity.</p>
13		<ol style="list-style-type: none"> Chase the TOF Loom back to the PCB at the front of the Kiosk. Disconnect from PCB. Chase the NFC Reader Loom back to the D-LINK 7 PORT HUB at the front of the Kiosk. Disconnect the USB plug.

STEP	IMAGE	DESCRIPTION
14		<p>Unlock and open the LCD Screen Door and Lower Door by unlocking the Lock at the Right-hand side of the Kiosk using the SOUTHCO KEY# T0001.</p>
15		<p>Remove 1x M4 Wizlock Nut and 1x Cable Clamp 9mm from stud #1 using a 7mm Socket Head Drive & Handle.</p>
16		<p>Remove 2x M4 Wizlock Nuts from studs #2 & #3 using a 7mm Socket Head Drive & Handle.</p>

STEP	IMAGE	DESCRIPTION
17		<p>The Lower Peripheral Door can then be removed from the Kiosk.</p>
18		<p>Remove 1x M5 Screw & 1x BUSH from the LH side of the Kiosk using #2 Phillips Head Screwdriver.</p> <p>Repeat for the opposite side.</p> <p>To re-install the SST SPARE LOWER PERIPHERAL DOOR, follow Steps 2 to 17 in reverse.</p>
19		<p>Note: Ensure that the Power Supply 4 Pin 24V after re-fitment is un-restrained as shown (1).</p>

STEP	IMAGE	DESCRIPTION
20		<p>Stage 1: Push in green tray and close Lower Door.</p> <p>Stage 2: Close & lock the LCD Screen Door via the Lock at the Right-hand side of the Kiosk using the key provided.</p>