
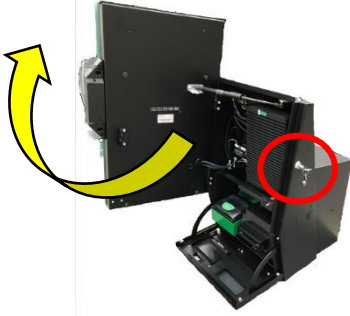
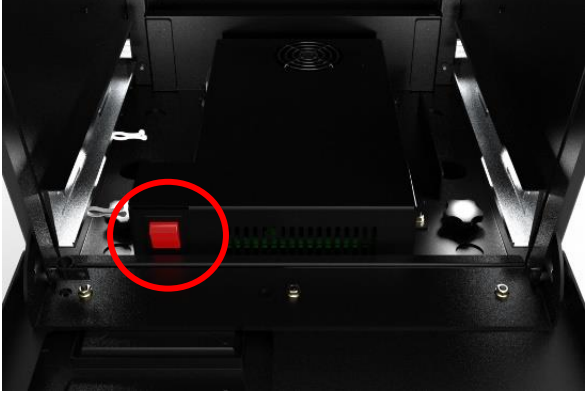

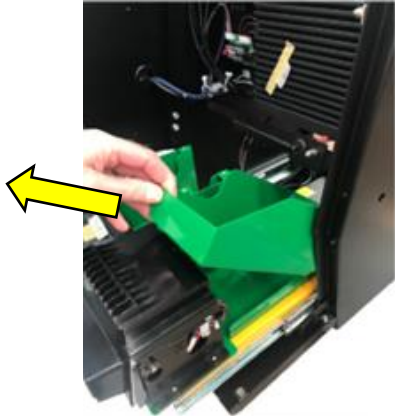




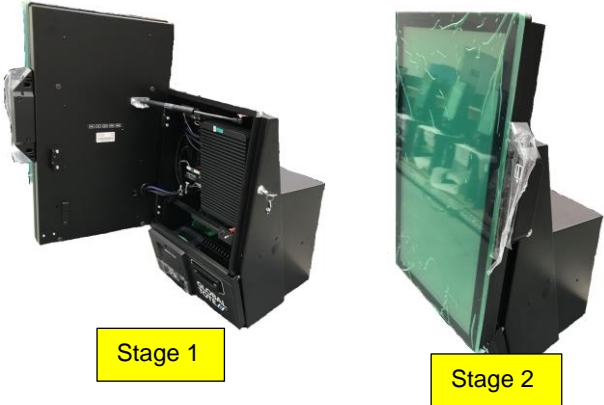




STEP	IMAGE	DESCRIPTION
1		<p>Remove SST SPARE BETSLIP READ KIT from packaging.</p>
2		<p>Unlock and open the LCD Screen Door and Lower Door by unlocking the Lock at the Right-hand side of the Kiosk using the SOUTHCO KEY# T0001.</p> <p>This provides access to the Kiosk internals.</p>
3		<p>Prior to starting the installation of the SST SPARE BETSLIP READ KIT - FREE ISSUE MSR removal, switch the plug from I → O on the Power Tray located on the inside of the Kiosk.</p> <p><b>NOTE:</b> Components removed for clarity.</p>

<p>4</p>		<p>To access the printer paper tray, pull out the green tray towards the operator.</p>
<p>STEP</p>	<p>IMAGE</p>	<p>DESCRIPTION</p>
<p>5</p>		<p>Remove Bet Slip Tray.</p>
<p>6</p>		<p>Undo the Latch Swell to disengage the green MSR Module.</p>

<p>7</p>		<p>Remove the MSR Module from the peripheral tray.</p>
<p>8</p>		<p>Unplug the power connector.</p>
<p><b>STEP</b></p>	<p><b>IMAGE</b></p>	<p><b>DESCRIPTION</b></p>
<p>9</p>		<p>Remove &amp; retain 4x Pan Head Screws fastening the MSR Module from the MSR Tray using a #2 Phillips Head Screwdriver.</p> <p>To re-install the replacement SST SPARE BETSLIP READ KIT, follow Steps 2 to 9 in reverse.</p>

10	 <p data-bbox="389 546 517 600">Stage 1</p> <p data-bbox="724 568 852 622">Stage 2</p>	<p data-bbox="986 232 1442 293"><b>Stage 1:</b> Push in green tray and close Lower Door.</p> <p data-bbox="986 327 1501 421"><b>Stage 2:</b> Close &amp; lock the LCD Screen Door via the Lock at the Right-hand side of the Kiosk using the key provided.</p>
----	---	--