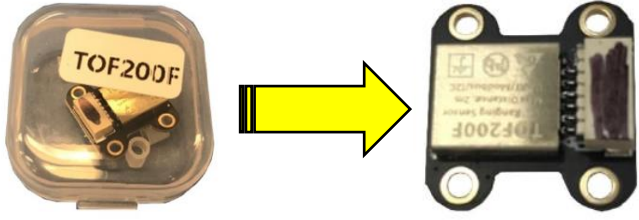

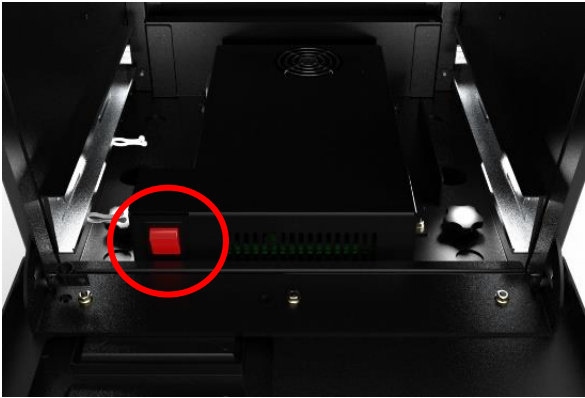


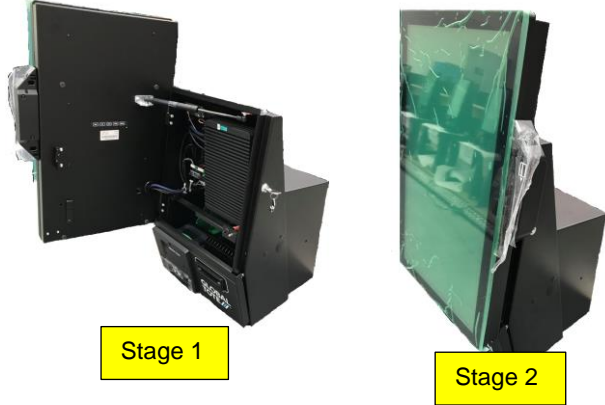

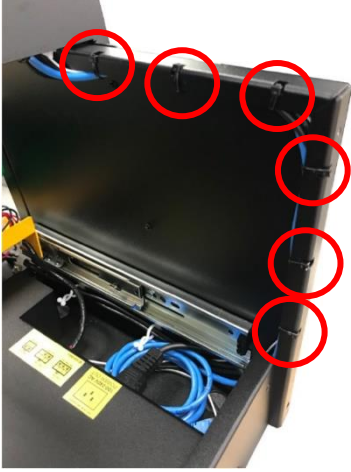
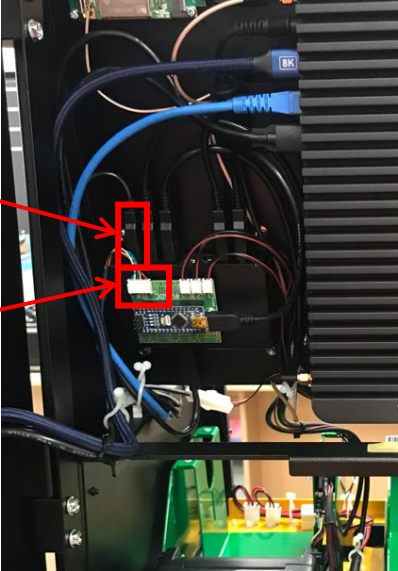

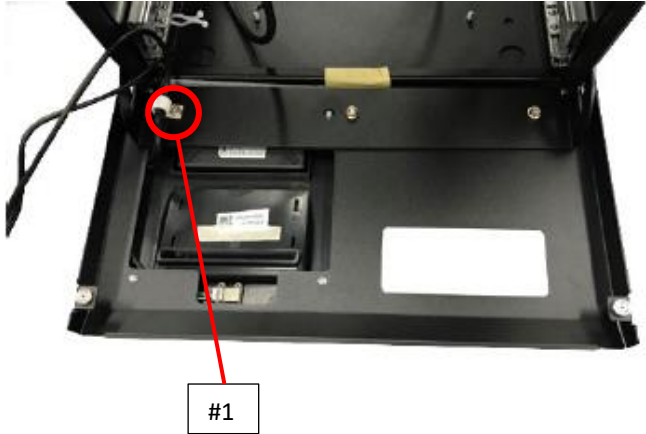
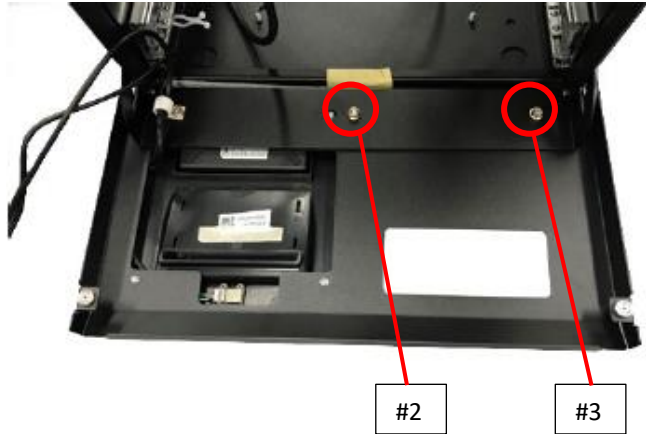




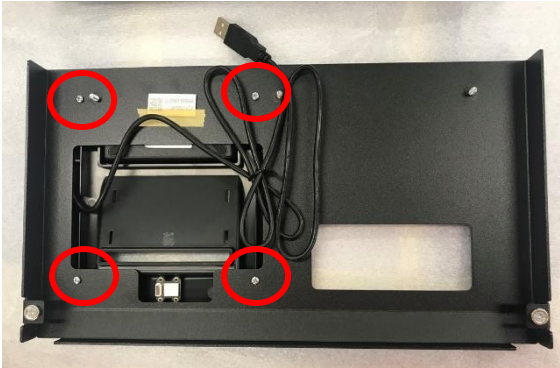
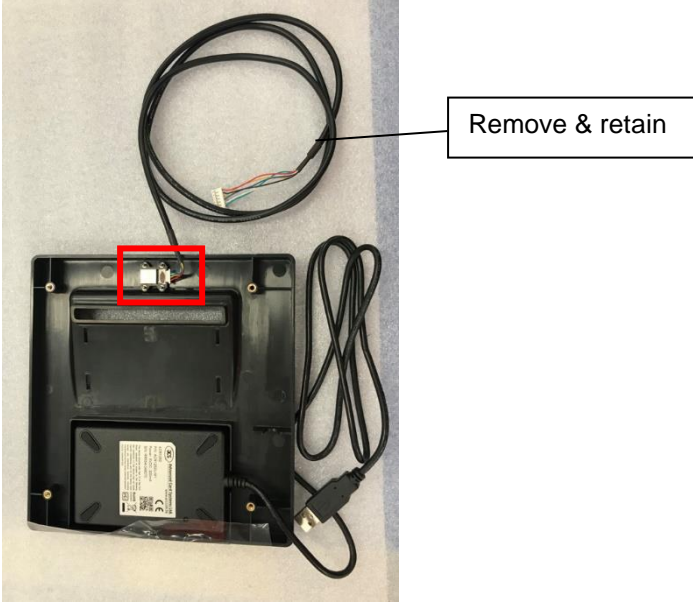
STEP	IMAGE	DESCRIPTION
1		<p>Remove LASER RANGING PROXIMITY SENSOR from packaging.</p>
2		<p>Unlock and open the LCD Screen Door and Lower Door by unlocking the Lock at the Right-hand side of the Kiosk using the SOUTHCO KEY# T0001.</p> <p>This provides access to the Kiosk internals.</p>
3		<p>Prior to starting the installation of the SST SPARE PROXIMITY KIT removal, switch the plug from I → O on the Power Tray located on the inside of the Kiosk.</p> <p>NOTE: Components removed for clarity.</p>
4		<p>IF THE LASER RANGING PROXIMITY SENSOR IS PUSHED ONTO THE PRINTER FASCIA, COMPLETE STEPS 4 to 6.</p> <p>Unplug LASER RANGING PROXIMITY SENSOR connector.</p>


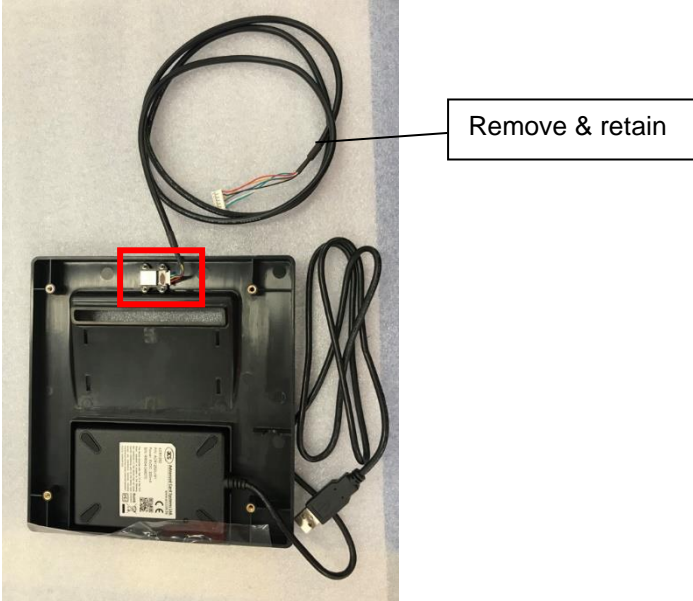
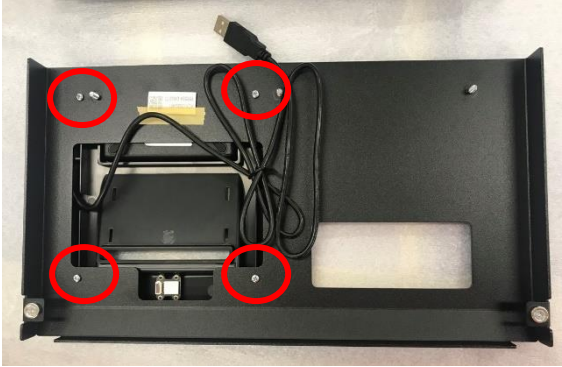
STEP	IMAGE	DESCRIPTION
5		<p>Lift LASER RANGING PROXIMITY SENSOR from the Fascia pins.</p> <p>To re-install the SST SPARE PROXIMITY KIT, follow Steps 2 to 5 in reverse.</p>
6		<p>Stage 1: Push in green tray and close Lower Door.</p> <p>Stage 2: Close & lock the LCD Screen Door via the Lock at the Right-hand side of the Kiosk using the key provided.</p> <p>FOR KIOSKS WITH THE LASER RANGING PROXIMITY SENSOR GLUED ONTO THE PRINTER FASCIA, COMPLETE THE FOLLOWING STEPS.</p>
7		<p>To access the 2x Cable Tie Twist Locks retaining the Lower Peripheral Door Looms, pull out the green tray towards the operator.</p>

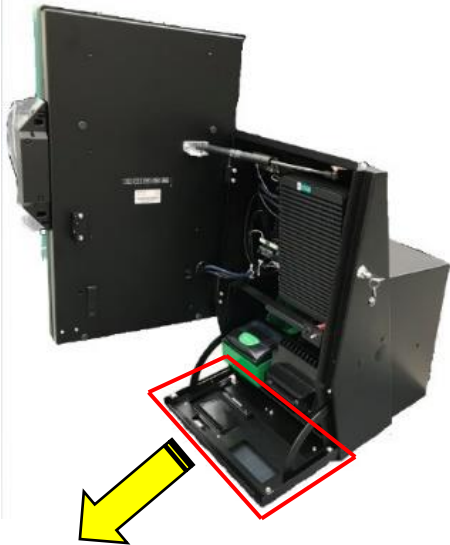
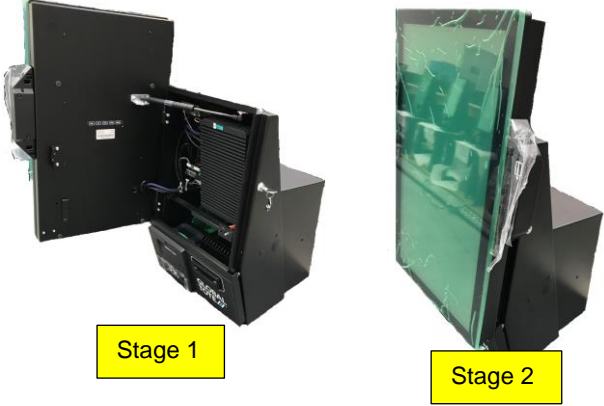
STEP	IMAGE	DESCRIPTION
8		<p>Unclip the 2x Cable Tie Twist Locks located on the inside of the Kiosk at the LH side as shown.</p>
9		<p>To proceed to the next Step, complete the following actions:</p> <p>Stage 1: Push in the Lower Peripheral Door and close the Lower Door.</p> <p>Stage 2: Close & lock the LCD Screen Door via the Lock at the Right-hand side of the Kiosk using the key provided.</p>
10		<p>Move from the front of the Kiosk to the rear.</p> <p>Remove & retain 4x Pan Head Screws fastening the SST Rear Cover to the Kiosk chassis using a #2 Phillips Head Screwdriver.</p> <p>Lift the SST Rear Cover from the Kiosk chassis & store for refitment at a later Step.</p>

STEP	IMAGE	DESCRIPTION
11		<p>Cut 6x Cable Ties retaining the Front Door Loom & Ethernet Cable to the RH side of the Kiosk.</p> <p>Discard Cable Tie waste.</p> <p>Note: The Yellow Peripheral Draw has been moved to the fully outboard position for image clarity.</p>
12		<p>1. Chase the TOF Loom back to the PCB at the front of the Kiosk. Disconnect from PCB.</p> <p>2. Chase the NFC Reader Loom back to the D-LINK 7 PORT HUB at the front of the Kiosk. Disconnect the USB plug.</p>
13		<p>Unlock and open the LCD Screen Door and Lower Door by unlocking the Lock at the Right-hand side of the Kiosk using the SOUTHCO KEY# T0001.</p>

STEP	IMAGE	DESCRIPTION
14		<p>Remove & retain 1x M4 Wizlock Nut and 1x Cable Clamp 9mm from stud #1 using a 7mm Socket Head Drive & Handle.</p>
15		<p>Remove & retain 2x M4 Wizlock Nuts from studs #2 & #3 using a 7mm Socket Head Drive & Handle.</p>
16		<p>The Lower Peripheral Door can then be removed from the Kiosk.</p>

STEP	IMAGE	DESCRIPTION
17		<p>The Printer Fascia is to be removed from the Lower Peripheral Door.</p>
18		<p>Turn over the Lower Peripheral Door onto a flat table.</p> <p>Remove 4x M3 x 8mm Screws from the Front Fascia using a #2 Phillips Head Screwdriver.</p>
19		<p>Remove & retain the Proximity Sensor connector from the Laser Ranging Proximity Sensor</p>

STEP	IMAGE	DESCRIPTION
20		<p>Remove the Laser Ranging Proximity Sensor from the Printer Fascia.</p> <p><i>NOTE: The Laser Ranging Proximity Sensor may be glued into the Printer Fascia. Clearing the glue from the 4x Spigots is required prior to removal of the Laser Ranging Proximity Sensor.</i></p> <p><i>Take care during the removal process to ensure that the 4x Spigots are not damaged.</i></p>
21		<p>Install the SST SPARE PROXIMITY KIT onto the 4x Spigots.</p> <p>Re-install the Proximity Sensor connector to the SST SPARE PROXIMITY KIT.</p>
22		<p>Reinstall the Front Fascia onto the Lower Peripheral Door and fasten 4x M3 x 8mm Screws using #2 Phillips Head Screwdriver.</p>

STEP	IMAGE	DESCRIPTION
23		<p>To re-install the Lower Peripheral Door with SST SPARE PROXIMITY KIT, follow Steps 7 to 23 in reverse.</p>
24		<p>Stage 1: Push in green tray and close Lower Door.</p> <p>Stage 2: Close & lock the LCD Screen Door via the Lock at the Right-hand side of the Kiosk using the key provided.</p>