

NEO PRODUCTS - WORK INSTRUCTION

BETMAKERS SST SERVICE



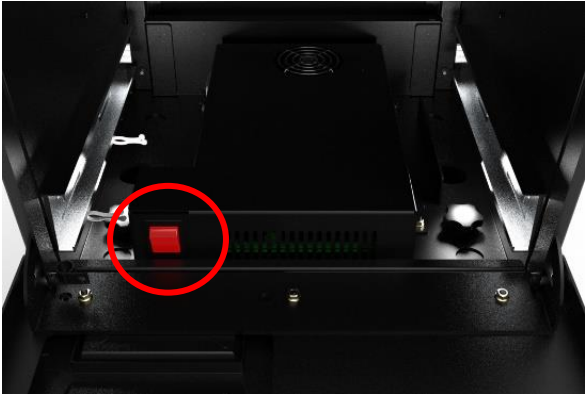

NUMBER	ISSUE	CHANGE	DATE	ISSUED BY
15301-SERV008	A	Initial Production Release	03-11-22	LD
DESCRIPTION	B	Filename updated (ECN 6477)	17-10-23	LD
SST SPARE NFC READER	C			
	D			
	E			


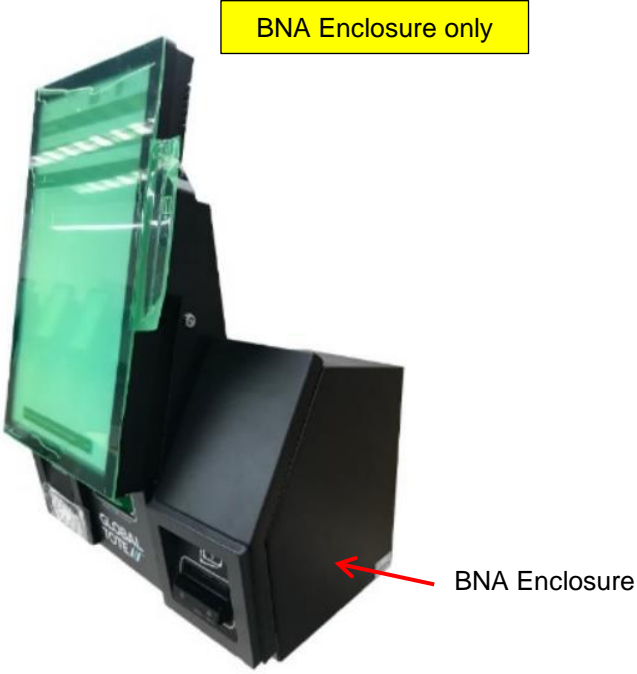
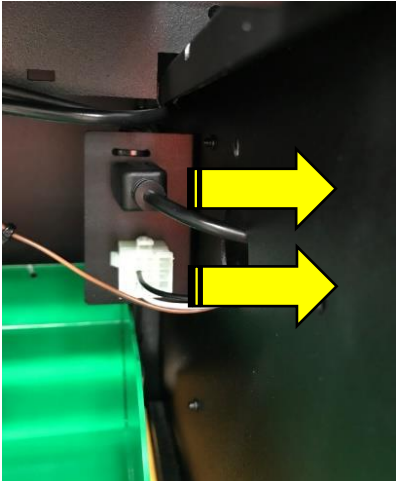
**ITEMS NEEDED TO PERFORM THIS TASK
HAND TOOLS ONLY**

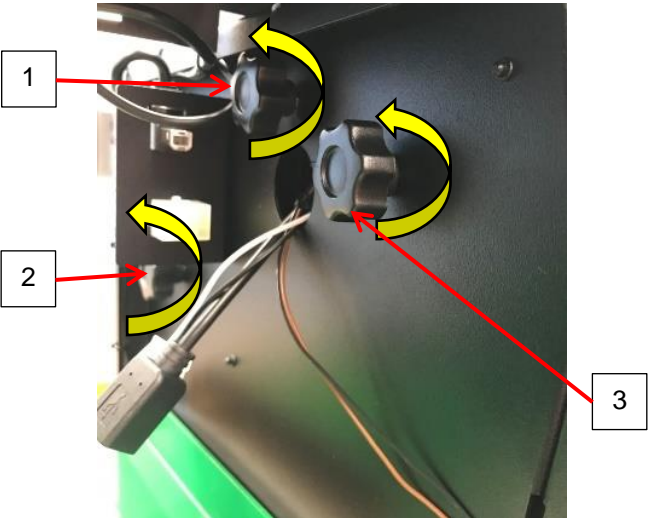

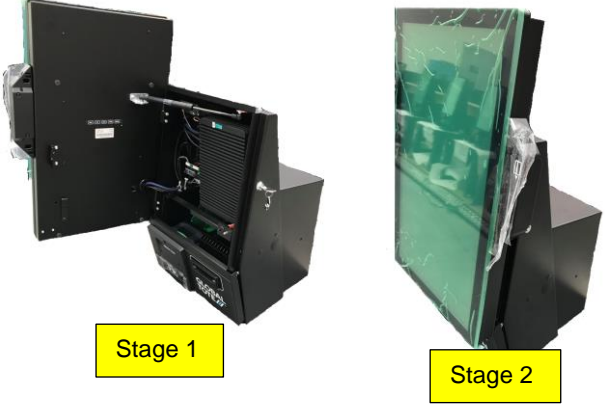
STANLEY KNIFE
SOUTHCO KEY# T0001
KEY# 002 (BNA ENCLOSURE) – IF APPLICABLE
SIDE CUTTER PLIERS
7mm SOCKET HEAD DRIVE & HANDLE
#2 PHILLIPS HEAD SCREWDRIVER



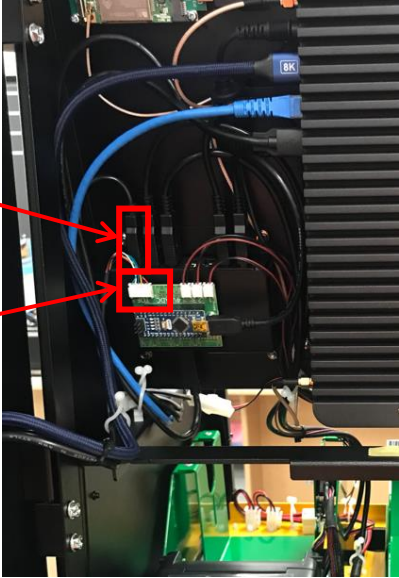



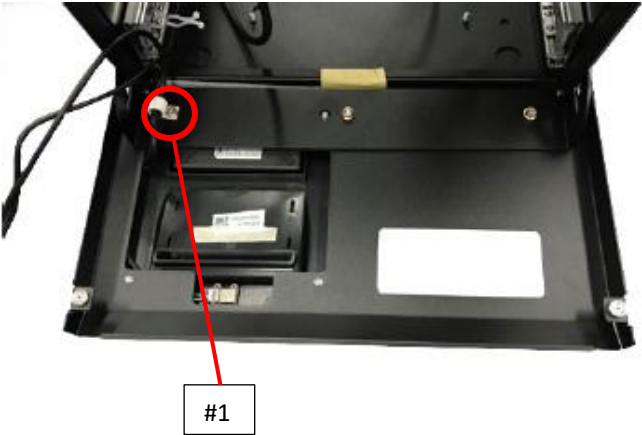
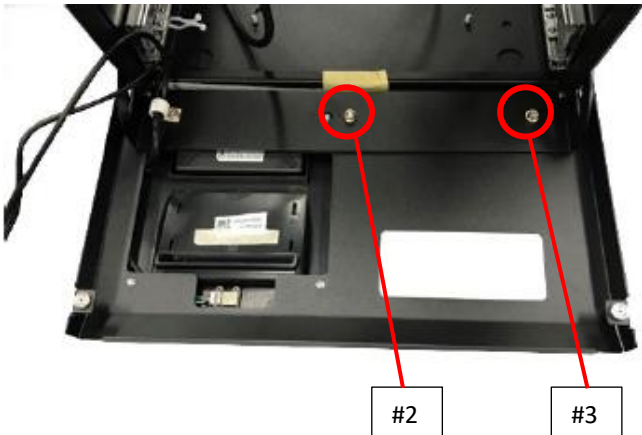
ITEM #	STOCK CODE	DESCRIPTION	QTY
1	EDMIS-000175	NFC CONTACTLESS SMART CARD READER	1.00
2	MHCBT-025075	CABLE TIE ACT100BK	6.00
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			

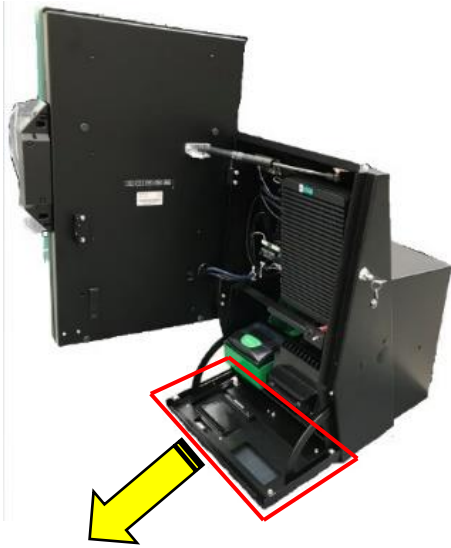

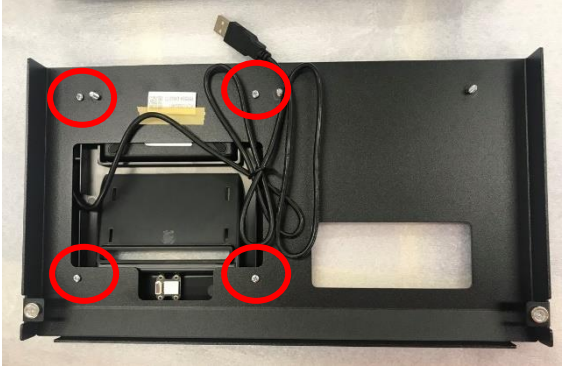
STEP	IMAGE	DESCRIPTION
1		<p>Remove SST SPARE NFC READER from packaging.</p>
2		<p>Unlock and open the LCD Screen Door and Lower Door by unlocking the Lock at the Right-hand side of the Kiosk using the SOUTHCO KEY# T0001.</p> <p>This provides access to the Kiosk internals.</p>
3		<p>Prior to starting the installation of the SST SPARE NFC READER removal, switch the plug from I → O on the Power Tray located on the inside of the Kiosk.</p> <p>NOTE: Components removed for clarity.</p>
4		<p>To access the 2x Cable Tie Twist Locks retaining the Lower Peripheral Door Looms (TOF & NFC), pull out the green tray towards the operator.</p>




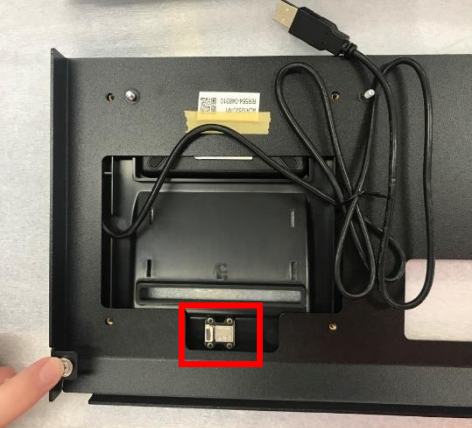
STEP	IMAGE	DESCRIPTION
5		<p>Unclip the 2x Cable Tie Twist Locks located on the inside of the Kiosk at the LH side as shown.</p>
6		<p>FOR KIOSKS WITH BNA ENCLOSURE – FOLLOW THE STEPS BELOW FOR THE REMOVAL OF THE SST SPARE NFC READER PRIOR TO THE REMOVAL OF THE SST REAR COVER.</p> <p>IF THE KIOSK IS INSTALLED WITH A WALL MOUNT OR PEDESTAL, SKIP STEP 7 to 9 & PROCEED TO STEP 11.</p>
7		<p>Unplug the USB and Power Looms from the BNA Harness Bracket located in the inner RH Side of Kiosk.</p>


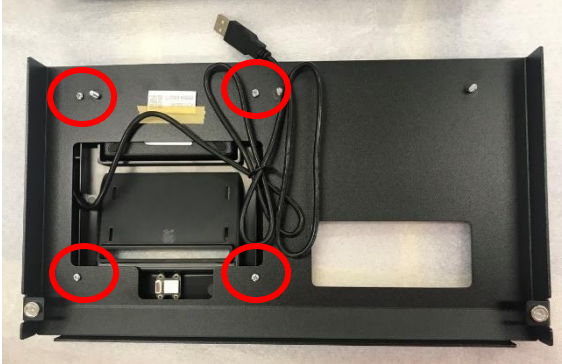

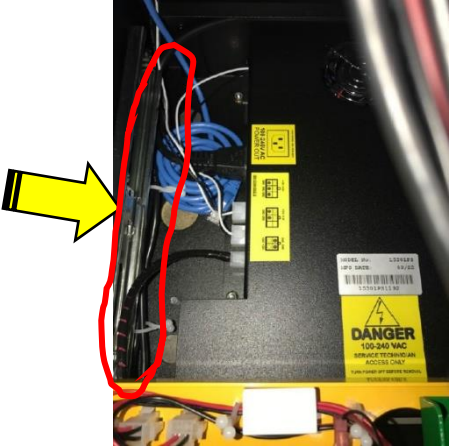
STEP	IMAGE	DESCRIPTION
8		<p>Remove & retain 3x M6 Black Clamping Knobs from the BNA Enclosure Studs.</p> <p>Align the 3x Pins into the holes of the Kiosk.</p>
9		<p>Slide the BNA Enclosure away from the Kiosk & guide the Looms Plugs through the hole of the Kiosk as shown.</p> <p>Store the BNA Enclosure for re-fitment in later Step.</p>
10		<p>To proceed to the next Step, complete the following actions:</p> <p>Stage 1: Push in the Lower Peripheral Door and close the Lower Door.</p> <p>Stage 2: Close & lock the LCD Screen Door via the Lock at the Right-hand side of the Kiosk using the key provided.</p>

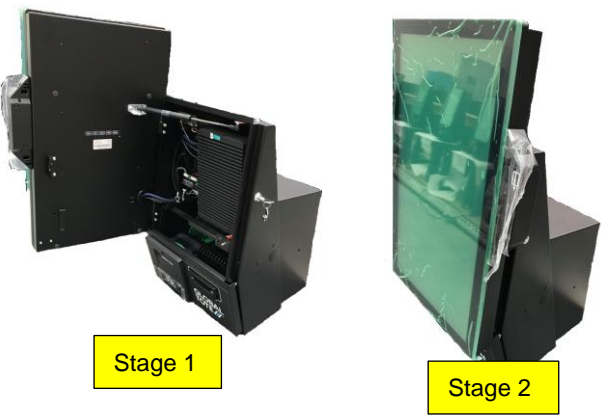
STEP	IMAGE	DESCRIPTION
11		<p>Move from the front of the Kiosk to the rear.</p> <p>Remove & retain 4x Pan Head Screws fastening the SST Rear Cover to the Kiosk chassis using a #2 Phillips Head Screwdriver.</p> <p>Lift the SST Rear Cover from the Kiosk chassis & store for refitment at a later Step.</p>
12		<p>Cut 6x Cable Ties retaining the Front Door Loom & Ethernet Cable (if applicable) to the RH side of the Kiosk.</p> <p>Discard Cable Tie waste.</p> <p>Note: The Yellow Peripheral Draw has been moved to the fully outboard position for image clarity.</p>
13		<ol style="list-style-type: none"> 1. Chase the TOF Loom back to the PCB at the front of the Kiosk. Disconnect from PCB. 2. Chase the NFC Reader Loom back to the D-LINK 7 PORT HUB at the front of the Kiosk. Disconnect the USB plug.

STEP	IMAGE	DESCRIPTION
14		<p>Unlock and open the LCD Screen Door and Lower Door by unlocking the Lock at the Right-hand side of the Kiosk using the SOUTHCO KEY# T0001.</p>
15		<p>Remove & retain 1x M4 Wizlock Nut and 1x Cable Clamp 9mm from stud #1 using a 7mm Socket Head Drive & Handle.</p>
16		<p>Remove & retain 2x M4 Wizlock Nuts from studs #2 & #3 using a 7mm Socket Head Drive & Handle.</p>

STEP	IMAGE	DESCRIPTION
17		<p>The Lower Peripheral Door can then be removed from the Kiosk.</p>
18		<p>The Printer Fascia is to be removed from the Lower Peripheral Door.</p>
19		<p>Turn over the Lower Peripheral Door onto a flat table.</p> <p>Remove 4x M3 x 8mm Screws from the Front Fascia using a #2 Phillips Head Screwdriver.</p>

STEP	IMAGE	DESCRIPTION
20	 <p>The image shows the back of a printer fascia. A black NFC contactless smart card reader is positioned in the lower section. A red rectangular box highlights the reader. A black cable is connected to the right side of the reader.</p>	<p>Remove the NFC Contactless Smart Card Reader from the Printer Fascia.</p>
21	 <p>The image shows the back of the printer fascia with the NFC reader removed. The top section is empty, and the bottom section shows the internal structure where the reader was located.</p>	<p>Ensure that the clipping feature on the Printer Fascia for the NFC Contactless Smart Card Reader is not damaged.</p>
22	 <p>The image shows the back of the printer fascia with the new SST SPARE NFC reader installed in the lower section. A red rectangular box highlights the reader. A black cable is connected to the right side of the reader.</p>	<p>Instal the SST SPARE NFC READER into Printer Fascia and feed the Loom into the nesting positions.</p>
23	 <p>The image shows the back of the printer fascia with the front door being attached. A red rectangular box highlights the bottom edge of the front door where it meets the fascia. A hand is visible on the left side, holding the door in place.</p>	<p>Place the Printer Fascia onto a flat table with the NFC Reader facing upwards.</p> <p>Place the Front Door over the Printer Fascia & feed the TOF & NFC Looms through the hole in the Front Door as shown.</p> <p>Align 4x holes & nuts.</p> <p>Check: Ensure that the TOF Sensor is visible to the installer.</p>

STEP	IMAGE	DESCRIPTION
20		<p>Select 4x M3 x 8mm Screws removed from earlier Step.</p>
21		<p>Install the Screws into the Front Fascia and fasten using #2 Phillips Head Screwdriver.</p>
22		<p>To re-install the Lower Peripheral Door with SST SPARE NFC READER, follow Steps 11 to 22 in reverse.</p>
23		<p>Note: Ensure that the Time of Flight (TOF) & NFC Looms are retained underneath the LH Draw Slide.</p>

STEP	IMAGE	DESCRIPTION
24		<p>Stage 1: Push in green tray and close Lower Door.</p> <p>Stage 2: Close & lock the LCD Screen Door via the Lock at the Right-hand side of the Kiosk using the key provided.</p>