

SST Cash Kiosk

Quick Start Guide

Part# 15302-GA001





CAUTION:

THE WORK INSTRUCTION FOR THE SET-UP OF THE SST CASH KIOSK REQUIRES THE AID OF MACHINERY.

WORK INSTRUCTION STEPS REQUIRING MACHINERY, WILL BE IDENTIFIED BY THE FOLLOWING SYMBOLS:


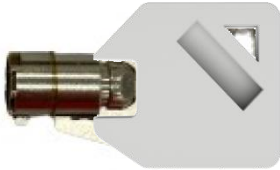



WHERE PRACTICABLE, CONSIDER SAFE MANUAL HANDLING PRACTICES TO AVOID INJURY.

CONDUCT A RISK ASSESSMENT PRIOR TO STARTING ACTIVITY.

IF THERE ARE ANY CONCERNS, CONTACT YOUR SUPERVISOR PRIOR TO STARTING ACTIVITY.




1.0 Keys required

	<p>Cash Box Base Front Door: <u>Key A</u> with Black Key Sleeve.</p>
	<p>SST Kiosk LCD Screen Door: <u>Key T0001</u> with white Key Sleeve.</p>
	<p>Puloon Cash Dispenser: <u>Key Dae Ro / 02</u></p>


2.0 Unpacking the Kiosk

	<p>Remove the strapping from the SST Cash Kiosk carton. Caution: The strapping is under tension and can flick when cut.</p> <p>Carefully lift the carton off the Pallet.</p>
	<p>Remove the documentation from the packaging and retain for future reference.</p> <p>The removal of the green protective film from the LCD Screen, plastic Swipe Cover covers, Base Plate & clear protective film from the NFC are to be completed at the end of the installation process to avoid damage.</p>
	<p>Open Cash Box Base Front Door using Key A with Black Key Sleeve.</p>



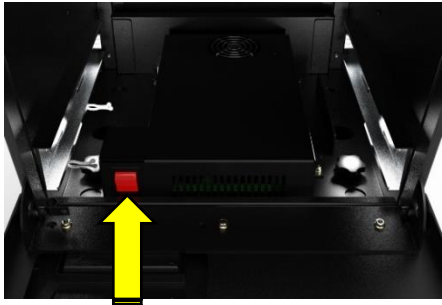
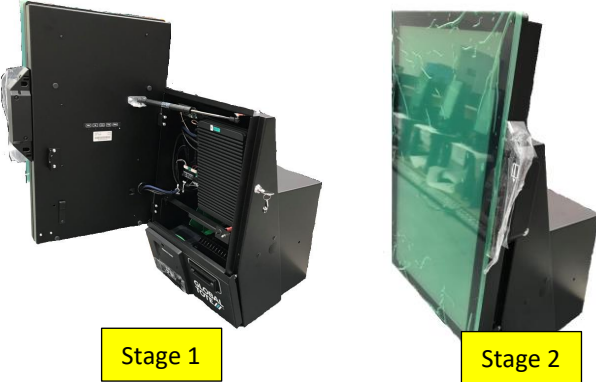
2.0 Unpacking the Kiosk (continued)

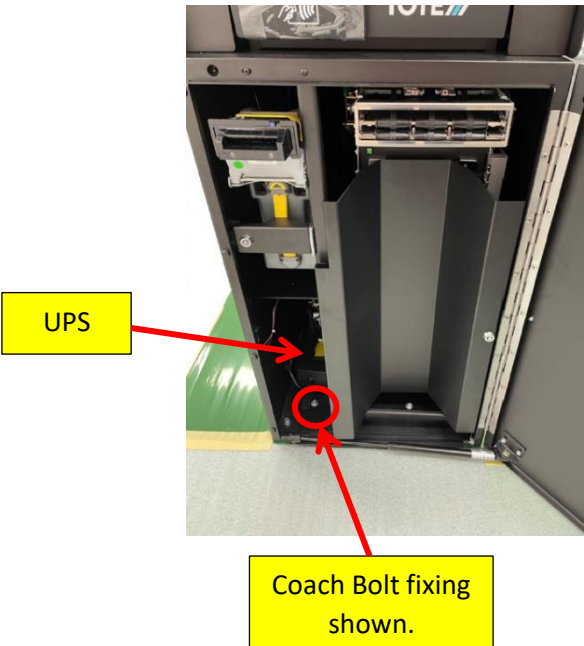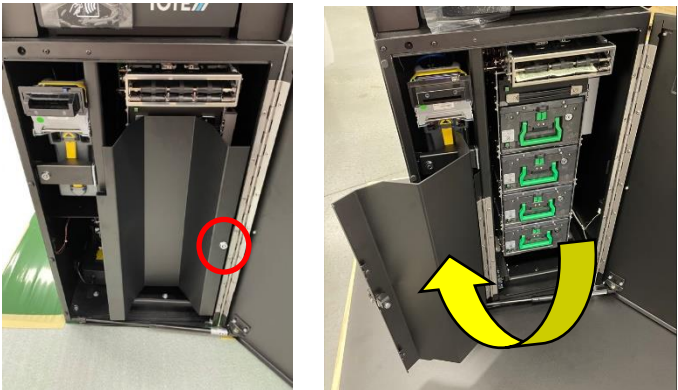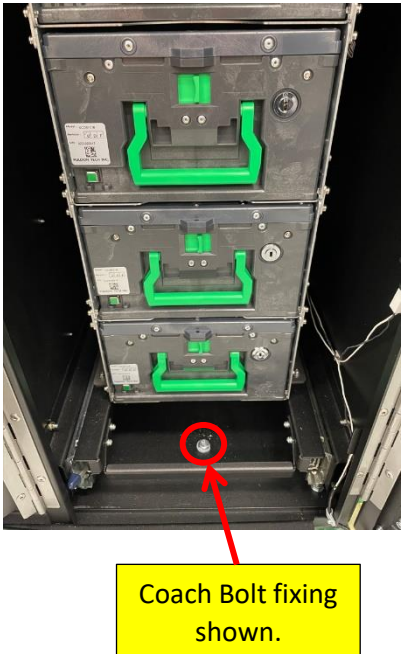	<p>Remove the Cash Kiosk Base from the Pallet.</p> <p>2x Coach Bolts are fastened through the front of the Kiosk retaining the Base Plate to the Pallet.</p> <p>The UPS may require repositioning to allow access to the Coach Bolt. If required, peel the UPS from the Velcro holding to the Base Plate.</p> <p>Remove 1x Coach Bolt from the LH Side of the Base Plate with a 13mm Open End Ring Spanner.</p> <p>Discard Bolt.</p> <p>Return the UPS back to its original position & press down to adhere to the Velcro.</p>
	<p>Step 2: Unlock and open the Dispenser Internal Lock Door by unlocking the Lock on the RH Side using the Key A provided.</p>
	<p>Remove 1x Coach Bolt from the RH Side of the Base Plate with a 13mm Open End Ring Spanner.</p> <p>Discard Bolt.</p> <p>Close the Dispenser Internal Lock Door & Cash Box Base Front Door using Key A with Black Key Sleeve.</p>



2.0 Unpacking the Kiosk (continued)

	<p><u>THE REMOVAL OF THE SST CASH KIOSK REQUIRES A FORKLIFT OR SIMILAR TO REMOVE IT FROM THE PALLET.</u> <u>DO NOT ATTEMPT TO REMOVE WITHOUT APPROPRIATE LIFTING EQUIPMENT.</u> <u>SST CASH KIOSK BASE WEIGHT = 280Kg / 617lbs</u></p> <p>Remove the SST Cash Kiosk from Pallet and locate to the designated area.</p> <p>Remove green protective film from Base Plate.</p>
---	--



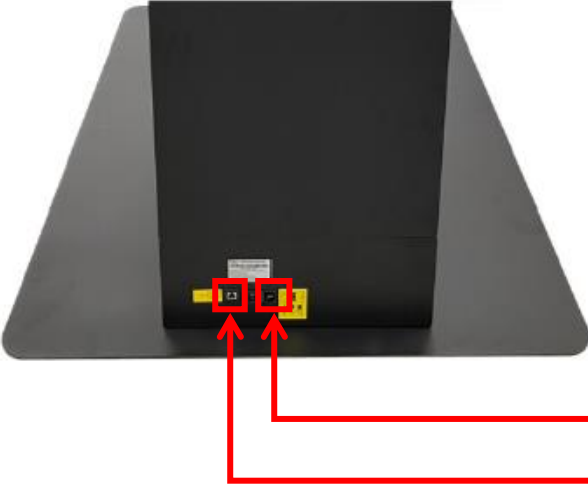


3.0 Power up the Kiosk

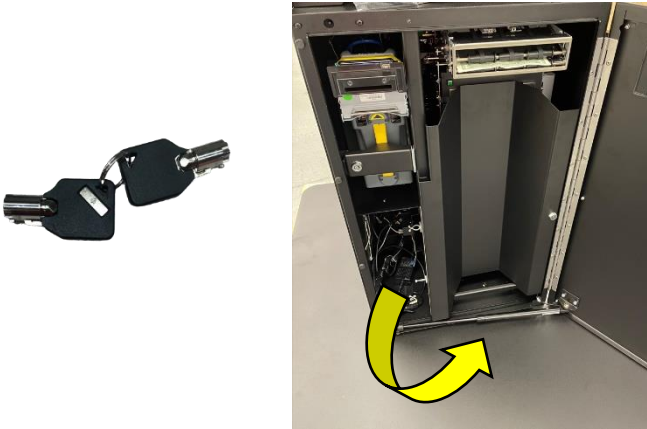	<p>Power, Network ports are accessed from the LH side of the unit.</p> <p>The Kiosk is intended to be used in a location having equipotential bonding (such as a restricted access area) and is connected to power using an earthed IEC cable supplied.</p> <p>Verification of the protective earthing connection of the socket-outlet to be performed by a skilled person.</p> <p>Plug the Power lead into power point.</p> <p>Plug in the Network cable into position shown.</p>
	<p>Unlock and open the LCD Screen Door and Lower Door by unlocking the Lock at the Right-hand side of the Kiosk using Key T0001 with White Key Sleeve provided.</p> <p>This provides access to the Kiosk power switch.</p>
	<p>Switch unit from O → I (note: components removed for clarity).</p>
	<p>Stage 1: Push in green tray and close Lower Door.</p> <p>Stage 2: Close & lock the LCD Screen Door via the Lock at the Right-hand side of the Kiosk using Key T0001 with White Key Sleeve provided.</p>


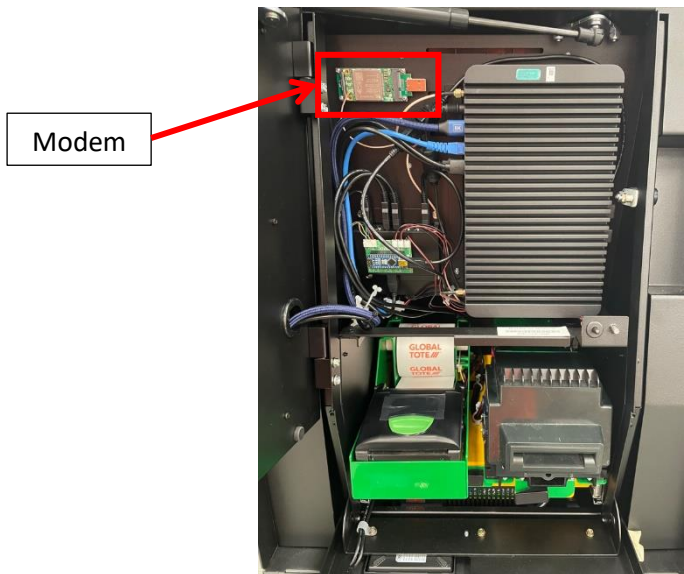
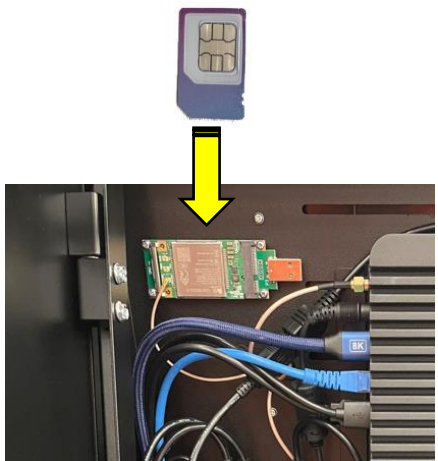
4.0 Power up the Kiosk (continued)

	<p>Open Cash Box Base Front Door using Key A with Black Key Sleeve to access the UPS located on the LH side of the Kiosk.</p>
	<p>Press & hold the UPS Power button until a “beep” is heard.</p> <p>A light on the UPS will continually illuminate indicating that the UPS is on.</p> <p>Close the Dispenser Internal Lock Door using Key A with Black Key Sleeve.</p>

4.0 Loading printer paper

	<p>Unlock and open the LCD Screen Door and Lower Door by unlocking the Lock at the Right-hand side of the Kiosk using Key T0001 with White Key Sleeve provided.</p> <p>This provides access to the Kiosk internals.</p>
	<p>To access the printer paper tray, pull out the green tray towards the operator.</p>
	<p>Remove the paper spindle from the Packaging Kit.</p> <p>Slide the paper roll onto the paper spindle and install into roller supports.</p> <p>Paper feeds into Printer from top of roll.</p> <p>Ensure paper roll coated surface is fed into the printer face up.</p>
<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>Stage 1</p> </div> <div style="text-align: center;">  <p>Stage 2</p> </div> </div>	<p>Stage 1: Push in green tray and close Lower Door.</p> <p>Stage 2: Close & lock the LCD Screen Door via the Lock at the Right-hand side of the Kiosk using Key T0001 with White Key Sleeve provided.</p>


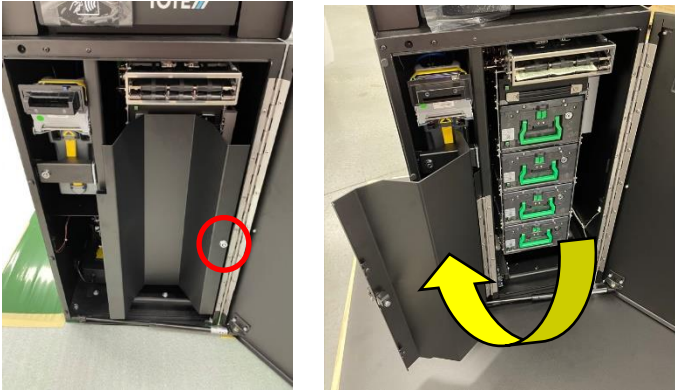
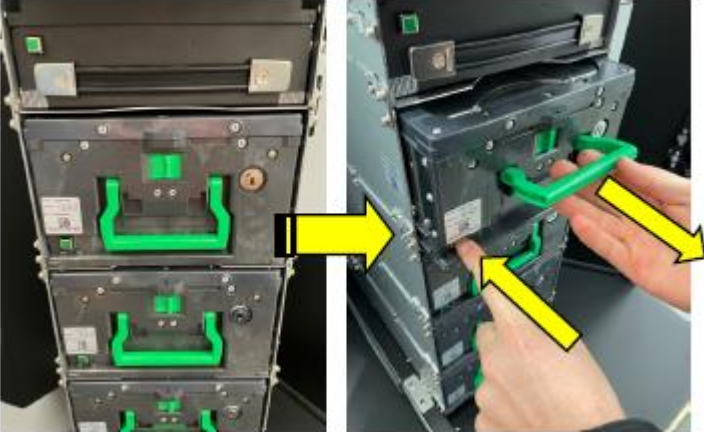
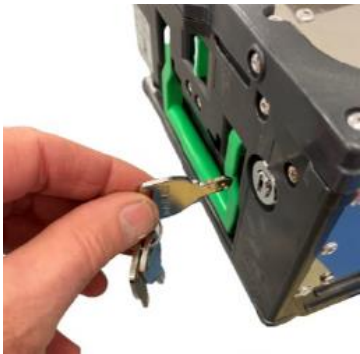
5.0 Location of Modem and inserting SIM Card

	<p>To access the Modem, unlock and open the LCD Screen Door by unlocking the Lock at the Right-hand side of the Kiosk using Key T0001 with White Key Sleeve provided.</p>
	<p>The Modem is in the Main Frame against the rear wall.</p>
	<p>Insert SIM Card into Modem from the rear in the orientation shown.</p>

6.0 Monitor adjustment

	<p>To access the LCD Screen Monitor adjustment buttons, unlock and open the LCD Screen Door by unlocking the Lock at the Right-hand side of the Kiosk using Key T0001 with White Key Sleeve provided.</p>
	<p>The LCD Screen Adjustment buttons are located behind the rear cover.</p> <p>Select "Menu" button.</p>
	<p>Navigate settings following the Menu.</p> <p>The Monitor Adjustment Menu will disappear after approx. 10 seconds.</p> <p>Reselect "Menu: button to continue process.</p>

 
7.0 Access to the Puloon Dispenser

	<p>The Puloon Cash Dispenser is in RH side of the Cabinet Main Frame.</p> <p>Unlock and open the Door Fascia by unlocking the Lock on the LH Side using Key A with Black Key Sleeve provided.</p>
	<p>Unlock and open the Dispenser Internal Lock Door by unlocking the Lock on the RH Side using the Key A with Black Key Sleeve provided.</p>
	<p>The Puloon Cash Dispenser has 4x Cash Trays. They can be removed individually by pressing the green button & pulling the handle.</p>
	<p>Unlock and open the Puloon Cash Dispenser Cash Tray by unlocking the Lock using the Key Dae Ro / 02 provided.</p>

8.0 Instructions for Puloon Dispenser test software

Step 1:

Find and open UCDM V1.74 application




Step 2:

Using device manager determine the COM port the cash dispenser is connected to (1-10).

Step 3:

Select the communication port number and click the OPEN button to connect device. The OPEN button will be turned to CLOSE when it is connected normally with the display on the left side (like the red dotted box)


Without communication success, no function can work, and the red dotted box displays the communication status.

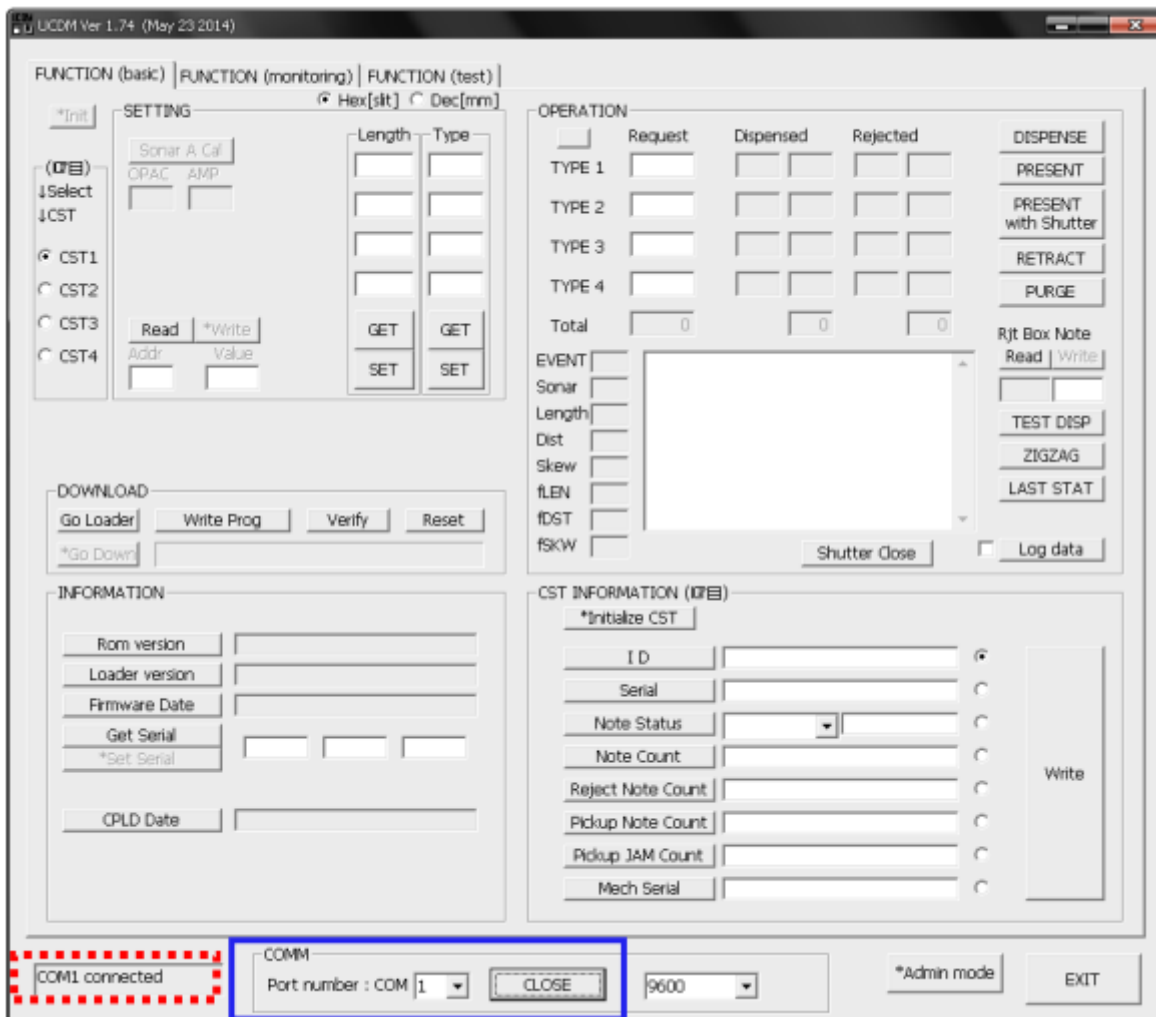

8.0 Instructions for Puloon Dispenser test software (continued)

Step 4:

Dispensing notes (Operation).

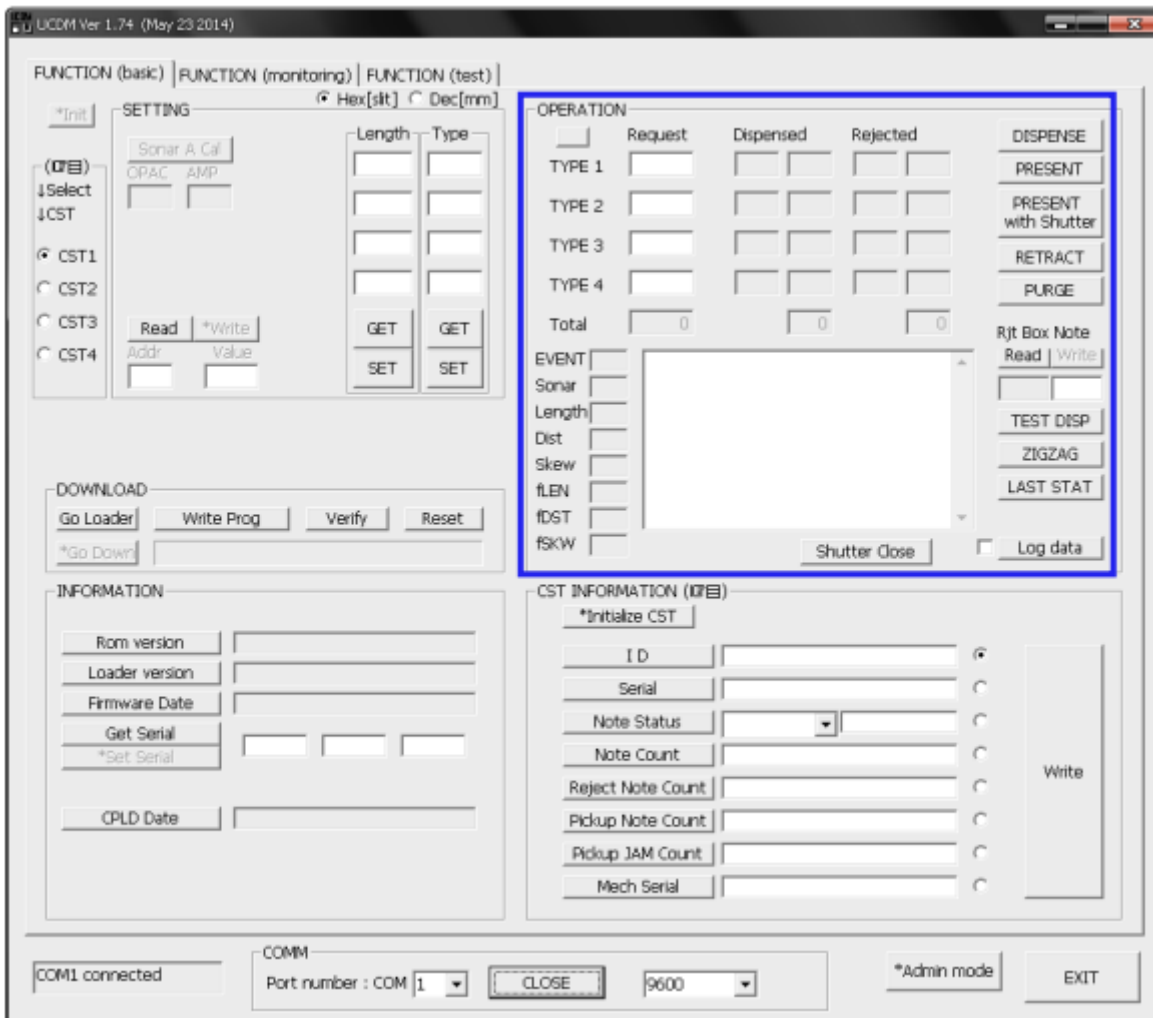

Input the requested amount for dispensing into the blanks on Request Type. Then **DISPENSE** is pressed and the requested quantity of note will be dispensed.

If an error is occurred, UCDM will stop, and the error codes will be displayed on the pop-up window.

The only commands that are necessary to know are:

Present- The dispensed notes by DISPENSE are stacked in the specific area before delivering to the customer. Then PRESENT enables to present the dispensed and stacked notes to the customer.

Retract- In case the customer does not take the presented banknotes within the designated time, RETRACT could be used for returning the notes back to Reject Cassette. Also, even after dispensing banknotes (before presenting), it enables all the stacked notes to be rejected to the Reject Cassette.

Purge- This command moves all notes on the path to the Reject Cassette and initializes UCDM with clearing all the errors.