

TSST Standalone Customer Screen kit

Quick Start Guide

Part# 15201-SKIT009




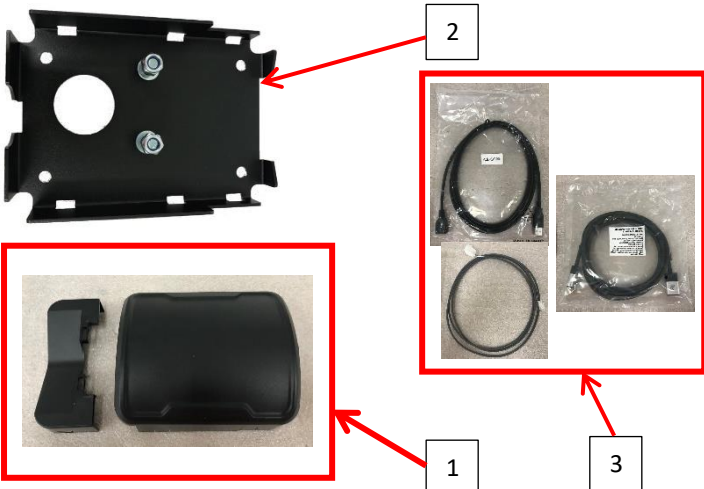
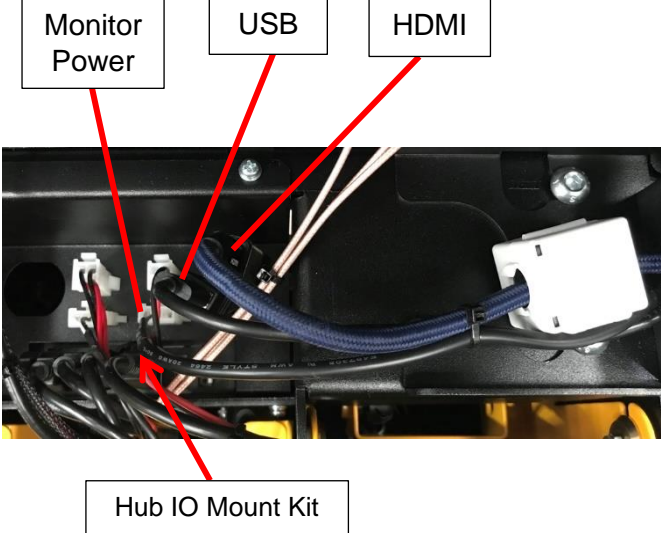
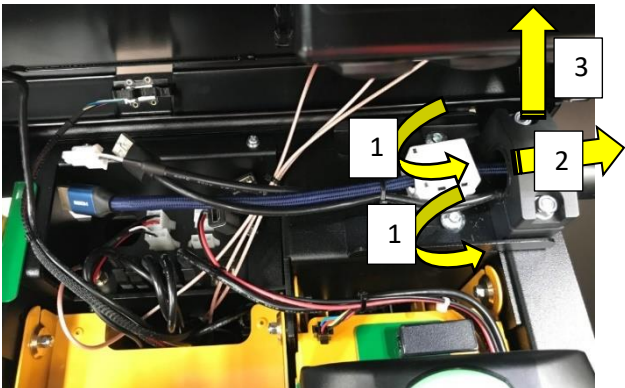
Base Cover – Upper & Lower section with Rubber Grommet







Screen Mount Bracket

Note: Looms not shown



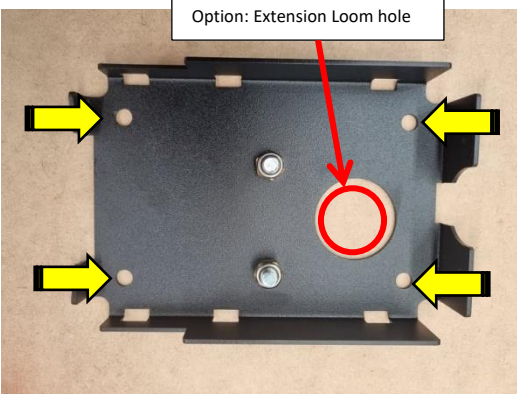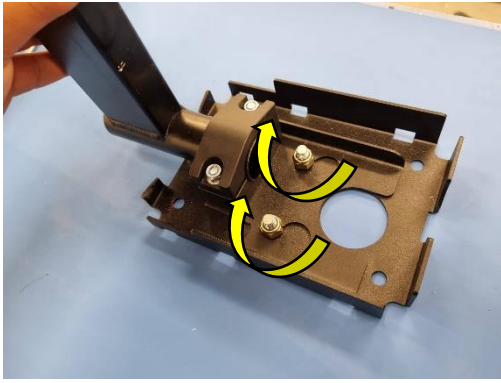

1.0 Installing standalone Customer Screen

	<p>Remove the SST Standalone Customer Screen kit from packaging.</p> <p>Remove the documentation and retain for future reference.</p>
	<p>Select following parts:</p> <p>Item #1: Base Cover – Upper & Lower section with Rubber Grommet.</p> <p>Item #2: Screen Mount Bracket.</p> <p>Item #3: HDMI, USB & Power Extension Loom packages.</p>
	<p>Open the TSST Top Lid to access the Customer Screen Mount Assembly.</p> <p>Unplug the HDMI, USB, and Monitor Power from the Hub IO Mount Kit.</p>
	<p>Complete the following Steps in order:</p> <p>Step 1: Undo the 2x M8 Button Head screws on the Customer Screen Mount Bracket using a 5mm Allen Key.</p> <p>Step 2: Slide the LCD Screen Mount towards the RH Side of the TSST Main Chassis from the slotted holes and remove together with Looms.</p> <p>Step 3: Lift the LCD Screen Mount out from the TSST Main Chassis.</p>

1.0 Standalone mounting kit for Customer Screen (continued)

	<p>Mount the Screen Mount Bracket to the desired location on a Benchtop or Wall.</p> <p>The installer will need to pre-drill the M8 holes clearance holes in the desired location. An optional larger hole is required if the Extension Loom is to pass through the mounting surface.</p> <p>Please note: The installer will need to assess the mounting surface and supply suitable M8 bolts for that application.</p>
	<p>Locate the LCD Screen Mount onto the new Screen Mount Bracket via the M8 studs and fasten using a 13mm Socket wrench.</p>
	<p>Connect the Customer Screen HDMI, USB, and Monitor Power Plugs to the Extension Looms.</p> <p>Ensure the Extension Loom plugs “click” into each connection.</p> <p>Route cable heads within the bracket footprint as shown.</p>
	<p>If running the Extension Loom through the side opening on the base cover:</p> <p>Feed the Extension Looms through Base Cover – Upper section as shown.</p>

1.0 Standalone mounting kit for Customer Screen (continued)

	<p>Feed the Extension Loom plugs through the Rubber Grommet.</p> <p>Note: The HDMI, USB, and Monitor Power connectors are to be fed individually through the Rubber Grommet hole due to connector size.</p>
	<p>Push the Rubber Grommet into the Base Cover – Upper section.</p> <p>Ensure the Rubber Grommet “clips” into position.</p> <p>Pull the Extension Loom through Base Cover – Upper section.</p>
	<p>Clip the Base Cover – Lower section underneath the Stand Arm Support.</p> <p>Ensure the 2x plastic clips “snap” into connection.</p>
	<p>Present the Base Cover – Upper section to Screen Mount Bracket and align clips on both sides.</p> <p>Clip into place then lower other side of housing and clip into bracket</p>
	<p>Run the Extension Loom back to the Kiosk.</p>