NEO PRODUCTS - WORK INSTRUCTION				
BETMAKERS TSST SERVICE				
NUMBER	ISSUE	CHANGE	DATE	ISSUED BY
15201-SERV004	А	Initial Production Release	29-09-22	LD
DESCRIPTION	В	Filename updated (ECN 6477)	13-10-23	LD
TSST SPARE TOP COVER	С			
DECAL W BNA	D			
	Е			


ITEMS NEEDED TO PERFORM THIS TASK


ITEMS NEEDED TO PERFORM THIS TASK		
DISHWASHING LIQUID		
WATER		
500MI SPRAY BOTTLE		
LINT FREE CLOTH		
SOFT FELT SQUIDGY		
METHYLATED SPIRITS		




ITEM#	STOCK CODE	DESCRIPTION	QTY
1	15201-DC001AA	TSST TOP COVER DECAL - GLOBAL TOTE W BNA	1.00
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			

STEP	IMAGE	DESCRIPTION
1	III ZLOLTYROTO	Remove & discard damaged Decal from Top Lid of TSST Kiosk.
2		Prior to starting the DECAL W BNA removal, switch the plug from I → O on the underside of the Kiosk.

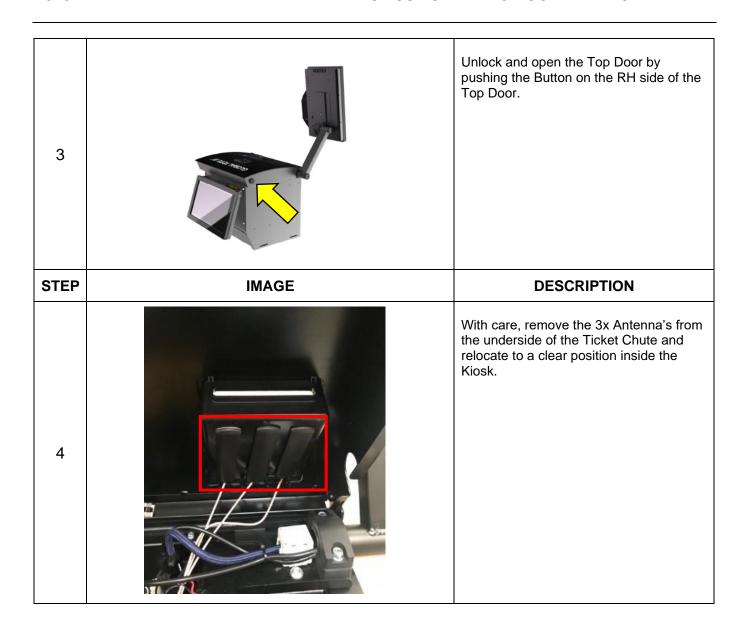

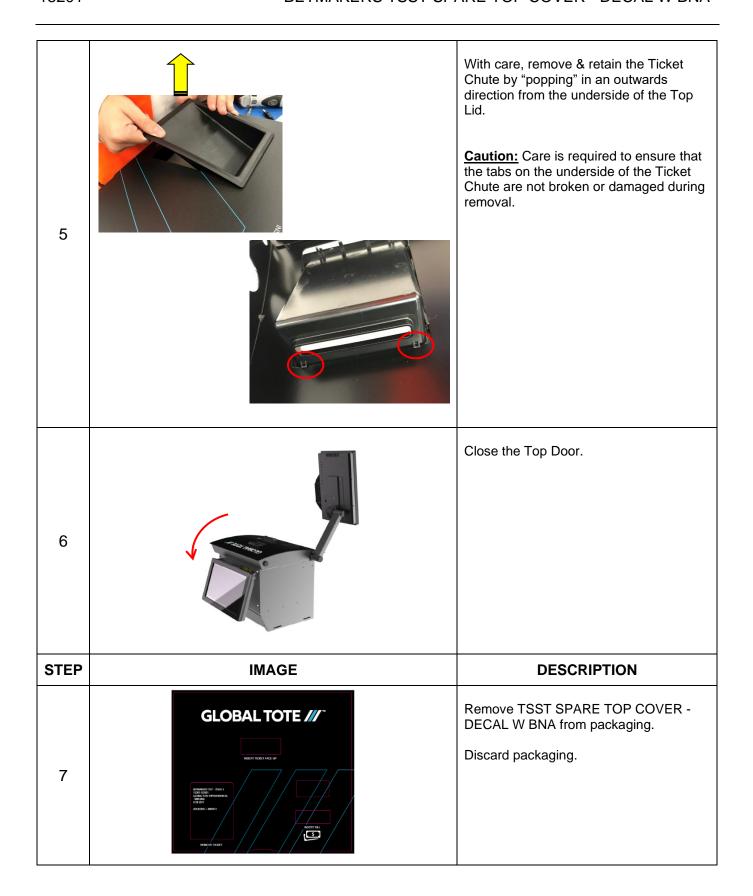


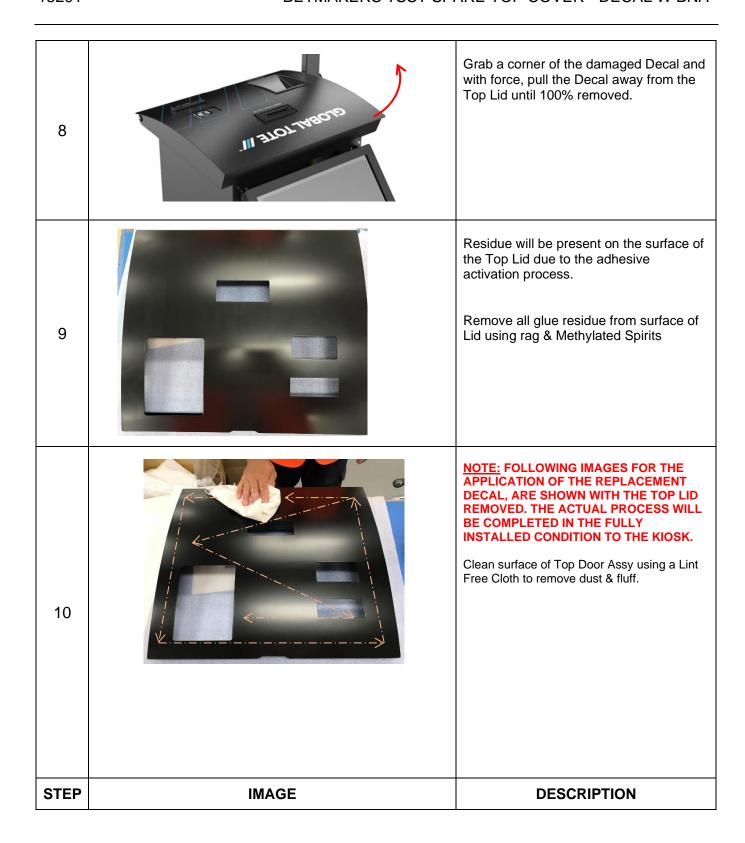



Select 1x TSST TOP COVER DECAL - GLOBAL TOTE W BNA and place onto flat table.

Remove cut-out panels and discard waste.

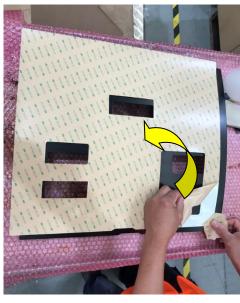

Turn over Decal to show the backing paper.

Prepare to apply Decal by removing backing paper.

Note: The Decal adhesive is extremely tacky. Use a small section of waste backing paper to hold the corner of the Decal down while removing backing paper. This will eliminate touching the adhesive with bare hands and potentially damaging adhesive.

Discard waste.

12

STEP	IMAGE	DESCRIPTION
13		Note: Mix approx. 400Ml Water & 2x drops of dishwashing liquid into a 500Ml Spray Bottle. Ensure that the dishwashing liquid mixture is mixed in with the water (bubbles to be present). Apply the water mixture onto the Decal adhesive in all areas.
14		Apply the water mixture onto the Top Door Assy in all areas.
15	GLOBALTOTEM	Once both surfaces are covered with water, apply the Decal onto the Top Door Assy.

STEP	IMAGE	DESCRIPTION
16	GLOBAL TOTE ///	Gently position the Decal onto the Top Door Assy and "float" into approximate alignment position. Note: Avoid applying pressure to the Decal during this process as this will activate the adhesion prior to final alignment.
17		Start Decal application. Ensure both Decal corners align with the Top Door Assy. If adjustment is required, remove Decal and reposition.

18




Once Decal is located correctly, squeeze the water trapped between the Decal & Top Door Assy using a Soft Felt Squidgy.

Use an across stroke method to squeeze the water out. If air bubble is present, change the squeeze direction to remove water. Note: This may be achieved using an up & down method to remove all water removal.

STEP IMAGE DESCRIPTION Clean surface of the Decal to remove residue water from the application process using clean Lint Free Cloth. 19

20	GLOBAL TOTE ///	Complete final inspection for air bubbles prior to next Step. If air bubbles are present, re-do Steps 17 & 18.
21		Select Ticket Chute removed from earlier Step.
STEP	IMAGE	DESCRIPTION

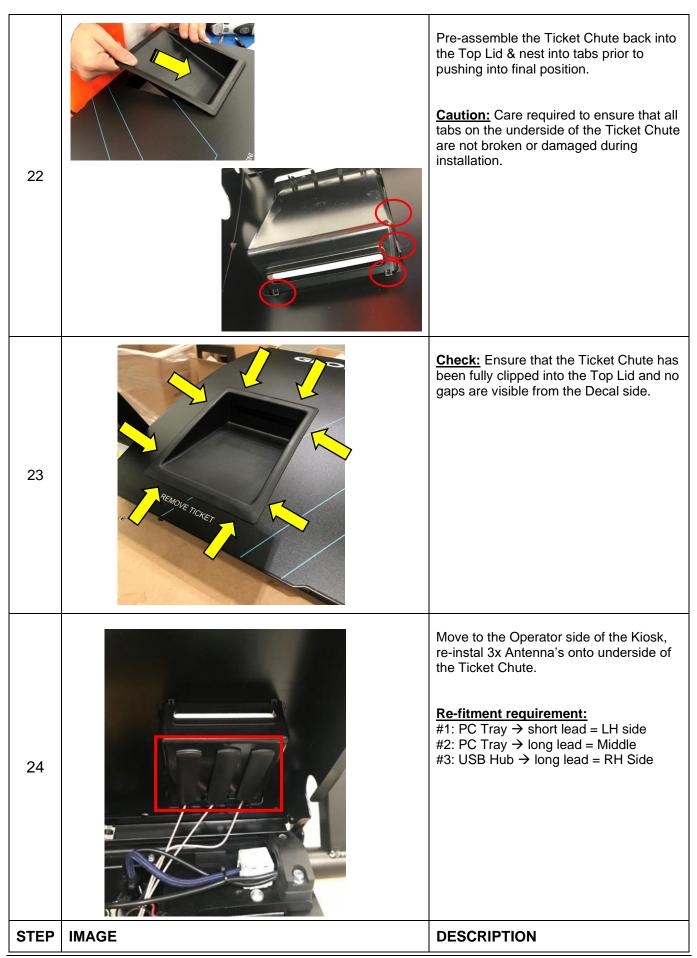

15201-ML011_15201-SERV004_TSST TOP COVER DECAL - GLOBAL TOTE W BNA_ECN6477_RevB Page 11 of 12

