

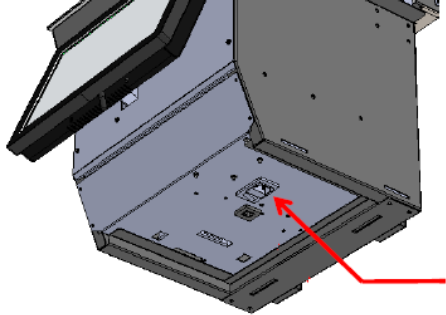


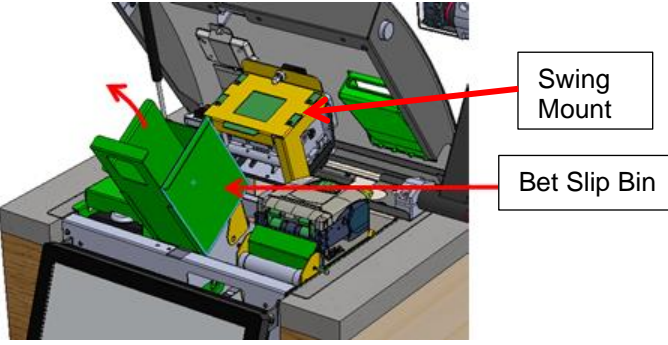
NEO PRODUCTS - WORK INSTRUCTION				
BETMAKERS TSST				
NUMBER	ISSUE	CHANGE	DATE	ISSUED BY
15201-SERV011	A	Initial Production Release	03-11-22	LD
DESCRIPTION	B	Filename updated (ECN 6477)	13-10-23	LD
TSST SPARE MODEM	C			
	D			
	E			

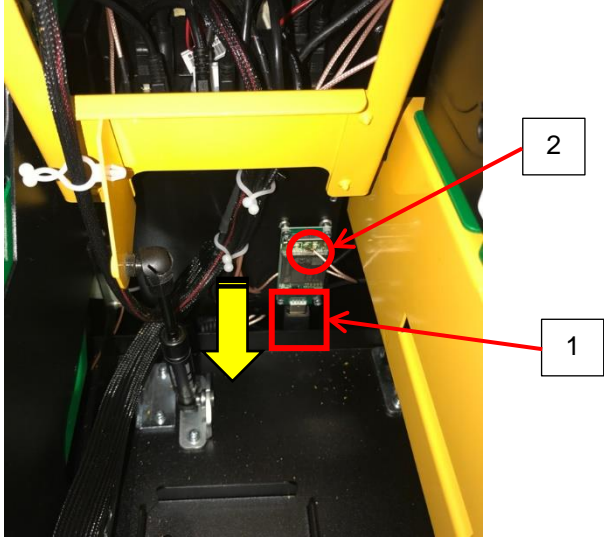
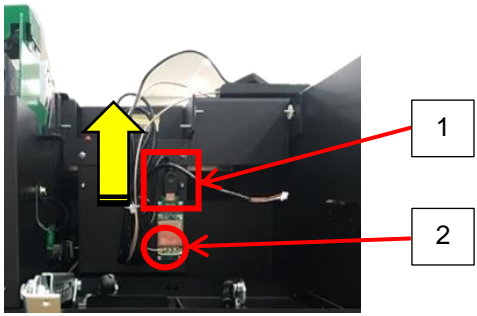

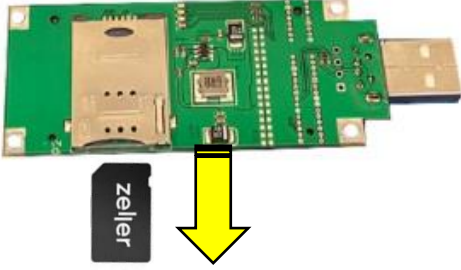
ITEMS NEEDED TO PERFORM THIS TASK


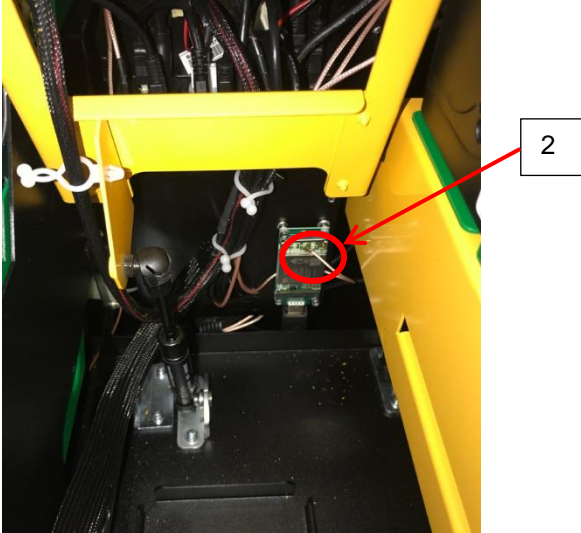
#1 PHILLIPS HEAD SCREWDRIVER

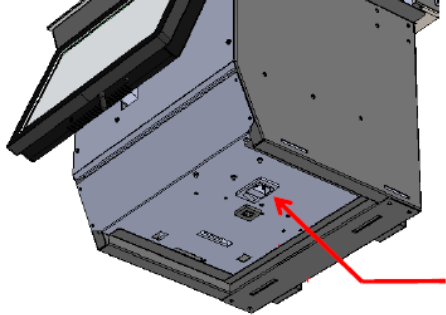


ITEM #	STOCK CODE	DESCRIPTION	QTY
1	EDMIS-000179	PCIE CARD W CARRIER BOARD	1.00
2			
3			
4			
5			
6			
7			
8			
9			

STEP	IMAGE	DESCRIPTION
1		<p>Prior to starting the TSST SPARE MODEM removal, switch the plug from I → O on the underside of the Kiosk.</p> <p>Remove the Power Lead & Network Cable.</p>
2		<p>Unlock and open the Top Door by pushing the Button on the RH side of the Top Door.</p>
3		<p>Rotate the Paper Roll Swing Bracket in an upwards direction.</p> <p>The Paper Roll can remain the Swing Bracket as this does not affect the PCIE CARD W CARRIER BOARD removal process.</p>
4		<p>The PCIE CARD W CARRIER BOARD is in the Main Frame against the rear wall, behind the Bet Slip Reader Swing Mount.</p> <p>Swing open the Bet Slip Reader Swing Mount.</p> <p>Remove the Bet Slip Bin.</p> <p>Note: Image for reference as the Paper Roll Swing Bracket has already been rotated in upwards condition in previous Step.</p>

STEP	IMAGE	DESCRIPTION
5	<p data-bbox="284 255 746 304">Black Modem Plug – bottom mount</p>  <p data-bbox="284 880 746 929">Black Modem Plug – top mount</p> 	<p data-bbox="997 282 1501 342">The PCIE CARD W CARRIER BOARD is located at rear of the Chassis.</p> <p data-bbox="997 376 1501 436">Remove the Black Modem Plug from the PCB (1) & store for refitment in later Step.</p> <p data-bbox="997 470 1501 651">Note: The Black Modem Plug can be orientated to mount to the PCIE CARD W CARRIER BOARD from the top or bottom of the Modem. If the Black Modem Plug is fed from the bottom, avoid the connector falling into the PC Tray.</p> <p data-bbox="997 685 1461 745">Carefully unclip & remove the Antenna connector (2).</p>
6		<p data-bbox="997 1294 1485 1384">Remove & retain the 4x Screws from the PCIE CARD W CARRIER BOARD using a #1 Phillips Head Screwdriver.</p>
7		<p data-bbox="997 1749 1461 1809">The SIM Card is located at the back of the Carrier Board.</p> <p data-bbox="997 1843 1501 1904">Turn over to remove & retain SIM Card → push in SIM Card to release.</p>

STEP	IMAGE	DESCRIPTION
8		<p>Remove PCIE CARD W CARRIER BOARD from packaging.</p> <p>Discard packaging.</p>
9		<p>Re-insert SIM Card back into the Carrier Board from the rear in the orientation shown.</p> <p>To re-install the replacement TSST SPARE MODEM, follow Steps 1 to 6 in reverse.</p>
10		<p><i>CAUTION: CARE IS REQUIRED DURING THE REATTACHMENT OF THE ANTENNA CLIP INTO THE CARRIER BOARD.</i></p> <p><i>INCORRECT ALIGNMENT MAY RESULT IN DAMAGE TO THE ANTENNA CLIP, WITH THE POTENTIAL FOR THE ANTENNA TO BE UNUSABLE.</i></p>
11		<p>Close the Top Door by pushing down waiting for a “click” to indicate locked position.</p>

STEP	IMAGE	DESCRIPTION
12		<p>Install the Power Lead & Network Cable to the underside of the Kiosk.</p> <p>Switch the plug from O → I.</p>