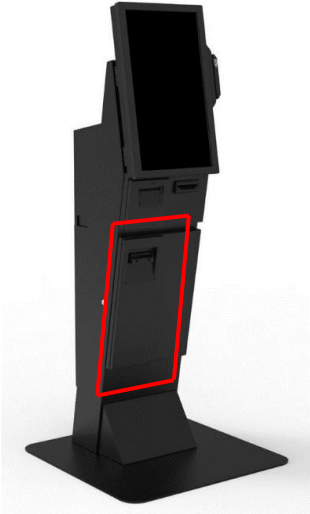

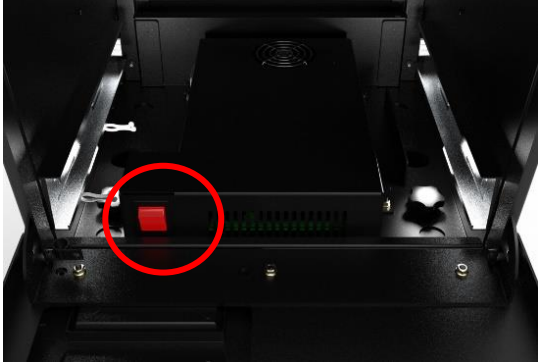
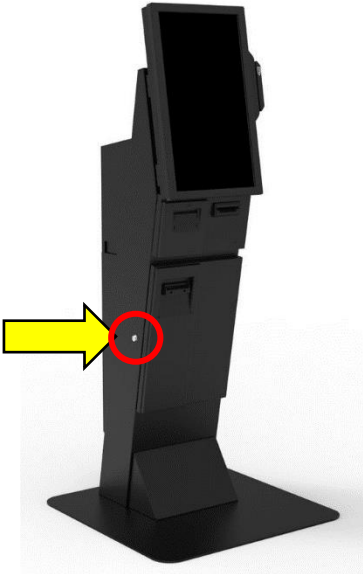












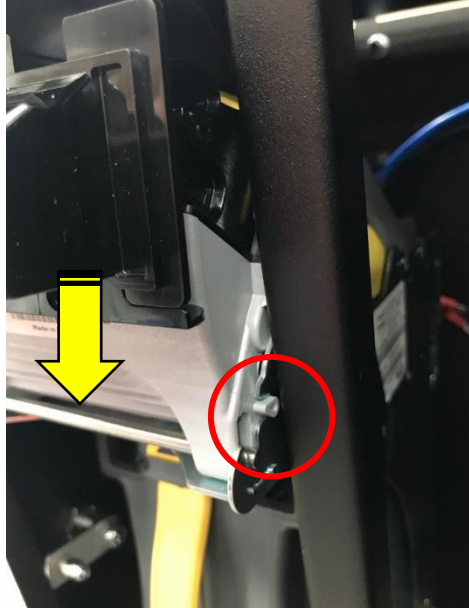
STEP	IMAGE	DESCRIPTION
1		<p>The SST SPARE MEI BV MODULE PEDESTAL is retained in the Pedestal, on the bottom of the Kiosk as highlighted.</p>
2		<p>Unlock and open the LCD Screen Door and Lower Door by unlocking the Lock at the Right-hand side of the Kiosk using the SOUTHCO KEY# T0001.</p> <p>This provides access to the Kiosk internals.</p>

<p>3</p>		<p>Prior to starting the SST SPARE MEI BV MODULE PEDESTAL removal, switch the plug from I → O on the Power Tray located on the inside of the Kiosk.</p> <p>NOTE: Components removed for clarity.</p>
STEP	IMAGE	DESCRIPTION
<p>4</p>		<p>Open the Front Door by unlocking the Lock on the Left-hand side of the Pedestal using KEY# 002.</p>

<p>5</p>		<p>The SCN ADVANCE NOTE ACCEPTOR USB is in the upper section of the BNA as shown.</p>
<p>6</p>		<p>To remove the SCN ADVANCE NOTE ACCEPTOR USB, push the horizontal pin in an upwards direction to dis-engage from the bracket.</p>
<p>STEP</p>	<p>IMAGE</p>	<p>DESCRIPTION</p>
<p>7</p>		<p>Pull the SCN ADVANCE NOTE ACCEPTOR USB in an outwards direction to completely remove from the Wall Mount.</p>

<p>8</p>		<p>Remove the SST SPARE MEI BV MODULE WALL MOUNT from packaging.</p>
<p>9</p>		<p>Place the SCN ADVANCE NOTE ACCEPTOR USB onto a table.</p>
<p>STEP</p>	<p>IMAGE</p>	<p>DESCRIPTION</p>
<p>10</p>		<p>Clip the S SC66 BEG BEZEL KIT MEI UNIVERSAL BULK24 Connector into the SCN ADVANCE NOTE ACCEPTOR USB as shown.</p>

<p>11</p>		<p>Push the S SC66 BEG BEZEL KIT MEI UNIVERSAL BULK24 onto the SCN ADVANCE NOTE ACCEPTOR USB.</p> <p>Ensure that a “clip” sound is heard when pushing the S SC66 BEG BEZEL KIT MEI UNIVERSAL BULK24 into place.</p>
<p>12</p>		<p>Select BNA BEAK COVER.</p>
<p>STEP</p>	<p>IMAGE</p>	<p>DESCRIPTION</p>
<p>13</p>		<p>Push the BNA BEAK COVER onto the SCN ADVANCE NOTE ACCEPTOR USB.</p> <p>Ensure that a “clip” sound is heard when pushing the BNA BEAK COVER into place.</p>

<p>14</p>		<p>To re-install the replacement SST SPARE MEI BV MODULE PEDESTAL, follow Steps 5 to 7 in reverse.</p> <p>Ensure that the guide tab aligns with the bracket groove highlighted.</p>
<p>15</p>		<p>When the SCN ADVANCE NOTE ACCEPTOR USB is pushed in, check that the pin is locked into position e.g.: downwards position.</p>
<p>STEP</p>	<p>IMAGE</p>	<p>DESCRIPTION</p>

16		To complete installation, follow Steps 1 to 4 in reverse.
----	---	---