

NEO PRODUCTS - WORK INSTRUCTION

BETMAKERS SST SERVICE



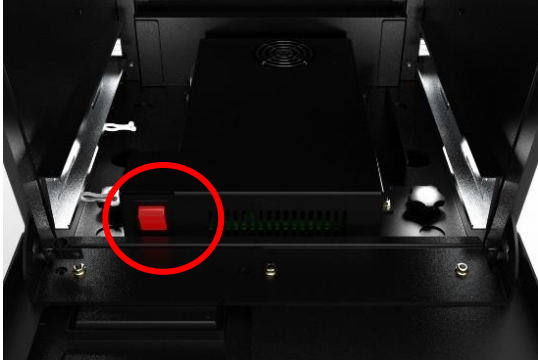
NUMBER	ISSUE	CHANGE	DATE	ISSUED BY
15301-SERV012	A	Initial Production Release	03-11-22	LD
DESCRIPTION	B	WI update: Was 15301-SERV010. Filename updated. Separated 15301-SERV010 into Desktop, Pedestal & Wall Mount (ECN 6477).	16-10-23	LD
SST SPARE MEI BV MODULE WALL MOUNT	C			
	D			
	E			

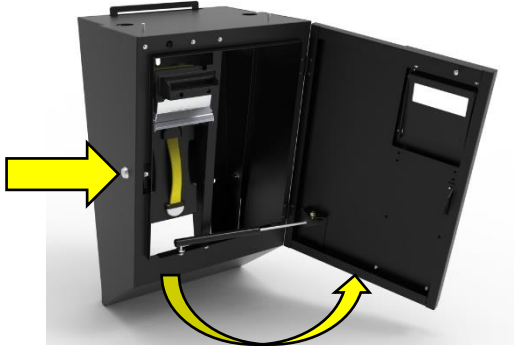

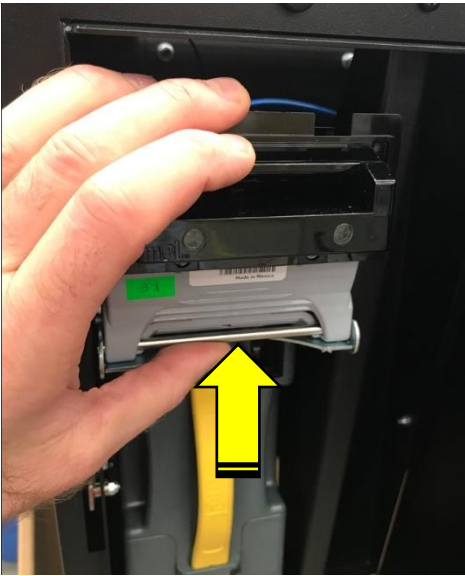
ITEMS NEEDED TO PERFORM THIS TASK HAND TOOLS ONLY




STANLEY KNIFE
KEY# 002 (BNA ENCLOSURE)
SOUTHCO KEY# T0001 (KIOSK)








ITEM #	STOCK CODE	DESCRIPTION	QTY
1	OENOT-000021	S SC66 BEG BEZEL KIT MEI UNIVERSAL BULK24	1.00
2	OENOT-000014	SCN ADVANCE NOTE ACCEPTOR USB	1.00
3	15201-FM003AB	BNA BEAK COVER	1.00
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			

STEP	IMAGE	DESCRIPTION
1		<p>The SST SPARE MEI BV MODULE WALL MOUNT is retained in the Wall Mount, on the bottom of the Kiosk as highlighted.</p>
2		<p>Unlock and open the LCD Screen Door and Lower Door by unlocking the Lock at the Right-hand side of the Kiosk using the SOUTHCO KEY# T0001.</p> <p>This provides access to the Kiosk internals.</p>
3		<p>Prior to starting the SST SPARE MEI BV MODULE WALL MOUNT removal, switch the plug from I → O on the Power Tray located on the inside of the Kiosk.</p> <p>NOTE: Components removed for clarity.</p>

<p>4</p>		<p>Open the Front Door by unlocking the Lock on the Left-hand side of the Wall Mount using KEY# 002.</p>
<p>STEP</p>	<p>IMAGE</p>	<p>DESCRIPTION</p>
<p>5</p>		<p>The SCN ADVANCE NOTE ACCEPTOR USB is in the upper section of the BNA as shown.</p>
<p>6</p>		<p>To remove the SCN ADVANCE NOTE ACCEPTOR USB, push the horizontal pin in an upwards direction to dis-engage from the bracket.</p>

<p>7</p>		<p>Pull the SCN ADVANCE NOTE ACCEPTOR USB in an outwards direction to completely remove from the Wall Mount.</p>
<p>STEP</p>	<p>IMAGE</p>	<p>DESCRIPTION</p>
<p>8</p>		<p>Remove the SST SPARE MEI BV MODULE WALL MOUNT from packaging.</p>
<p>9</p>		<p>Place the SCN ADVANCE NOTE ACCEPTOR USB onto a table.</p>

<p>10</p>		<p>Clip the S SC66 BEG BEZEL KIT MEI UNIVERSAL BULK24 Connector into the SCN ADVANCE NOTE ACCEPTOR USB as shown.</p>
<p>STEP</p>	<p>IMAGE</p>	<p>DESCRIPTION</p>
<p>11</p>		<p>Push the S SC66 BEG BEZEL KIT MEI UNIVERSAL BULK24 onto the SCN ADVANCE NOTE ACCEPTOR USB.</p> <p>Ensure that a “clip” sound is heard when pushing the S SC66 BEG BEZEL KIT MEI UNIVERSAL BULK24 into place.</p>

<p>12</p>		<p>Select BNA BEAK COVER.</p>
<p>13</p>		<p>Push the BNA BEAK COVER onto the SCN ADVANCE NOTE ACCEPTOR USB.</p> <p>Ensure that a “clip” sound is heard when pushing the BNA BEAK COVER into place.</p>
<p>STEP</p>	<p>IMAGE</p>	<p>DESCRIPTION</p>
<p>14</p>		<p>To re-install the replacement SST SPARE MEI BV MODULE WALL MOUNT, follow Steps 5 to 7 in reverse.</p> <p>Ensure that the guide tab aligns with the bracket groove highlighted.</p>

15		<p>When the SCN ADVANCE NOTE ACCEPTOR USB is pushed in, check that the pin is locked into position e.g.: downwards position.</p>
16		<p>To complete installation, follow Steps 1 to 4 in reverse.</p>